

VRPXEMRT4* & VRPXWCT* Wired Series User Guide

Wired Energy Management Thermostat



Table of Contents

Introduction	5
SKUs Referenced in this Manual	6
Equipment Nomenclature	7
Installation Considerations.....	8
Network Installation	9
Connecting Wireless Receiver	10
Configuring Online Connection Kit.....	11
Thermostat Installation	12
Mounting Thermostat to Wall.....	12
Optional Sensor Installation.....	13
Thermostat Details.....	14
Thermostat Buttons	14
Thermostat Screen.....	15
Understanding Display Screen Icons.....	15
Thermostat Configuration	16
Configuring Thermostat	16
Set MESH ID.....	17
Entering Room Number	18
Configuring Equipment Settings	19
Equipment Codes	20
Configuring Energy Saving Settings	21
Set Thermostat Clock.....	22
Testing Thermostat.....	23
Configuring & Managing Accessories.....	24
Activating a Sensor.....	24
Pairing a Sensor	25
Verifying Sensor Connection Status and Unlinking Sensors.....	26

Table of Contents

Configuring Functionality of Sensor	27
Completing Sensor Setup	29
Unit Specific Applications	30
Connecting Thermostat to VRP Unit	30
Replacing VRPXEMRT2 Thermostat with VRPXEMRT4* Thermostat	31
Configuring Equipment Settings for VRP	32
Installing FreshAire® PTAC (Cat 6 to FreshAire® PTAC)	33
Configuring Equipment Settings for FreshAire® PTAC	34
Application Notes	35
Custom Energy Savings Settings	36
Accessing Custom Energy Savings Settings	36
Using Thermostat Settings Screens	37
Scheduler	39
Door Lock Integration	42
Demand Response	46
01 – FAN CONTROL MODE	49
02 – 1 ST STAGE DIFFERENTIAL - HEAT	50
03 – 2 ND STAGE DIFFERENTIAL - HEAT	51
04 – 1ST STAGE DIFFERENTIAL - COOL	52
05 – INCIDENTAL OCCUPANCY THRESHOLD	53
06 – NIGHT OCCUPANCY THRESHOLD	54
07 – FORCED 2ND STAGE HEATING	55
08 – NIGHT OCCUPANCY START	56
09 – NIGHT OCCUPANCY END	57
10 – TEMPERATURE RECOVERY TIME	58
11 – RECOVERY TEMPERATURE - HEAT	59
12 – TEMPERATURE SETBACK DELAY	60
13 – MINIMUM SETBACK TEMPERATURE - HEAT	61
14 – MAXIMUM SETBACK TEMPERATURE	62
15 – RECOVERY TEMPERATURE - COOL	63
16 – MINIMUM SET POINT	64

Table of Contents

17 – MAXIMUM SET POINT	65
18 – TEMPERATURE CONTROL MODE	66
19 – AUTO CHANGEOVER SET POINT OFFSET	67
20 – SETBACK SET POINTS	68
21 – AUTO-RESTORE.....	69
22 – PLACEHOLDER SCREEN	70
23 – SETPOINT OVERSHOOT	71
24 – AUTOMATIC HUMIDITY CONTROL.....	72
25 – 2ND STAGE COOL DIFFERENTIAL	73
26 – SMART SETBACK	74
27 – HUMIDITY CONTROL THRESHOLD	75
28 – HUMIDITY CUTOFF TEMPERATURE.....	76
30 – ENERGY MANAGEMENT ON/OFF	78
31 – DOOR/WINDOW SHUT OFF DELAY	79
32 – AUTO FAN SPEED 1ST STAGE DIFFERENTIAL.....	80
33 – AUTO FAN SPEED 2ND STAGE DIFFERENTIAL	81
34 – TEMPERATURE CALIBRATION.....	82
35 – AUTOMODE TYPE.....	83
36 – HUMIDITY CONTROL OCCUPIED ROOM.....	84
37 – HEAT EQUIPMENT LOCKOUT	85
Troubleshooting	86
Restoring Factory Settings.....	86
APPENDIX 1 - Energy Saving Presets	87
APPENDIX 3 - Glossary.....	89
Warranty Information	90
Technical Specifications	91

Introduction

The energy management thermostats deliver unprecedented energy savings without compromising the comfort of occupants.

An integrated occupancy sensor uses a combination of motion and thermal sensing technologies for accurate occupancy detection. Reliable occupancy detection allows for energy savings when rooms are unoccupied.

Energy saving presets eliminate the guesswork and make it easy to adjust the energy saving settings.

Fully configurable energy saving settings allow for customization of the thermostat settings to fit any situation.

Comprehensive configuration options ensure full compatibility with virtually any existing or emerging HVAC system with up to 4 heat and 2 cool stages.

Built-in wireless mesh-networking enables online management.

Introduction

SKUs Referenced in this Manual

This user guide includes instructions on how to install each of the following compatible SKUs.

Product Type	SKU(s)	Description
Standalone Thermostats	VRPXMRTA4*	Wired Energy Management Thermostat PIR Occupancy Detection, VRP & PVH 12V, White
	VRPXMRTB4*	Wired Energy Management Thermostat PIR Occupancy Detection, VRP & PVH 12V, Black
	VRPXWCTA4*	Wired Programmable Wall Controller (No PIR), VRP & PVH 12V, White
Network Equipment	EMOCT4	EMWRT3/4, DSSXEMWRT3/4, & VRPXMWRT4* Online Connection Kit for Wireless Network Access**
Network Access	EMRAF4	Wireless Network Access Fee
Remote Sensors	EMRWOS4	Secondary Wireless Occupancy Sensor
	EMRDS4	Wireless Door/Window Switch
	EMRTS4	Secondary Wireless Temperature Sensor
Secondary Radio	EMZBU4	Embedded Zigbee/BLE chip
Wall Plates	EMCWPA4	Thermostat Wall Plate White
	EMCWPB4	Thermostat Wall Plate Black

*‘R’ and ‘U’ SKUs also available.

**Online Connection Kit is required to enable Wireless Web Based Remote Management. One (1) Online Connection Kit can accommodate up to 1,024 Networked Thermostats depending on property layout and configuration.

Introduction

Equipment Nomenclature

Before you begin installing this equipment, we recommend you familiarize yourself with the various components that may be included in your shipment.



EM Thermostat



Online Connection Kit



Occupancy Sensor



Door/Window Sensor

Introduction

Installation Considerations

Selecting the appropriate installation location of the thermostat and any accessories is crucial to the proper operation of your energy management system. The following guidelines should be adhered to in all cases;

THE THERMOSTAT'S OCCUPANCY SENSOR SHOULD FACE THE BED AREA OF THE ROOM OR THE AREA WHERE THE OCCUPANT WILL SPEND THE MOST TIME.

THE THERMOSTAT MUST NOT BE INSTALLED IN THE VICINITY OF LARGE METAL STRUCTURES OR SURFACES INCLUDING METAL AIR DUCTING THAT MAY BE IN THE WALL. LARGE METAL STRUCTURES BETWEEN THE THERMOSTAT AND CONTROL CARD AND/OR THE ONLINE CONNECTION KIT SUCH AS METAL CABINETS OR DOORS/ ELEVATOR SHAFTS SIGNIFICANTLY REDUCE THE RANGE OF THE WIRELESS SIGNAL AS THEY DEFLECT THE SIGNAL AND THEY DON'T ALLOW IT TO PASS THROUGH THEM, THUS REDUCING THE SIGNAL STRENGTH BETWEEN THE DEVICES MENTIONED.

DO NOT INSTALL THE THERMOSTAT NEAR WINDOWS OR DOOR VENTS, ON AN EXTERIOR WALL, ABOVE OR BELOW SUPPLY VENTS, OR OTHER LESS OCCUPIED AREAS.

Network Installation

NOTICE

TO ENABLE NETWORKING CAPABILITIES OF THE VX THERMOSTAT, REFER TO THE “NETWORK INSTALLATION” SECTION OF THIS MANUAL.

BEFORE STARTING THE INSTALLATION OF THE NETWORKED THERMOSTATS, ENSURE THE ONLINE CONNECTION KIT IS CONNECTED TO THE INTERNET.

CONFIRM THE ONLINE CONNECTION KIT IS COMMUNICATING PROPERLY WITH THE CLOUD SERVICE BY CALLING TECHNICAL SUPPORT AT 1 877 318 1823.


THE ANTENNA MODULE MUST BE INSTALLED WITHIN 100FT FROM THE FIRST 2 TO 3 THERMOSTATS, AND MUST NOT BE INSTALLED NEAR LARGE METAL STRUCTURES OR SURFACES.

TO PREVENT POWER RELATED ISSUES, PLUG THE SERVER INTO A UPS (UNINTERRUPTED POWER SUPPLY) UNIT.

THE ANTENNA(S) USED FOR THIS TRANSMITTER MUST NOT BE CO-LOCATED OR OPERATING IN CONJUNCTION WITH ANY OTHER ANTENNA OR TRANSMITTER AND MUST BE INSTALLED TO PROVIDE A SEPARATION DISTANCE OF AT LEAST 20CM FROM ALL PERSONS.

Network Installation

Connecting Wireless Receiver

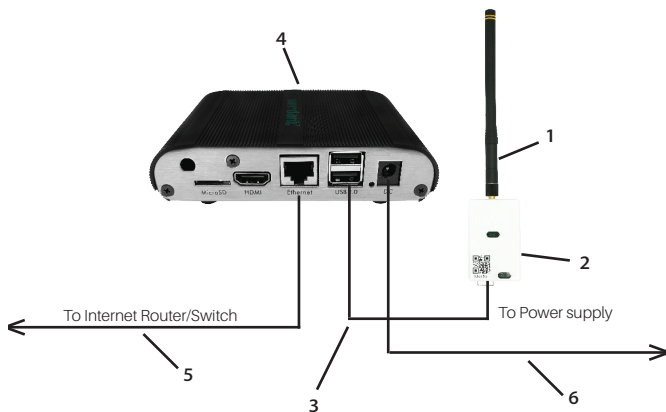

1. Screw Antenna (1) onto Wireless Receiver (2)
2. Connect Wireless Receiver (2) to Server (4) using supplied USB cable (3)
3. Affix Wireless Receiver (2) to wall with double sided adhesive tape
4. Orient Antenna (1) to point upwards to the closest room in which a thermostat will be installed
5. Connect Server (4) to the LAN port with the supplied RJ-45 cable (5)
6. Plug Server (4) into electrical outlet with power cord (6)

Network Installation

Configuring Online Connection Kit

1. Ensure Online Connection Kit is receiving an IP from a DHCP server.
NOTE: it is not recommended to use a public IP
2. Ensure MAC address is properly Whitelisted if it needs to bypass a login (splash) page to reach the internet
NOTE: MAC address is printed on a white sticker on bottom of Online Connection Kit.
3. If behind a firewall, OUTBOUND ports 22, 80, and 443 must be allowed for the Online Connection Kit. No INBOUND ports are required for this device unless specific options are requested.

Thermostat Installation

Mounting Thermostat to Wall

1. Select appropriate installation location for thermostat per below:

THE THERMOSTAT'S OCCUPANCY SENSOR SHOULD FACE THE BED AREA OF THE ROOM OR AREA WHERE OCCUPANT WILL SPEND THE MOST TIME.

THE THERMOSTAT MUST NOT BE INSTALLED IN THE VICINITY OF LARGE METAL STRUCTURES OR SURFACES INCLUDING METAL AIR DUCTING. DO NOT INSTALL THERMOSTAT NEAR WINDOWS OR DOORS WHICH MAY ALLOW A DRAFT, ON AN EXTERIOR WALL, ABOVE OR BELOW SUPPLY VENTS, AND OTHER LESS OCCUPIED AREAS.

2. If using a wall plate, place it over hole in wall left from previous thermostat and mark two locations for drilling holes
3. Place thermostat on wall in installation location and mark location for drilling holes for two mounting screws
4. Drill two 3/16" holes in wall and insert two wall anchors
5. Use two screws to securely mount thermostat to wall

DO NOT OVER TIGHTEN THE BACK PLATE TO THE WALL. FOR UNEVEN SURFACES INSTALL A WALL PLATE.

Optional Sensor Installation


1. Select appropriate installation location
2. With faceplate removed, place sensor on wall in installation location and mark location for drilling holes for two mounting screws

OCCUPANCY SENSORS SHOULD FACE THE DESIRED OCCUPANCY DETECTION AREA.

3. Drill two 3/16" holes in wall and insert two wall anchors
4. Use two screws to securely mount sensor to the wall
5. Insert one AAA alkaline battery into compartment (wireless sensors only)

Thermostat Details


Thermostat Buttons

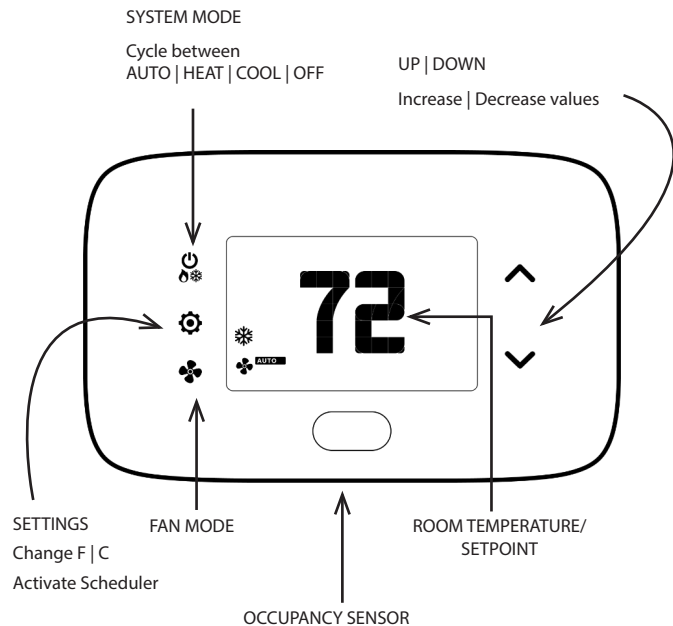

*In AUTO Mode, cycle between ON | OFF. In MANUAL mode, Cycle between OFF | HEAT | COOL


Thermostat Screen

Understanding Display Screen Icons

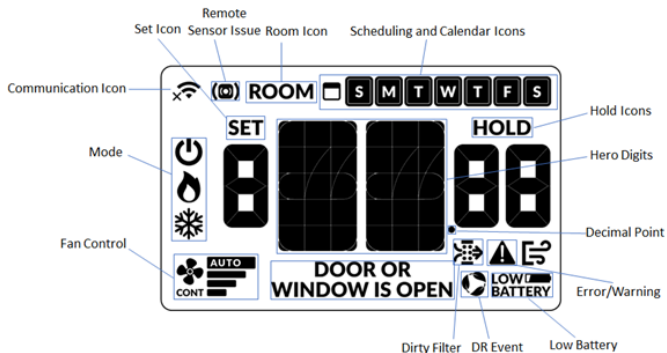

Thermostat Configuration

Configuring Thermostat

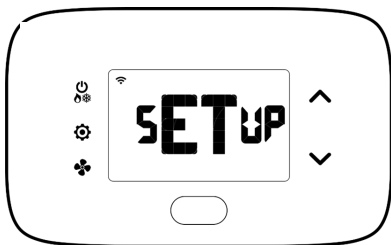

Prerequisites: During installation training with your support agent you will be provided with: Mesh ID (IF NETWORKED, provided by Technical Support), Room Number, Time, and Equipment Code.

NOTE: Press and hold FAN and SYSTEM MODE buttons.


Turn on thermostat and HVAC unit to activate setup screen (shown above) and complete the below settings shown the following pages:

1. Set MESH ID (only for Networked Systems)
2. Enter room number
3. Enter equipment code
4. Configure energy saving settings
5. Set thermostat clock
6. Enable/Disable Scheduler

NOTE: To exit the configuration menu at any time press the SYSTEM MODE button.

Thermostat Configuration

Set MESH ID (FOR NETWORKED SYSTEMS ONLY)

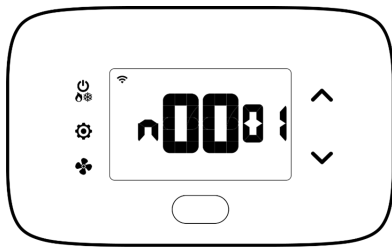


For networked installations, a unique MESH ID is associated to each Online Connection Kit and is provided by your technical support agent during the installation training (also be found labeled on device).

For properties using a single Online Connection Kit, each thermostat may be linked to MESH ID 0001. For properties requiring multiple Online Connection Kits, each thermostat should be linked to the MESH ID of the closest Online Connection Kit.

1. Press UP | DOWN buttons to increase or decrease value
2. Press FAN button to advance to next digit
3. Press SETTINGS button to advance to next step

Thermostat Configuration

Entering Room Number

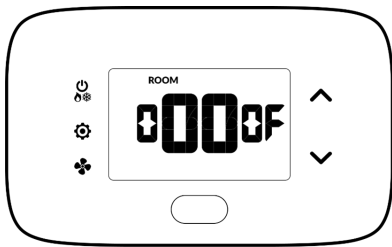

Enter room number by changing characters on screen. Available characters include digits 0-9 and letters A-F. To distinguish between two or more thermostats in the same unit, enter as follows:

Thermostat 1: 00100

Thermostat 2: 0100A

1. Press UP | DOWN buttons to increase or decrease the value
2. Press FAN button to advance to the next digit
3. Press SETTINGS button to advance to next menu

Entering room number correctly is crucial for proper operation of thermostats with online management.

Thermostat Configuration

Equipment Codes

Enter equipment code by changing digits on the screen.


Model Description	Equipment Code
VRP/FreshAir 12 V Control*	6603

For more information on installation of the units see below sections:

- VRP unit-specific installation (page 28)
- FreshAir PTAC unit-specific installation (page 31)

Thermostat Configuration

Configuring Energy Saving Settings

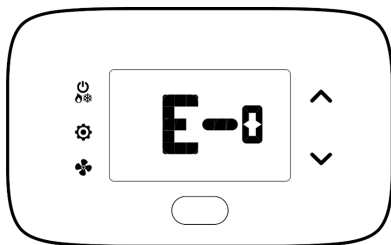

1. Press UP | DOWN buttons to increase or decrease energy savings preset
2. Press SETTINGS button to advance to next menu

*default setting


Preset	Energy Savings Presets
E-0*	Energy Savings Off - No Temperature Setback
E-1	Lowest Energy Savings
E-2	Lower Energy Savings
E-3	Standard Energy Savings
E-4	Higher Energy Savings

Please refer to Appendix 1 for more details on these presets.

Thermostat Configuration

Set Thermostat Clock

Set thermostat clock to current time in 24h format.

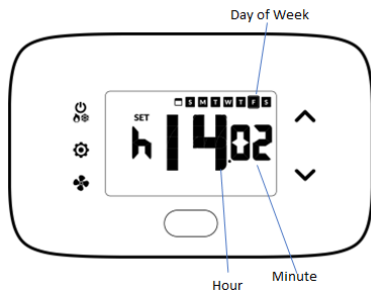

1. Press UP | DOWN buttons to increase or decrease digits
2. Press FAN button to advance to next digit
3. Press SETTINGS button once to go to current room temperature screen.
4. Setup is now complete

SETTING CORRECT TIME IS CRUCIAL FOR PROPER OPERATION OF THERMOSTAT. TIME UPDATES AUTOMATICALLY IF CONNECTED TO ONLINE CONNECTION KIT.

Thermostat Configuration

Testing Thermostat

Following thermostat configuration, test if the thermostat is controlling the HVAC unit.

1. Ensure thermostat is powered and faceplate is affixed
2. Press DOWN button to change temperature set point below current room temperature to confirm thermostat initiates cooling
3. Press UP button to change temperature set point above current room temperature to confirm thermostat initiates heating
4. Change fan speed by touching FAN button to verify thermostat is controlling fan speed

Configuring & Managing Accessories

Activating a Sensor

1. Remove the faceplate from the sensor to be paired
2. Insert two AAA alkaline batteries into each sensor
3. Press button inside sensor to make sensor discoverable
4. Navigate to “Pairing a Sensor” on page 24


NOTE: The sensor(s) will remain discoverable for five (5) minutes after pressing the button inside the device. If the pairing process has not been completed within five (5) minutes, push button inside sensor again.

Configuring & Managing Accessories

Pairing a Sensor

Ensure thermostat and HVAC unit are powered and thermostat faceplate is removed. The thermostat configuration screens have a 30-second time-out. If no action is taken within this time, the thermostat exits configuration settings.

1. Press and hold **SYSTEM MODE** and **FAN** buttons on thermostat to access Mesh ID screen
2. Press and hold **SYSTEM MODE** and **FAN** buttons again until type appears
3. Press **SETTINGS** button until **SENS** appears

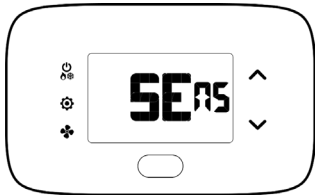

4. Press **FAN** button on thermostat to initiate pairing of a new sensor ,or, press **SETTINGS** to manage existing sensors. This will initiate a 10 second countdown and display the last 5 digits of the sensor ID(s) discovered during the pairing procedure.
5. Use **UP** | **DOWN** buttons to toggle between discovered sensors
6. Ensure unique device ID displayed on screen matches unique device ID of sensor to configure
7. Press **SETTINGS** button when **Add** appears
8. Press **SETTINGS** button to pair selected sensor to Thermostat
9. Verify **SUcc** shows on screen

NOTE: If pairing fails, press **ON** | **OFF** button to exit and perform procedure again.

Configuring & Managing Accessories

Verifying Sensor Connection Status and Unlinking Sensors

NOTE: Thermostat and HVAC unit must be powered

1. Remove faceplate from thermostat
2. Press and hold SYSTEM MODE and FAN buttons until MESH ID appears on the screen
3. Press and hold SYSTEM MODE and FAN buttons again until type appears on screen
4. Press SETTINGS button again until SENS appears on the screen
5. Press SETTINGS button. The Thermostat will initiate a 10 second countdown before displaying the number of linked sensors currently communicating with the thermostat (e.g. 02.02 means 2 out of 2 linked sensors is communicating with thermostat)




6. Press SETTINGS button to display the first linked sensor and UP | DOWN buttons to cycle through linked sensors
7. After selecting sensor to be unlinked, press and hold SYSTEM MODE and FAN buttons. The thermostat will initiate a 10 second countdown before displaying the total number of linked sensors
8. Press SYSTEM MODE button to exit this configuration menu
9. Press button on the sensor for 3 seconds until a yellow light turns on. The sensor is now reset and can be paired to the thermostat again if necessary.

Configuring & Managing Accessories

Configuring Functionality of Sensor

The thermostat allows the user to choose the functionality of a sensor. Use the table below to configure the desired functionality. For example, if sensor is intended to be used as Occupancy Sensor, OCC value must be set to 1.


NOTE: OCC default setting = 0

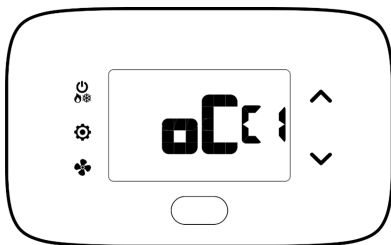

1. Press SETTINGS button to select sensor
2. Press SETTINGS button to move to Occupancy Sensor configuration screen OCC and use the UP | DOWN buttons to increase or decrease digit according to below table

Trailing Digit Value	OCC cx (Occupancy Sensor)	dsx (Door Switch)	rtx (Temperature Sensor)
0*	Disabled	Disabled	Disabled
1	Enabled	Normally Closed	Master
2		Normally Open	Average


Configuring & Managing Accessories

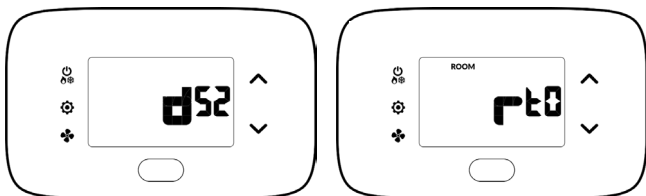

3. Press SETTINGS button to configure Door Switch functionality (dsx). Door switch functionality should be set to Normally Open (NO) or Normally Closed (NC) depending on reed switch
4. Press SETTINGS button to configure Temperature Sensor functionality (rtx)
5. Press SETTINGS button to move to ADD screen
6. Press FAN button to finalize pairing

Configuring & Managing Accessories

Completing Sensor Setup

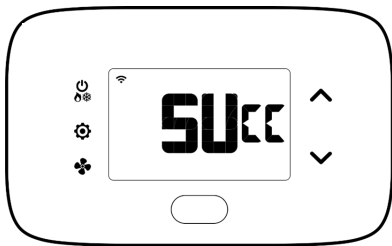

The thermostat will countdown from thirty (30) seconds. If the sensor has successfully paired, the thermostat will display **SUCC**. If the sensor did not pair successfully, the display will read **FAIL**, and the procedure must be repeated.

1. Press **SYSTEM MODE** button to exit sensor setup screen
2. Repeat Sensor setup as many times as necessary


Unit Specific Applications

Connecting Thermostat to VRP Unit

1. Connect harness to Thermostat
2. Connect other end of harness into the VRP using a RJ45 plug. Follow color coded connections as shown below

WIRE COLOR		LABEL
Orange		Connection 1
Green/White		V+ Orange
Brown		Connection 2
Blue/White		D+ Brown
Blue		Connection 3
Brown/White		D- Blue
Green		Connection 4
Orange/White		V- Green
Ground Shield Wire		GND

Wall Controller Side  VRP Side

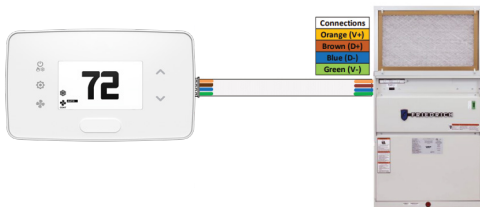

Replacing VRPXEMRT2 Thermostat with VRPXEMRT4* Thermostat

- 1. Color coordination/coding is the same between the two devices.
- 2. D+ & D- are reversed between the VRPXEMRT2 and VRPXEMRT4*.
- 3. Wires for D+ and D- can be reversed at the control card OR at the VRP unit.

VRPXEMRT2

WIRE COLOR	LABEL
Orange	Connection 1
Green/White	V+ Orange
Blue	Connection 3
Brown/White	D- Blue
Brown	Connection 2
Blue/White	D+ Brown
Green	Connection 4
Orange/White	V- Green
Ground Shield Wire	GND

VRPXEMRT4*

WIRE COLOR	LABEL
Orange	Connection 1
Green/White	V+ Orange
Brown	Connection 2
Blue/White	D+ Brown
Blue	Connection 3
Brown/White	D- Blue
Green	Connection 4
Orange/White	V- Green
Ground Shield Wire	GND

Unit Specific Applications

Configuring Equipment Settings for VRP

Enter equipment code 6603 by changing digits on screen.



1. Press FAN button to advance to the next equipment setting
2. Press UP | DOWN buttons to increase or decrease value to 6603
3. Press SETTINGS button to advance to next menu



4. After entering equipment code, the thermostat requires the source of the temperature reading. Temperature can be sensed by the thermostat (TS) or by conditioning unit (AC) if a conditioning unit supports the option of reading temperature.
5. Press UP | DOWN buttons to select TS (preferable over AC).

Unit Specific Applications


Installing FreshAir® PTAC (Cat 6 to FreshAir® PTAC)

NOTE: FreshAir® PTAC models with a SKU ending in 'A' are only compatible with 24V. FreshAir® PTAC models with a SKU ending in 'B' and above are compatible with VRPXEMRT4 thermostats.

1. Connect one end of Cat6 wire to FreshAir® PTAC using RJ45 port on PTAC unit using harness 142-00042-00.



WIRE COLOR		LABEL
Blue		Connection 1 V+ Orange
Brown/White		
Green		Connection 2 D- Blue
Orange		
White/Orange		Connection 3 D+ Brown
White/Green		
White/Blue		Connection 4 V- Green
Brown		

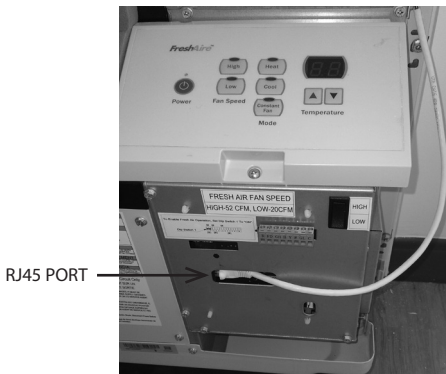

Unit Specific Applications

Configuring Equipment Settings for FreshAir® PTAC

Enter equipment code 6613 by changing digits on screen.



1. Press FAN button to advance to the next equipment setting
2. Press UP | DOWN buttons to increase or decrease value to 6613
3. Press SETTINGS button to advance to next menu



4. After entering equipment code, the thermostat requires the source of the temperature reading. Temperature can be sensed by the thermostat (TS) or by conditioning unit (AC) if a conditioning unit supports the option of reading temperature.
5. Press UP | DOWN buttons to select TS (preferable over AC).

Application Notes

A comprehensive list of published application notes can be found at www.verdant.co/resources/application-notes.

Applications include (among others):


1. Energy Savings Settings
2. Scheduler
3. Door-lock ZigBee Integrated Solution
4. Demand Response
5. Hilton Connected Room
6. IHG Studio
7. Occupancy Based Lighting Control
8. Advanced Lighting Application: ZigBee Controlled Switch and socket from LEVITON

Custom Energy Savings Settings

If you do not want to use one of the energy saving presets detailed in Appendix 1, you can enter the custom energy savings settings.


Accessing Custom Energy Savings Settings

1. Ensure thermostat is powered and faceplate removed
2. Press and hold SYSTEM MODE button to access Mesh ID screen
3. Press SETTINGS button to navigate to Energy Saving Settings screen
4. From Energy Savings Settings screen, press and hold SYSTEM MODE and FAN buttons until first custom energy saving settings screen appears

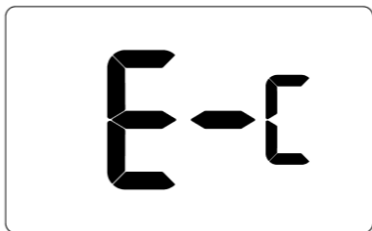

Custom Energy Savings Settings

Using Thermostat Settings Screens

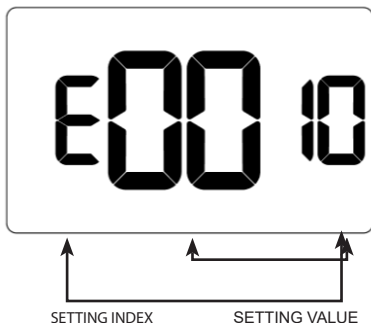

1. Use UP | DOWN buttons to select desired index setting
2. Press SYSTEM MODE and FAN buttons to edit value of index setting
3. Use the UP | DOWN buttons to change setting value (see Custom energy saving settings section for more info and Min-Max values)
4. Press FAN button to temporarily store setting value
5. Press FAN button to save profile and exit Custom Energy Savings Settings
6. To discard the changes, press ON | OFF button at any time

Custom Energy Savings Settings



Default value: enabled
Range: 7 days

Allows for setting of cooling and heating set points at varying times throughout the day.

The scheduler is enabled by default and let's the user set cooling and heating setpoints for different times for each day of the week.

The scheduler allows the thermostat to store up to 6 events for each day (7 days). Events #5 and #6 should be enabled via the web.

Custom Energy Savings Settings

Scheduler

Firmware version 1130 and higher is required for Scheduler feature.

1. Ensure thermostat is powered and operational

NOTE: Below illustration is an example. Temperature and fan mode can differ.



2. Press SETTINGS button until temperature value shows
3. Press SETTINGS again to activate scheduler and show current status (n or y)
4. Use the UP | DOWN button to select desired status



Custom Energy Savings Settings

5. Press SETTINGS button to navigate to first event of the week. Use Up / Down arrows to set event time.

NOTE: below example shows setting for second event.




6. Press SETTINGS button to display Set and press Fan button to select necessary day of the week. Press SETTINGS button when correct day is selected.

NOTE: go to Step 5 immediately after selecting correct day.



Custom Energy Savings Settings

7. Use UP | DOWN buttons to set cooling temperature to desired setpoint and press SETTINGS button.
8. Use UP | DOWN arrows to set heating setpoint.
NOTE: press ON | OFF button at anytime to exit scheduler menu.

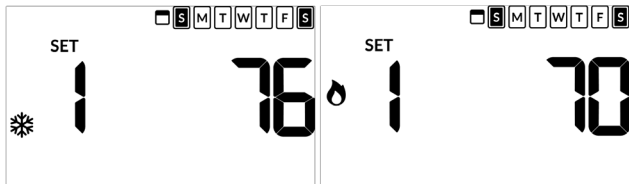

9. Repeat Step 5 until all desired events are scheduled

Custom Energy Savings Settings

Door Lock Integration

Door Lock integration can be via 1-Way Communication or 2-Way Communication.

- 1-Way application: Door locks must be networked and communicating with a Door Lock Management System for thermostat integration
- 2-Way application: thermostat acts as the network. Door locks are not required to be networked. A ZigBee coordinator is also required for wired / wireless integration

NOTE: integration with dormakaba requires ebox and dorma server set-up and communicating.

NOTE: remove faceplate from thermostat before starting procedure

1. Press and hold SYSTEM MODE and FAN buttons until MESH ID appears
2. Press and hold SYSTEM MODE and FAN buttons until type appears
3. Press FAN button until Select shows on screen

NOTE:

- Wireless: countdown appears to confirm pairing to control card
- Wired: no countdown



Custom Energy Savings Settings

4. Press DOWN button to display Add and then press SETTINGS button to display select list.



5. Press DOWN button until desired lock platform shows (oni or kaba) and then press SETTINGS (below example only)



6. Allow countdown to complete until screen displays Found[1-8].




Custom Energy Savings Settings


- Use DOWN button to scroll through found devices with Eul_[lockid]_255 format.

NOTE:

- Dorma locks display as lock's respective short ZigBee ID
- Onity locks display as lock's respective serial number. Press SETTINGS to select and display -cFg_[lockid]_255

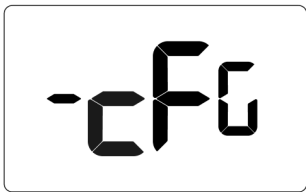


- Press DOWN one time to display the 1tag screen. Then press SETTINGS to display t----

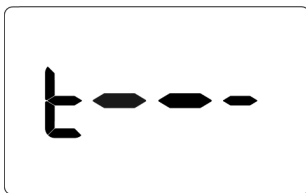

Custom Energy Savings Settings

9. Use UP | DOWN buttons to select a tag number (typically 001) and then press SETTINGS to set and display `cfg_[lockid]_[tag]`

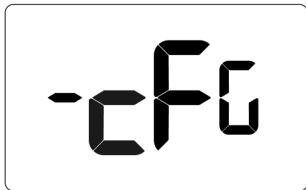

10. Press DOWN button 2 times to display Acc and then press SETTINGS to accept and re-display Found screen



11. Press ON | OFF button to exit the menu system.

Custom Energy Savings Settings

Demand Response

Demand Response (DR) is a resource for balancing power supply and demand by allowing consumers options to reduce or shift their energy consumption away from peak periods.

How it works

- **Enroll:** Tenant or Property owner opt in to receive DR events
- **Integration with Aggregators:** DR aggregators linked to the property's utility company integrate with APIs allowing automatic transmission of DR events to thermostats
- **Active DR Event Indicator:** Thermostats display a distinctive icon alerting tenants and guests a DR event has been sent
- **Opt-Out Option:** Tenants and Guests may opt out of DR events by adjusting the setpoint

NOTE: DR requires firmware 1130 or later

Custom Energy Savings Settings


Setting Index	Max	Min
E1	001	000
E2	030	002
E3	020	010
E4	030	002
E5	060	000
E6	060	000
E7	060	000
E8	023	000
E9	023	000
10	060	000
11	082	062
12	120	000
13	072	052
14	092	072
15	082	062
16	084	064
17	082	060
18	001	000
19	004	000
20	001	000
21	001	000
22	NA	NA

Custom Energy Savings Settings

Setting Index	Max	Min
23	020	004
24	001	000
25	030	005
26	001	000
27	070	055
28	075	065
29	NA	NA
30	001	000
31	060	001
32	008	002
33	010	002
34	050	-050
35	002	001
36	001	000
37	002	000

Custom Energy Savings Settings

01 – FAN CONTROL MODE

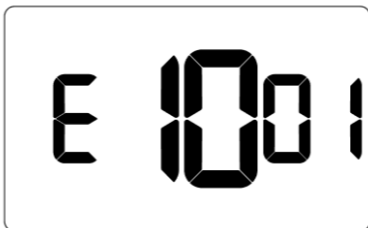

<p>Default value: 00 Range: 00-01</p>	<p>00: AUTOMATIC - fan runs only when there is a demand for heating or air conditioning</p> <p>01: CONTINUOUS - fan runs continuously when thermostat is on</p>
---	---

Custom Energy Savings Settings

02 – 1ST STAGE DIFFERENTIAL - HEAT


A digital display showing the code 'E2005' in a large, black, seven-segment font. The display is enclosed in a thin black rectangular border.

Default value: 0.5F
Range: 0.2F - 3.0F

Select number of degrees thermostat has to sense between automatic changeover temperature for heat and room temperature before a call for 1st stage heating is initiated.

Custom Energy Savings Settings

03 – 2ND STAGE DIFFERENTIAL - HEAT

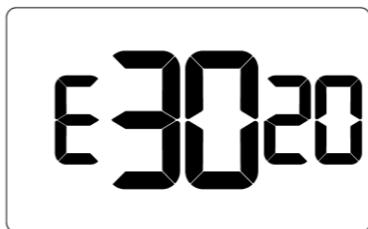

Default value: 2.0F
Range: 1.0F - 2.0F

Select difference between 1st stage heating and 2nd stage heating initiation.

This also applies as the 3rd and 4th stage differential on top of the 2nd when there are more than 2 stages.

Custom Energy Savings Settings

04 – 1ST STAGE DIFFERENTIAL - COOL



Default value: 0.5F
Range: 0.2F - 3.0F

Select number of degrees thermostat has to sense between automatic changeover temperature for cool and room temperature before a call for 1st stage cooling is initiated.

Custom Energy Savings Settings

05 – INCIDENTAL OCCUPANCY THRESHOLD

A digital display showing the number 5005 in a stylized, segmented font, enclosed within a rounded rectangular border.

Default value: 5 minutes
Range: 0 - 60 minutes

Select minimum period of time (in minutes) for which occupancy needs to be detected to enter guest occupancy mode. When occupancy is detected, thermostat will switch to occupied mode for a duration of Incidental Occupancy Threshold selected.

If occupancy is detected for a period of time shorter than the Incidental Occupancy Threshold selected, the thermostat will automatically revert to unoccupied mode at the end of the Incidental Occupancy Threshold period and continue to observe energy saving functions that were in effect before the room became occupied. This setting allows ignoring incidental room visits.

If occupancy is detected for a period of time longer than the Incidental Occupancy Threshold selected, the thermostat will enter the guest occupancy mode. When the thermostat is in the guest occupancy mode, it will revert to unoccupied mode and initiate the setback temperature only when occupancy is not detected for the duration of the setback delay (Heat or Cool) period.

Custom Energy Savings Settings

06 – NIGHT OCCUPANCY THRESHOLD



Default value: 1 minute
Range: 0 - 60 minutes

Select minimum period of time (in minutes) for which occupancy needs to be detected to consider the room occupied during the Night Occupancy period. When occupancy is detected during Night Occupancy Period for longer than the Night Occupancy Threshold selected, the thermostat will instantaneously switch to occupied mode.


If occupancy is detected for a period of time shorter than the Night Occupancy Threshold selected, the thermostat will automatically revert to unoccupied mode and continue to observe energy saving functions that were in effect before the room became occupied.

If occupancy is detected for a period of time longer than the Night Occupancy Threshold selected, the thermostat will disable the occupancy sensor and consider the room occupied until the end of the Night Occupancy period.

This feature ensures energy saving functions that may affect guest comfort will not come in effect during the Night Occupancy period.

Custom Energy Savings Settings

07 – FORCED 2ND STAGE HEATING

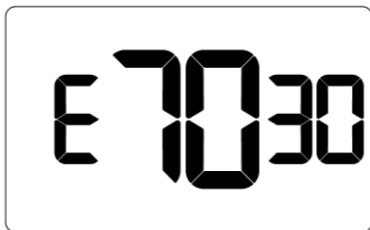

Default value: 30 minutes
Range: 0 - 60 minutes

Select a number of minutes 1st stage heating will run before 2nd stage heating is automatically initiated if the guest set point is not reached and the 2nd stage heating is not initiated through differential settings.

This feature allows automatically turning on 2nd stage heating to avoid excessive compressor use. Set to 00 to disable the feature.

This also applies as the 3rd and 4th stage differential on top of the 2nd when there are more than 2 stages.

Custom Energy Savings Settings

08 – NIGHT OCCUPANCY START



Default value: 21 hours
Range: 0 - 23 hours

Select the start time (24-hour clock) for Night Occupancy

If occupancy is detected for a period of time longer than the Night Occupancy Threshold during Night Occupancy period, the thermostat will disable the occupancy sensor and consider the room occupied until the end of the Night Occupancy period.

This feature ensures that energy saving functions that may affect guest comfort will not come in effect during the Night Occupancy period if room was occupied for a period of time longer than Night Occupancy Threshold.

Custom Energy Savings Settings

09 – NIGHT OCCUPANCY END

A digital display showing the time 09:09 in a large, black, segmented font. The display is enclosed in a thin black rectangular border.

Default value: 9 hours
Range: 0 - 23 hours

Select time (24-hour clock) for Night Occupancy to end.

The time of day the Night Occupancy ends and the thermostat switches back to the room sensing settings chosen in the other occupancy modes.

Custom Energy Savings Settings

10 – TEMPERATURE RECOVERY TIME

A digital display showing the time 00:25 in a large, black, seven-segment font. The display is enclosed in a thin black rectangular border.

Default value: 25 minutes
Range: 0 - 60 minutes

Select the maximum time allowed for a HVAC unit to attain temperature as defined by Heat and Cool Recovery Temperature;

Temperature Recovery Time selected and the actual temperature recovery ability of the HVAC unit are used to calculate setback temperatures. Calculated setback temperatures maximize energy savings and at the same time ensures a comfortable room temperature (defined as Heat and Cool Recovery Temperature) will be restored within the selected Temperature Recovery Time.

Setting the Temperature Recovery Time to 00, disables temperature recovery. When temperature recovery is disabled, thermostat will use the Minimum and Maximum Setback Temperatures as setback set points.

Custom Energy Savings Settings

11 – RECOVERY TEMPERATURE - HEAT

A digital display with a black background and white segmented digits, showing the number 106.7.

Default value: 67F
Range: 62F - 82F

Select room temperature in °F that a HVAC unit will have to attain within the selected Temperature Recovery Time when there is a need for heating.

If recovery is disabled (Temperature Recovery Time set to 0) or if setback temperatures have not yet been calculated, the Recovery Temperature - Heat value will be used as the setback temperature for heating.

Custom Energy Savings Settings

12 – TEMPERATURE SETBACK DELAY

A digital display showing the time 12:20 in a large, black, segmented font. The display is enclosed in a thin black rectangular border.

Default value: 20
minutes
Range: 0 - 120 minutes

Select the time delay (in minutes) for which the room that is in the guest occupancy mode needs to be unoccupied before the temperature setback is initiated.

This feature prevents initiating temperature setback prematurely while the guest is still in the room but in an area where occupancy cannot be detected by the occupancy sensor.

Setting the Temperature Setback Delay - Heat to 00, disables the setback in the heat mode. Set to 00 to disable EMS.

Custom Energy Savings Settings

13 – MINIMUM SETBACK TEMPERATURE - HEAT

A digital display showing the number 64 in a large, black, segmented font, representing the minimum setback temperature in degrees Fahrenheit.

Default value: 64F
Range: 52F - 72F

Select Minimum Setback Temperature in °F.

Setback temperature is calculated by measuring HVAC unit's ability to attain Recovery Temperature - Heat within Temperature Recovery Time.

If recovery is disabled (Temperature Recovery Time is set to 0) or if setback temperatures have not yet been calculated, the Recovery Temperature - Heat value will be used as the setback temperature for heating.

If calculated setback temperature for heating is lower than Minimum Setback Temperature, then the Minimum Setback Temperature will be used as setback temperature for heating.

This feature allows defining the minimum temperature in a room when room is unoccupied and the thermostat is in the setback mode.

Custom Energy Savings Settings

14 – MAXIMUM SETBACK TEMPERATURE



Default value: 78F
Range: 72F - 92F

Select the Maximum Setback Temperature in °F.

Setback temperature is calculated by measuring HVAC unit's ability to attain Recovery Temperature - Cool within Temperature Recovery Time.

If recovery is disabled (Temperature Recovery Time is set to 0) or if setback temperatures have not yet been calculated, the Maximum Setback Temperature value will be used as the setback temperature for cooling.

If calculated setback temperature for air conditioning is higher than Maximum Setback Temperature, then the Maximum Setback Temperature will be used as setback temperature for air conditioning.

This feature allows defining the maximum temperature in a room when room is unoccupied and the thermostat is in the setback mode.

Custom Energy Savings Settings

15 – RECOVERY TEMPERATURE - COOL

A digital display with a black background and white segmented numbers, showing the value 74.

Default value: 74F
Range: 62F - 82F

Select the room temperature in °F that a HVAC unit will have to attain within the selected Temperature Recovery Time when there is a need for air conditioning.

Custom Energy Savings Settings

16 – MINIMUM SET POINT



Default value: 66F
Range: 64F - 84F

Select the minimum set point in °F that a guest can select.

Custom Energy Savings Settings

17 – MAXIMUM SET POINT



Default value: 78F
Range: 60F - 82F

Select the maximum set point in °F that a guest can select.

Custom Energy Savings Settings

18 – TEMPERATURE CONTROL MODE



Default value: AUTOMATIC
Range: 00 - 01

Select Temperature Control Mode:

00: MANUAL - Allows users to select HEAT only or COOL only temperature control mode to maintain the room temperature

01: AUTOMATIC - Thermostat automatically turns on heating or air conditioning to maintain the room temperature at the selected temperature set point

Custom Energy Savings Settings

19 – AUTO CHANGEOVER SET POINT OFFSET



Default value: 1F
Range: 1F - 4F

Select the difference between the guest-selected set point and the heat and the cool set point when the thermostat is in the automatic temperature control mode.

This value plus the 1st stage differential defined in steps 2 and 4, defines the temperature at which the thermostat would automatically change heating/cooling modes.

This feature allows adjusting the deadband between the heat and the cool set points in automatic changeover mode in to avoid the system from bouncing back and forth between heating and cooling under normal operating conditions.

Custom Energy Savings Settings

20 – SETBACK SET POINTS

A digital display showing the number 20001 in a large, black, seven-segment font. The display is contained within a white rectangular box with rounded corners and a thin black border.

Default value: 01

Range: 00 - 01

00: When room is unoccupied and the thermostat is in the setback mode or turned off, it will NOT maintain the temperature between heat and cool setback set points.

01: When room is unoccupied and the thermostat is in the setback mode or turned off, it will maintain the temperature between heat and cool setback set points.

Custom Energy Savings Settings


21- AUTO-RESTORE



<p>Default value: 01 Range: 00 - 01</p>	<p>00: When guest enters the room, the thermostat will be turned off - it will not automatically restore the most recent guest settings</p> <p>01: When guest enters the room, the thermostat will automatically restore the most recent guest settings</p>
---	---

Custom Energy Savings Settings

22 – PLACEHOLDER SCREEN

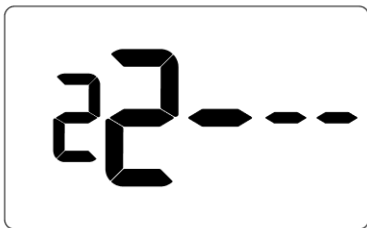

NOTE: for future use

Custom Energy Savings Settings

23 – SETPOINT OVERSHOOT

A digital display showing the number 23.06 in a large, black, seven-segment font. The display is enclosed in a thin black rectangular border.

Default value: 0.6F
Range: 4F - 20F

Select the °F of overshoot above or below the setpoint on the thermostat before the thermostat stops the call for cooling or heating.

Custom Energy Savings Settings

24 – AUTOMATIC HUMIDITY CONTROL



Default value: 00
Range: 00 - 01

00: Disable automatic humidity control
01: Enable automatic humidity control

When Automatic Humidity Control is enabled, thermostat will turn on air conditioning in an unoccupied room when humidity raises above 60% and room temperature is above 72°F until either room humidity is below 55% or room temperature is below 72°F

This setting is active only on thermostats with enabled humidity features. Changing this setting on a non-humidity thermostat will have no effect on thermostat operation.

Humidity features can be enabled on compatible thermostats via online management.

Custom Energy Savings Settings

25 – 2ND STAGE COOL DIFFERENTIAL

A digital display showing the value 25.020 in a large, black, seven-segment font. The display is enclosed in a thin black rectangular border.

Default value: 2F
Range: 5F - 30F

Select the °F differential required to trigger 2nd stage cooling (if applicable).

This also applies as the 3rd and 4th stage differential on top of the 2nd when there are more than 2 stages.

Custom Energy Savings Settings

26 – SMART SETBACK



Default value: 00
Range: 00 - 01

Smart setback reduces the excessive heating or cooling that may occur when occupants set their thermostats to setpoints outside of the norm. Occupant setpoint that is greater than Cool Setback or less than Heat Setback will be respected during setbacks to save energy.

Custom Energy Savings Settings

27 – HUMIDITY CONTROL THRESHOLD

A digital display showing the number 27.060 in a large, black, seven-segment font. The display is enclosed in a thin black rectangular border.

Default value: 60F
Range: 55F - 70F

Select the relative humidity level that automatic humidity control will attempt to control in conjunction with the humidity cut-off temp.

Custom Energy Savings Settings

28 – HUMIDITY CUTOFF TEMPERATURE


A digital display with a black border showing the number 28.72 in a large, black, seven-segment font. The decimal point is located between the 8 and the 7.

Default value: 72F
Range: 65F - 75F

Select the temperature at which humidity control will shut off.

Custom Energy Savings Settings

29- PLACEHOLDER SCREEN

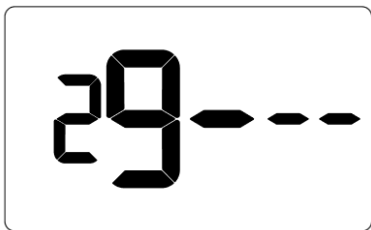

NOTE: for future use

Custom Energy Savings Settings

30- ENERGY MANAGEMENT ON/OFF



Default value: 01
Range: 00 - 01

00: Energy management disabled
01: Energy management enabled

Custom Energy Savings Settings

31- DOOR/WINDOW SHUT OFF DELAY



Default value: 2
Range: 1 - 60

Select the time delay (in minutes) before the thermostat disables air conditioning when a door or window sensor has been installed.

Custom Energy Savings Settings

32- AUTO FAN SPEED 1ST STAGE DIFFERENTIAL

A digital display with a black background and white, segmented characters. The display shows the number 32.02, where the decimal point is represented by a small dot between the 2 and the 0.

Default value: 2F
Range: 1F - 8F

Select the °F differential between Low Fan and 2nd stage fan (Medium or High) when Auto-Fan Speed is selected.

Custom Energy Savings Settings

33- AUTO FAN SPEED 2ND STAGE DIFFERENTIAL

A digital display with a black background and white, segmented characters. The display shows the number '3304' in a large, bold font. The digits are composed of multiple segments, giving it a classic seven-segment display appearance.

Default value: 4F
Range: 2F - 10F

Select the °F differential between Medium and High Fan when Auto-Fan Speed is selected (only active if 3 fan speeds are available).

Custom Energy Savings Settings

34 – TEMPERATURE CALIBRATION

A digital display showing the number 34.00 in a large, black, seven-segment font. The display is contained within a white rectangular box with rounded corners and a thin black border.

Default value: 0F Range: -5F - 5F	Calibrate the temperature display
--------------------------------------	-----------------------------------

Custom Energy Savings Settings

35 – AUTOMODE TYPE



Default value: 01
Range: 01 - 02

01: Standard Auto Mode - The thermostat will apply the deadband on the guest setpoint and control temperature with the guest setpoint as the median

02: Changeover Auto Mode - The thermostat will apply the deadband as a changeover limit where the deadband is crossed triggering a change in heating or cooling mode

Custom Energy Savings Settings

36 – HUMIDITY CONTROL OCCUPIED ROOM



Default value: 00
Range: 00 - 01

00: Humidity control OFF - The thermostat will disable humidity control when the room is occupied

01: Humidity control ON - The thermostat will enable humidity control even when the room is occupied

Custom Energy Savings Settings

37 – HEAT EQUIPMENT LOCKOUT




<p>Default value: 00 Range: 00 - 02</p>	<p>00: Compressor lockout - If set to 1, the thermostat will only allow electric heat</p> <p>01: Electric heat lockout - If set to 2, the thermostat will only allow compressor heat.</p> <p>02: Equipment lockout is disabled - The thermostat will enable both compressor and electric heat</p>
---	---

Troubleshooting

Restoring Factory Settings

For reported errors or configuration issues, restore settings to thermostat default parameters.

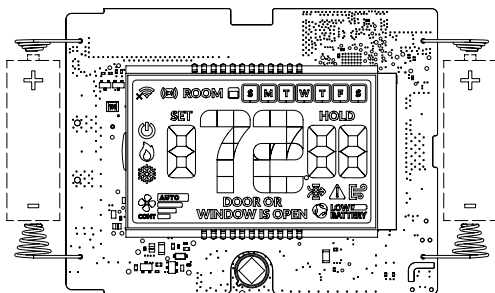

1. Press and hold the fan and power buttons together for 3 seconds
2. Press and hold SYSTEM MODE and FAN buttons to move to MESH ID screen
3. Press F I C to reach thermostat equipment type configuration screen
4. Press and hold SYSTEM MODE and FAN buttons until thermostat displays RST, then press the F I C button
5. Verify thermostat displays SETUP after three (3) seconds and reconfigure thermostat

Contact technical support if the issues are not resolved.

APPENDIX 1 - Energy Saving Presets

Bolded values below indicate the factory default profile*

	Level 0*	Level 1	Level 2	Level 3	Level 4	Level 5
Fan Control Mode	AUTO	AUTO	AUTO	AUTO	AUTO	AUTO
1st Stage Differential Heat	005	005	005	005	005	005
2nd Stage Differential Heat	010	010	010	020	020	020
1st Stage Differential Cool	005	005	005	005	005	005
Guest Occupancy Threshold	000	005	005	005	005	005
Night Occupancy Threshold	001	001	001	001	001	001
Force 2nd Stage Heating After	030	030	030	030	030	030
Night Occupancy Start	018	019	020	021	022	023
Night Occupancy End	012	011	010	009	008	007
Temperature Recovery Time	000	015	020	025	030	000
Recovery Temperature Heat	070	069	068	067	066	065
Temperature Setback Delay	000	030	025	020	015	010
Minimum Setback Temperature	067	066	065	064	063	062
Maximum Setback Temperature	072	074	076	078	080	082
Recovery Temperature Cool	071	072	073	074	075	076
Minimum Set point	064	064	065	066	067	068
Maximum Set point	082	082	080	078	076	074
Temperature Control Mode	AUTO	AUTO	AUTO	AUTO	AUTO	AUTO
Auto Changeover Set Point Offset (Dead Band)	001	001	001	001	001	001

APPENDIX 1 - Energy Saving Presets

	Level 0	Level 1	Level 2	Level 3	Level 4	Level 5
Setback Set Points	OFF	ON	ON	ON	ON	ON
Auto Restore	OFF	ON	ON	ON	ON	ON
N/A						
Setpoint Overshoot	006	006	006	006	006	006
Automatic Humidity Control	OFF	OFF	OFF	OFF	OFF	OFF
2nd Stage Cool Differential	010	010	010	020	020	020
Smart Setback	OFF	OFF	OFF	OFF	OFF	OFF
Humidity Control Threshold	060	060	060	060	060	060
Humidity Cutoff Temperature	072	072	072	072	072	072
N/A						
Energy Management On/Off	OFF	ON	ON	ON	ON	ON
Door/Window Shutoff Delay	002	002	002	002	002	002
Auto Fan Speed 1st Stage Differential	002	002	002	002	002	002
Auto Fan Speed 2nd Stage Differential	004	004	004	004	004	004
Temperature Calibration	000	000	000	000	000	000
Automode Type	STD	STD	STD	STD	STD	STD
Humidity Control Occupied Room	OFF	OFF	OFF	OFF	OFF	OFF
Heat Equipment Lockout	000	000	000	000	000	000

APPENDIX 3 - Glossary

"Automatic Fan Control Mode" - fan runs only when there is a demand for heating or cooling;

"Manual Fan Control Mode" - guest can select between automatic or continuous fan operation;

"Minimum Set point" - minimum temperature that a guest can request;

"Maximum Set point" - maximum temperature that a guest can request;

"Auto Changeover Set Point Offset" - the difference between the guest-selected set point and the heat and cool changeover temperatures;

"1st Stage Differential - Heat" - the temperature that the thermostat has to sense between the automatic changeover temperature for heat and the room temperature before a call for the 1st stage heating is initiated;

"2nd Stage Differential - Heat" - difference between 1st stage heating temperature and room temperature before the 2nd stage heating is initiated;

"1st Stage Differential - Cool" - the temperature that the thermostat has to sense between the automatic changeover temperature for cool and the room temperature before a call for the 1st stage cooling is initiated;

"Forced 2nd Stage Heating" - number of minutes 1st stage heating will run before 2nd stage heating is automatically initiated if the guest set point is not reached and the 2nd stage heating is not initiated through differential settings

"Temperature Recovery Time" - the maximum period of time allowed for restoring the "Recovery Temperature";

"Recovery Temperature" - the room temperature that needs to be restored within the "Temperature Recovery Time";

"Maximum Setback Temperature" - the highest room temperature allowed when thermostat is in the setback mode;

"Minimum Setback Temperature" - the lowest room temperature allowed when thermostat is in the setback mode;

"Temperature Setback Delay" - the length of time for which the room that is in the guest occupancy mode needs to be unoccupied before the temperature setback is initiated;

Incidental Occupancy Threshold - the minimum period of time (in minutes) for which occupancy needs to be detected in order to enter the "Guest Occupancy" mode;

Night Occupancy Threshold - the minimum period of time during the Night Occupancy period for which occupancy needs to be detected in order to enter the Night Occupancy mode;

Night Occupancy Period - The period of time during the day during which the Night Occupancy mode can be activated if occupancy longer than the Night Occupancy Threshold is detected;

"Auto Restore On" - thermostat will restore the most recent guest settings when new occupancy is detected;

"Auto Restore Off" - thermostat will NOT restore the most recent guest and will remain turned off settings when new occupancy is detected;

"Setback Set points On" - thermostat will maintain setback temperatures when room is unoccupied;

"Setback Set points Off" - thermostat will NOT maintain setback temperatures when room is unoccupied;

"Incidental Occupancy" - occupancy shorter than the Incidental Occupancy Threshold;

"Guest Occupancy" - occupancy longer than the Incidental Occupancy Threshold;

"Temperature Setback" - thermostat maintains setback temperatures and not the guest set point temperature in order to save energy;

"Night Occupancy Mode" - thermostat status during which setback mode is disabled if occupancy longer than Night Occupancy Threshold is detected within the "Night Occupancy" period;

"Automatic Temperature Changeover" - thermostat automatically activates heating or cooling to maintain the desired room temperature;

"External Thermostat" (Class 2) mode - HVAC unit setting allowing it to be controlled by a remote thermostat;

Warranty Information

Refer to www.verdant.co/verdant-warranty information.

Technical Specifications

Product Type		Thermostat
White Model	Black Model	Description
VRPXEMRTA4*	VRPXEMRTB4*	RS-485 12VDC Communicating
VRPXWCTA4*		RS-485 12VDC Communicating no occupancy
Wireless Frequency	902-928MHz	
Case Dimensions	5.60 x 3.46" x 0.937" (142.3mm x 88mm x 23.8mm)	
Screen Dimensions	2.60" x 1.5" (66.1mm x 38.1mm)	
Operating Voltage	12VDC	
Control Outputs (24VAC) (1.5A maximum per terminal, 2.5A maximum all terminals combined)	V+	
	Data A	
	Data B	
	V- / GND	
Power Supply Outlet	N/A	
Occupancy Sensor Detection Range	Horizontal (FOV 100°)	
Temperature Accuracy	±1°F	
Enclosure Material	SABIC PC/ABS CYCOLOY C2800	
Ambient Operating Temp	32°F -105°F 0 - 41°C	
FCC ID	2A4JN-VX4001	
IC	28229-VX4001	

Technical Specifications

Technical Specifications for Thermostats (cont'd)

Product Type

Product Type	Gateway
SKU(s)	EMOCT4
Wireless Frequency	N/A
Case Dimensions	4.72" x 3.15" x 1.18" 120mm x 80mm x 30mm
Operating Voltage	12VDC 1.5A

Product Type

Product Type	Gateway	
Control Outputs (24VAC/12VDC) (1.5A maximum per terminal, 2.5A maximum all terminals combined)	N/A	
Power Supply Outlet	N/A	N/A
Occupancy Sensor Beam Width	N/A	N/A
Temperature Accuracy	N/A	N/A
Enclosure Material	Extruded Aluminum	
Ambient Operating Temp	32°F - 105°F 0 - 41°C	
Internet Connectivity	100M/1000M Base-T Ethernet	
FCC ID		
IC		

Technical Specifications

Product Type	Root Node	Sensors
SKU(s)	ZX-RN	EMRWOS4 EMRDS4 EMRTS4
Wireless Frequency	902-928MHz	902-928MHz
Case Dimensions	2.4" x 1.54" x 0.78" 46mm x 61mm x 19mm	1.82" x 2.4" x 0.74" 46mm x 61mm x 19mm
Operating Voltage	+5VDC (nom.)	2 1.5VDC AAA Alkaline Non-rechargeable Batteries - Not Supplied
Control Outputs (24VAC) (1.5A maximum per terminal, 2.5A maxi- mum all terminals combined)	N/A	N/A
Power Supply Outlet	N/A	N/A
Occupancy Sensor Beam Width	N/A	±47° (94°)
Temperature Ac- curacy	±1°F	±1°F
Enclosure Material	ABS (AF312C(LG CHEM))	ABS+PC (TAIRILOY® AC3100 (Formosa Chemicals & Fibre Corporation))
Ambient Operating Temp	32°F -105°F 0 - 41°C	32°F -105°F 0 - 41°C
Internet Connectivity	N/A	
FCC ID	XEY-ZX-RN	XEYZ9RF
IC	8410A-ZXRN	8410A-Z9RF



THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radio électrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotroperayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

COVERED BY ONE OR MORE OF THE FOLLOWING PATENTS. US PATENTS: 8,369,994; 8,141,791; 7,918,406; 7,232,075; 7,185,825; 7,156,318; 7,152,806; 7,145,110; 7,050,026; 7,028,912; 6,902,117; 6,789,739; 6,786,421; 6,619,555; 6,581,846; 6,578,770; 7,838,803; 7,841,542; D556,061; D518,744; RE40,437; CANADIAN PATENTS: 2,633,113; 2,633,200; OTHER PATENTS PENDING.

Verdant Environmental Technologies, Inc. reserves the right to make changes, without notice, in design or components. Product appearance may vary. © Verdant Environmental Technologies, Inc. 2024.

Printed in Canada. NOVEMBER 2024

TECHNICAL SUPPORT: verdant.support@copeland.com 1-877-318-1823