



FRIEDRICH ZONEAIRE® PREMIER

Packaged Terminal Air Conditioners

ZoneAire® Premier PTAC - R32

THE QUIETEST* standard PTAC you can buy

The most efficient, reliable and quietest standard Friedrich PTAC

Features

Energy Efficient & Energy Smart

- Super-efficient refrigeration design with EERs up to 13.3 and COP up to 3.6
- R-32 refrigerant with low Global Warming Potential
- Exceptional energy management thermostats available (wired & wireless) with integrated occupancy sensor, five distinct energy presets and comprehensive remote management capability*
- Advanced coil design adds more surface area leading to higher efficiencies
- Thicker steel inner-wall and foam construction decreases thermal transfer and energy loss
- Energy efficient heat pump models available in the complete line
- Electronic defrost control ensures more run time in efficient heat pump mode
- Electronic temperature limiting to adjust low/high temperature range limits for reduced energy usage
- Slinger ring technology in condensate removal system cools the coil and increases efficiency
- Desk control ready to allow hotel owners to control units from a central location


DIAMONBLUE™
Advanced Corrosion Protection



Protects the outdoor coil against deterioration and extends the life of the unit especially in harsh coastal environments



PRODUCT FEATURES

DIGITAL TEMPERATURE READOUT	By digitally monitoring the desired room temperature, the room is controlled more precisely than conventional systems. The large, easy-to-read LED display can show either the setpoint or actual room temperature as selected by owner.
ONE-TOUCH OPERATION	When the unit is powered off, the unit can be returned directly to heating or cooling mode by pressing the 'Heat' or 'Cool' buttons without the confusing power up sequence of some controls. One-touch control takes the guesswork out of unit control, delivering a more enjoyable experience and eliminating front-desk calls.
FAN SPEED MODE	Friedrich PTAC/PTHP units feature two fan speeds and AUTO mode for the user to select from. This allows the user to properly select the amount of airflow for the desired comfort level and also deliver quiet performance.
CONSTANT FAN MODE	Pressing the Constant Fan Mode button will provide continuous fan operation in cooling or heating modes. The fan speed selection is made by pressing either "High" or "Low" fan speed button
INDIVIDUAL MODE & FAN CONTROL BUTTONS	By having separate control buttons and indicators for both fan and mode settings, the Friedrich digital control eliminates the confusion of previous digital PTACs. The accurate temperature setting provides greater guest comfort than other systems.
QUIET START/STOP FAN DELAY	The fan start and stop delays prevent abrupt changes in room acoustics due to the compressor energizing or stopping immediately. Upon call for cooling or heating, the unit fan will run for five seconds prior to energizing the compressor. Also, the fan-off delay allows for "free cooling" by utilizing the already cool indoor coil to its maximum capacity by running for 30 seconds after the compressor.
REMOTE THERMOSTAT OPERATION	Some applications require the use of a wall-mounted thermostat. All new Friedrich PTACs may be switched from unit control to remote thermostat control easily without the need to order a special model or accessory kit.
INTERNAL DIAGNOSTIC PROGRAM	The Friedrich digital PTAC features a self-diagnostic program that can alert maintenance to component failures or operating problems. The internal diagnostic program saves properties valuable time when diagnosing operating problems.
SERVICE ERROR CODE STORAGE	All Friedrich PTAC units have self-diagnostic features that will store trouble codes in the case of an event. Storing the codes allows the property to see the trouble codes at a future time after the condition may have corrected.
ROOM FREEZE PROTECTION	When the PTAC senses that the indoor room temperature has fallen to 40°F, the unit will cycle on the fan (high) and the electric strip heat to raise the room temperature to 46°F, and then cycle off again. This feature works regardless of the mode selected and can be turned off. The control will also store the Room Freeze cycle in the service code memory for retrieval at a later date. This feature ensures that unoccupied rooms do not reach freezing levels where damage can occur to plumbing and fixtures.
RANDOM COMPRESSOR RESTART	Multiple compressors starting at once can often cause electrical overloads and premature unit failure. The random restart delay eliminates multiple units from starting at once following a power outage or initial power up. The compressor delay will range from 180 to 240 seconds.
CONDENSATE REMOVAL SYSTEM	Condenser fan utilizes slinger ring technology to pick up condensate from the base pan and disperse it on to the condenser coil where it evaporates. This helps to cool the coil and increase the energy efficiency of the unit.

PRODUCT FEATURES

ELECTRONIC TEMPERATURE LIMITING	By limiting the operating range, the property can save energy by eliminating “max cool” or “max heat” situations common with older uncontrolled systems. The new electronic control allows owners to set operating ranges for both heating and cooling independently of one another.
DIAMONBLUE ADVANCED CORROSION PROTECTION®	Diamonblue Advanced Corrosion Protection® protects the outdoor coil from harsh environments. Standard on all models.
DIGITAL DEFROST THERMOSTAT	The PD Series uses a digital thermostat to accurately monitor the outdoor coil conditions to allow the heat pump to run whenever conditions are correct. Running the PTAC in heat pump mode saves energy and reduces operating costs. The digital thermostat allows maximization of heat pump run time.
INSTANT HEAT MODE FOR HEAT PUMPS	Heat pump models will automatically run the electric heater to quickly bring the room up to temperature when initially energized, then return to heat pump mode. This ensures that the room is brought up to temperature quickly without the usual delay associated with heat pump units.
EVEN HEAT MONITORING	The digital control monitors indoor conditions, ensuring room temperature is within 5°F of the setpoint. If needed, the unit will briefly cycle the electric heater to maintain temperature. This feature preserves the efficiency benefits of a heat pump while ensuring guest comfort.
SEPARATE HEAT/COOL FAN CYCLE CONTROL	Using the “Constant Fan” one may choose between fan cycling or fan continuous mode based on property preference. (Note: Even heat monitoring and quiet start/stop fan delay only operate in fan cycle mode) Fan continuous mode is used to keep constant airflow circulation in the room during all times the unit is ‘ON’. Fan cycle will conserve energy by only operating the fan while the compressor or electric heater is operating. The ability to set the fan cycling condition independently between heating and cooling mode will increase user comfort by allowing the choice of only constantly circulating air in the summer or winter time (unlike other PTAC brands that only allow one selection).
EMERGENCY HEAT OVERRIDE	In the event of a compressor failure in heat pump mode, the compressor may be locked out to provide heat through the resistance heater. This feature ensures that even in the unlikely event of a compressor failure, the room temperature can be maintained until the compressor can be serviced.
CENTRAL DESK CONTROL READY	All Friedrich digital PTACs have low voltage terminals ready to connect a desk control energy management system. Controlling the unit from a remote location like the front desk can reduce energy usage and requires no additional accessories on the PTAC unit.
INDOOR COIL FROST SENSOR	The frost sensor protects the compressor from damage in the event that airflow is reduced or low outdoor temperatures cause the indoor coil to freeze. When the indoor coil reaches 30°F, the compressor is disabled and the fan continues to operate based on demand. Once the coil temperature returns to 45°F, the compressor returns to operation.
ULTRAQUIET AIR SYSTEM	The PD Series units feature an indoor fan system design that reduces sound levels without lowering airflow or preventing proper air circulation.
HIGH EFFICIENCY	The Friedrich PTAC has been engineered so that all functional systems are optimized so that they work together to deliver the highest possible performance.
DUAL MOTOR	The dual-motor design means that the indoor motor can run at slower speeds which reduces sound levels indoors.
ROTARY COMPRESSOR	High efficiency rotary compressors are used on all Friedrich PTACs to maximize durability and efficiency.
STAINLESS STEEL ENDPLATES	Outdoor coil endplates made from stainless steel reduce corrosion on the outdoor coil common with other coil designs.
TOP-MOUNTED WASHABLE AIR FILTERS	All Friedrich PTAC return air filters feature top-mounted air filters. All filters are washable, reusable and easily accessed from the top of the unit without the removal of the front cover.
FILTERED FRESH AIR INTAKE	Friedrich PTAC units are capable of introducing up to 75 CFM of outside air into the conditioned space. The outdoor air passes through a washable mesh screen to prevent debris from entering the airstream.
R32 REFRIGERANT	Friedrich PTAC units use environmentally-friendly low GWP refrigerant.
FRESH-AIRE IAQ READY	A full complement of Indoor Air Quality Products has been certified through installation and testing to ensure exceptional air quality is achieved when optional FreshAire® IAQ accessories are added.

ZoneAire® Premier PTAC

SPECIFICATIONS

ELECTRIC HEAT MODELS, R-32 REFRIGERANT

Models ending in 'K' are 230/208V, models ending in 'R' are 265V

Model	PDE07K3SGR3	PDE07R3SGR3	PDE09K3SGR3	PDE09R3SGR3	PDE12K3SGR3	PDE12R3SGR3	PDE15K5SGR3	PDE15R5SGR3
PERFORMANCE DATA								
Cooling Btu	7,400/7,200	7,500	10,200/9,900	10,000	12,300/12,100	12,300	14,700/14,400	14,800
Cooling Watts	560/540	560	810/790	800	1,060/1,020	1,060	1,420/1,380	1,400
Energy Efficiency Ratio, EER	13.0/13.0	13.3	12.5/12.5	12.5	11.6/11.8	11.6	10.4/10.6	10.6
Heater Size (kW)	3.5	3.5	3.5	3.5	3.5	3.5	5	5
Moisture Removal (pints/hr.)	1.69	1.69	2.11	2.11	2.74	2.74	3.17	3.17
Sensible Heat Ratio	86%	86%	85%	85%	75%	75%	67%	67%
ELECTRICAL DATA								
Voltage (1 Phase, 60 Hz)	230/208	265	230/208	265	230/208	265	230/208	265
Volt Range	253 – 187	292 – 239	253 – 187	292 – 239	253 – 187	292 – 239	253 – 187	292 – 239
Current (Amps)	2.4/2.6	2.1	3.6/3.9	3.2	4.7/5.0	4.0	6.0/6.5	5.3
Electric Heater (Amps)	15.0	13.1	15.0	13.1	15.0	13.1	21.8	18.9
Power Factor	0.97	0.97	0.97	0.97	0.97	0.97	0.97	0.97
Compressor LRA	13.0	12.0	17.0	15.0	30.0	21.0	35.2	26.0
Compressor RLA	2.16	2.2	3.1	3.4	4.0	3.3	5.0	6.4
Outdoor Fan Motor, HP	0.080	0.080	0.080	0.080	0.086	0.086	0.086	0.086
AIRFLOW DATA								
Indoor CFM, HIGH	311.9	311.9	330	330	341.33	341.33	341	341.33
Indoor CFM, LOW	282.48	282.48	282	282	306.02	306.02	306	306.02
Vent CFM	75	75	75	75	75	75	75	75
PHYSICAL DATA								
Sleeve Dimensions (H x W x D)	16" x 42" x 13 3/4" (all models)							
Dimensions with Front (H x W x D)	16" x 42" x 21 1/2" (all models)							
Cut Out Dimensions (H x W x D)	16 1/4" x 42 1/4" (all models)							
Net Weight (lbs.)	110.25	110.25	110.3	110.3	114.66	114.66	114.7	114.7
Shipping Weight (lbs.)	132.3	132.3	132.3	132.3	136.71	136.71	136.7	136.7
R-32 Charge (oz.)	17.64	17.64	17.28	17.28	21.16	21.16	19.75	19.79
Dimensions with Packaging (inches)	17 7/8" x 45" x 25 1/4" (all models)							

		230/208V ELECTRIC HEATER RATING		
		(CONFIGURATION BASED ON POWER CORD)		
POWER CORD #	VOLTAGE	BRANCH CKT AMPS	MCA	WATTS
PXPCZ23015A	230/208	15	13.9	2,500
PXPCZ23020A	230/208	20	19.9	3,600
PXPCZ23030A	230/208	30	27.5	5,000
PXPCZ26515A	265V	15	12.0	2,500
PXPCZ26520A	265V	20	16.8	3,500
PXPCZ26530A	265V	20	23.8	5,000

Receptacles and Fuse Types						
Voltage	230V			265V		
Heater Size	2.5 kW	3.5 kW	5.0 kW	2.5 kW	3.5 kW	5.0 kW
Receptacles						
NEMA# Receptacle	6-15R	6-20R	6-30R	7-15R	7-20R	7-30R
NEMA# Plug	6-15P	6-20P	6-30P	7-15P	7-20P	7-30P

Standard power cord installed on each unit (7-12k-3.5KW), (15K-5.0 KW)

Due to continuing research in new energy-saving technology, specifications are subject to change without notice. Warranty limited to installations in the United States, Puerto Rico, Mexico and Canada only. See warranty documentation for full details



ZoneAire® Premier PTAC

SPECIFICATIONS

HEAT PUMP MODELS, R-32 REFRIGERANT

Models ending in 'K' are 230/208V, models ending in 'R' are 265V

Model	PDH07K3SGR3	PDH07R3SGR3	PDH09K3SGR3	PDH09R3SGR3	PDH12K3SGR3	PDH12R3SGR3	PDH15K5SGR3	PDH15R5SGR3
PERFORMANCE DATA								
Cooling Btu	7,400/7,200	7,300	9,700/9,400	9,800	12,100/11,900	12,000	14,600/14,200	14,500
Cooling Watts	570/560	560	800/780	810	1,040/1,000	1,030	1,400/1,360	1,390
Energy Efficiency Ratio, EER	13.0/13.0	13.0	12.1/12.1	12.1	11.6/11.8	11.6	10.4/10.4	10.4
Heater Size (kW)	3.5	3.5	3.5	3.5	3.5	3.5	5	5
Reverse Heating Btu	6,000/5,800	6,000	8,500/8,200	8,600	10,900/10,700	10,700	13,800/13,300	13,300
Heating Watts	490/460	490	690/670	690	940/900	920	1,310/1,250	1,250
COP (W/W)	3.6/3.6	3.6	3.6/3.6	3.65	3.4/3.46	3.4	3.1/3.1	3.1
Moisture Removal (pints/hr.)	1.69	1.69	2.11	2.11	2.75	2.75	3.17	3.17
Sensible Heat Ratio	83/80%	83%	75%	75%	70%	70%	---	---
ELECTRICAL DATA								
Voltage (1 PHASE, 60 Hz)	230/208	265	230/208	265	230/208	265	230/208	265
Volt Range	253-187.2	238.5-291.5	253-187	292-239	253-187	292-239	253-187	292-239
Current (Amps)	2.4/2.6	2.1	3.6/3.9	3.1	4.6/4.9	4	6.0/6.5	5.3
Electric Heater (Amps)	15.0	13.1	15.0	13.1	15.0	13.1	21.8	18.9
Reverse Heat (Amps)	2.1/2.3	1.8	3.1/3.2	2.6	4.1/4.3	3.5	5.6/5.9	4.7
Power Factor	0.99/1.0	1.0	0.99	0.99	0.99	0.99	---	---
Compressor LRA	13	12	17	15	30	21	35.2	26
Compressor RLA	2.16	2.2	3.1	3.4	4.0	4.5	5	6.4
Outdoor Fan Motor, HP	0.08	0.08	0.08	0.08	0.08	0.08	0.08	0.08
AIRFLOW DATA								
Indoor CFM, HIGH	311.9	311.9	330	330	340	341	341	341
Indoor CFM, LOW	282.48	282.48	282	282	306	306	306	306
Outdoor Air	75	75	52	52	52	52	75	75
PHYSICAL DATA								
Sleeve Dimensions (H x W x D)	16" x 42" x 13 3/4" (all models)							
Dimensions with front (H x W x D)	16" x 42" x 21" (all models)							
Cut Out Dimensions (H x W)	16 1/4" x 42 1/4" (all models)							
Net Weight (lbs.)	112.45	112.45	115	115	119	119	120	120
Shipping Weight (lbs.)	134.5	134.5	135	135	141	141	142	142
R-32 Charge (oz.)	27.51	27.51	24.7	24.7	20.92	28.9	29.63	28.57
Dimensions with Packaging (inches)	17 7/8" x 45" x 25 1/4" (all models)							

		230/208V ELECTRIC HEATER RATING		
		(CONFIGURATION BASED ON POWER CORD)		
POWER CORD #	VOLTAGE	BRANCH CKT AMPS	MCA	WATTS
PXPCZ23015A	230/208	15	13.9	2,500
PXPCZ23020A	230/208	20	19.9	3,600
PXPCZ23030A	230/208	30	27.5	5,000
PXPCZ26515A	265V	15	12.0	2,500
PXPCZ26520A	265V	20	16.8	3,500
PXPCZ26530A	265V	20	23.8	5,000

Receptacles and Fuse Types						
Voltage	230V			265V		
Heater Size	2.5 kW	3.5 kW	5.0 kW	2.5 kW	3.5 kW	5.0 kW
Receptacles						
NEMA# Receptacle	6-15R	6-20R	6-30R	7-15R	7-20R	7-30R
NEMA# Plug	6-15P	6-20P	6-30P	7-15P	7-20P	7-30P

Standard power cord installed on each unit (7-12k-3.5KW), (15K-5.0 KW)

Due to continuing research in new energy-saving technology, specifications are subject to change without notice. Warranty limited to installations in the United States, Puerto Rico, Mexico and Canada only. See warranty documentation for full details



COOLING PERFORMANCE

PDE/PDH 230/265 V - Extended Cooling Performance

		OUTDOOR DRY BULB TEMP. (DEGREES F AT 40% R.H.)																		
		75F			85F			95F			105F			110F			115F			
		INDOOR WET BULB TEMP. (DEGREES F AT 80° F D.B.)																		
		72F	67F	62F	72F	67F	62F	72F	67F	62F	72F	67F	62F	72F	67F	62F	72F	67F	62F	
PDX07K	Btu	8687	8376	7786	8259	7789	7205	7939	7400	6567	7438	6621	5876	6678	5743	5132	5789	4789	4154	
	Watts	453	461	473	495	501	506	560	560	560	606	610	613	648	642	645	725	721	718	
	Amps	2.10	2.10	2.10	2.20	2.20	2.20	2.40	2.40	2.40	2.60	2.60	2.60	2.80	2.80	2.80	3.10	3.10	3.10	
	SHR	0.59	0.8	0.9	0.6	0.83	0.9	0.61	0.85	0.9	0.64	0.9	0.96	0.67	0.96	0.98	0.7	0.98	0.99	
PDX09K	Btu	11921	11532	10783	11312	10785	9985	10882	10200	9076	10123	9054	8051	9043	7824	6954	7824	6611	5783	
	Watts	654	662	674	720	728	739	810	810	810	872	884	893	941	947	943	1012	1008	1014	
	Amps	3.10	3.10	3.10	3.40	3.40	3.40	3.60	3.60	3.60	3.90	3.90	3.90	4.20	4.20	4.20	4.50	4.50	4.50	
	SHR	0.57	0.8	0.95	0.59	0.82	0.97	0.6	0.85	0.96	0.64	0.9	0.98	0.67	0.96	0.98	0.70	0.98	0.99	
PDX12K	Btu	14456	13965	12937	13728	12987	12025	13197	12300	10943	12245	10875	9675	10869	9421	8369	9383	8076	7048	
	Watts	862	871	883	940	952	961	1060	1060	1060	1124	1130	1127	1217	1213	1210	1315	1317	1312	
	Amps	4.10	4.10	4.10	4.40	4.40	4.40	4.70	4.70	4.70	5.00	5.00	5.00	5.40	5.40	5.40	5.80	5.80	5.80	
	SHR	0.5	0.73	0.94	0.51	0.75	0.95	0.52	0.75	0.95	0.55	0.8	0.97	0.58	0.85	0.98	0.61	0.89	0.99	
PDX15K	Btu	17346	16645	15426	16435	15327	14389	15618	14700	13045	14785	13146	11657	13198	11402	10105	11542	10097	8765	
	Watts	1160	1169	1178	1258	1269	1277	1420	1420	1420	1513	1510	1512	1625	1622	1620	1770	1765	1763	
	Amps	5.00	5.00	5.00	5.40	5.40	5.40	6.00	6.00	6.00	6.40	6.40	6.40	6.90	6.90	6.90	7.50	7.50	7.50	
	SHR	0.42	0.61	0.82	0.44	0.63	0.84	0.45	0.65	0.84	0.48	0.7	0.87	0.51	0.75	0.86	0.53	0.77	0.88	
PDX07R	Btu	8796	8489	7903	8296	7868	7342	7825	7500	6453	7315	6489	5767	6567	5612	5010	5613	4625	4035	
	Watts	476	483	494	509	517	528	560	560	560	613	617	620	666	663	665	745	740	745	
	Amps	1.90	1.90	1.90	2.00	2.00	2.00	2.10	2.10	2.10	2.30	2.30	2.30	2.50	2.50	2.50	2.80	2.80	2.80	
	SHR	0.59	0.83	0.89	0.6	0.85	0.9	0.61	0.85	0.9	0.64	0.9	0.96	0.67	0.96	0.98	0.7	0.98	0.99	
PDX09R	Btu	11735	11365	10612	11145	10801	9823	10653	10000	8865	9879	8815	7812	8799	7576	6712	7699	6486	5525	
	Watts	676	688	697	734	745	753	800	800	800	857	852	856	925	927	920	1003	1006	105	
	Amps	2.80	2.80	2.80	3.00	3.00	3.00	3.20	3.20	3.20	3.40	3.40	3.40	3.70	3.70	3.70	4.00	4.00	4.00	
	SHR	0.58	0.83	0.89	0.6	0.85	0.9	0.61	0.85	0.9	0.64	0.9	0.98	0.67	0.96	0.98	0.7	0.98	0.99	
PDX12R	Btu	14421	13927	12901	13697	12976	12014	13183	12300	10923	12189	10812	9653	10843	9396	8334	9361	8024	7013	
	Watts	886	893	901	947	963	972	1060	1060	1060	1140	1142	1145	1245	1240	1249	1350	1352	1355	
	Amps	3.50	3.50	3.50	3.70	3.70	3.70	4.00	4.00	4.00	4.30	4.30	4.30	4.70	4.70	4.70	5.10	5.10	5.10	
	SHR	0.48	0.73	0.94	0.5	0.75	0.95	0.52	0.75	0.95	0.55	0.8	0.97	0.58	0.85	0.98	0.61	0.89	0.99	
PDX15R	Btu	17459	16738	15537	16527	15434	14503	15759	14800	13165	14835	13205	11735	13267	11524	10237	11678	10203	8904	
	Watts	1153	1166	1179	1253	1264	1271	1400	1400	1400	1505	1500	1509	1610	1607	1615	1740	1743	1748	
	Amps	4.50	4.50	4.50	4.90	4.90	4.90	5.30	5.30	5.30	5.70	5.70	5.70	6.10	6.10	6.10	6.60	6.60	6.60	
	SHR	0.41	0.63	0.82	0.43	0.65	0.84	0.45	0.65	0.84	0.48	0.7	0.87	0.51	0.75	0.86	0.53	0.77	0.88	
							RATING POINT ARI 310/380													

HEATING PERFORMANCE

PDH 230/265 V - Extended Heating Performance

		OUTDOOR DRY BULB TEMP. (DEGREES F)				
		37F	42F	47F	52F	57F
PDH07K	Btu	5106	5342	6000	6689	7346
	Watts	462	473	490	513	536
	Amps	2.00	2.10	2.10	2.20	2.30
PDH09K	Btu	6398	6812	8500	9021	9721
	Watts	651	667	690	719	731
	Amps	3.00	3.00	3.10	3.10	3.20
PDH12K	Btu	8012	8831	10900	11534	12487
	Watts	865	889	940	985	1030
	Amps	3.80	3.90	4.10	4.30	4.50
PDH15K	Btu	11098	11378	13800	15097	16438
	Watts	1165	1216	1310	1370	1426
	Amps	5.00	5.20	5.60	5.90	6.20
PDH07R	Btu	5073	5315	6000	6649	7325
	Watts	460	476	490	503	520
	Amps	1.70	1.80	1.80	1.80	1.90
PDH09R	Btu	6501	6921	8600	9113	9835
	Watts	650	665	690	717	728
	Amps	2.50	2.50	2.60	2.60	2.70
PDH12R	Btu	7869	8614	10700	11301	12257
	Watts	870	890	920	953	981
	Amps	3.30	3.40	3.50	3.60	3.70
PDH15R	Btu	10569	18828	13300	14567	15967
	Watts	1115	1143	1250	1327	1378
	Amps	4.20	4.30	4.70	5.00	5.20
		RATING POINT ARI 310/380				

ELECTRIC HEAT DATA

Electric Heat Data



	PDE/PDH07K				PDE/PDH07R	
HEATER WATTS	2450	2003	3450	2821	2450	3450
VOLTAGE	230	208	230	208	265	
HEATING BTU	8300	6800	11700	9600	8300	11700
HEATING CURRENT (AMPS)	10.7	9.7	15.0	13.6	9.3	13.1
MINIMUM CIRCUIT AMPACITY	14.0	14.0	19.0	19.0	12.0	17.0
MAXIMUM OVER CURRENT PROTECTION (MOP/MOCP)/BRANCH CIRCUIT FUSE (AMPS)	15.0	15.0	20.0	20.0	15.0	20.0

	PDE/PDH09K						PDE/PDH09R		
HEATER WATTS	2450	2003	3450	2821	5000	4089	2450	3450	5000
VOLTAGE	230	208	230	208	230	208	265		
HEATING BTU	8300	6800	11700	9600	17000	13900	8300	11700	7000
HEATING CURRENT (AMPS)	10.7	9.7	15.0	13.6	21.8	19.7	9.3	13.1	18.9
MINIMUM CIRCUIT AMPACITY	14.0	14.0	19.0	19.0	28.0	28.0	12.0	17.0	24.0
MAXIMUM OVER CURRENT PROTECTION (MOP/MOCP)/BRANCH CIRCUIT FUSE (AMPS)	15.0	15.0	20.0	20.0	30.0	30.0	15.0	20.0	25.0

	PDE/PDH12K						PDE/PDH12R		
HEATER WATTS	2450	2003	3450	2821	5000	4089	2450	3450	5000
VOLTAGE	230	208	230	208	230	208	265		
HEATING BTU	8300	6800	11700	9600	7000	13900	8300	11700	17000
HEATING CURRENT (AMPS)	10.7	9.7	15.0	13.6	21.8	19.7	9.3	13.1	18.9
MINIMUM CIRCUIT AMPACITY	14.0	14.0	19.0	19.0	28.0	28.0	12.0	17.0	24.0
MAXIMUM OVER CURRENT PROTECTION (MOP/MOCP)/BRANCH CIRCUIT FUSE (AMPS)	15.0	15.0	20.0	20.0	30.0	30.0	15.0	20.0	25.0

	PDE/PDH15K						PDE/PDH15R		
HEATER WATTS	2450	2003	3450	2821	5000	4089	2450	3450	5000
VOLTAGE	230	208	230	208	230	208	265		
HEATING BTU	8300	6800	11700	9600	17000	13900	8300	11700	17000
HEATING CURRENT (AMPS)	10.7	9.7	15.0	13.6	21.8	19.7	9.3	13.1	18.9
MINIMUM CIRCUIT AMPACITY	14.0	14.0	19.0	19.0	28.0	28.0	12.0	17.0	24.0
MAXIMUM OVER CURRENT PROTECTION (MOP/MOCP)/BRANCH CIRCUIT FUSE (AMPS)	15.0	15.0	20.0	20.0	30.0	30.0	15.0	20.0	25.0

MODEL IDENTIFICATION / COMPONENTS

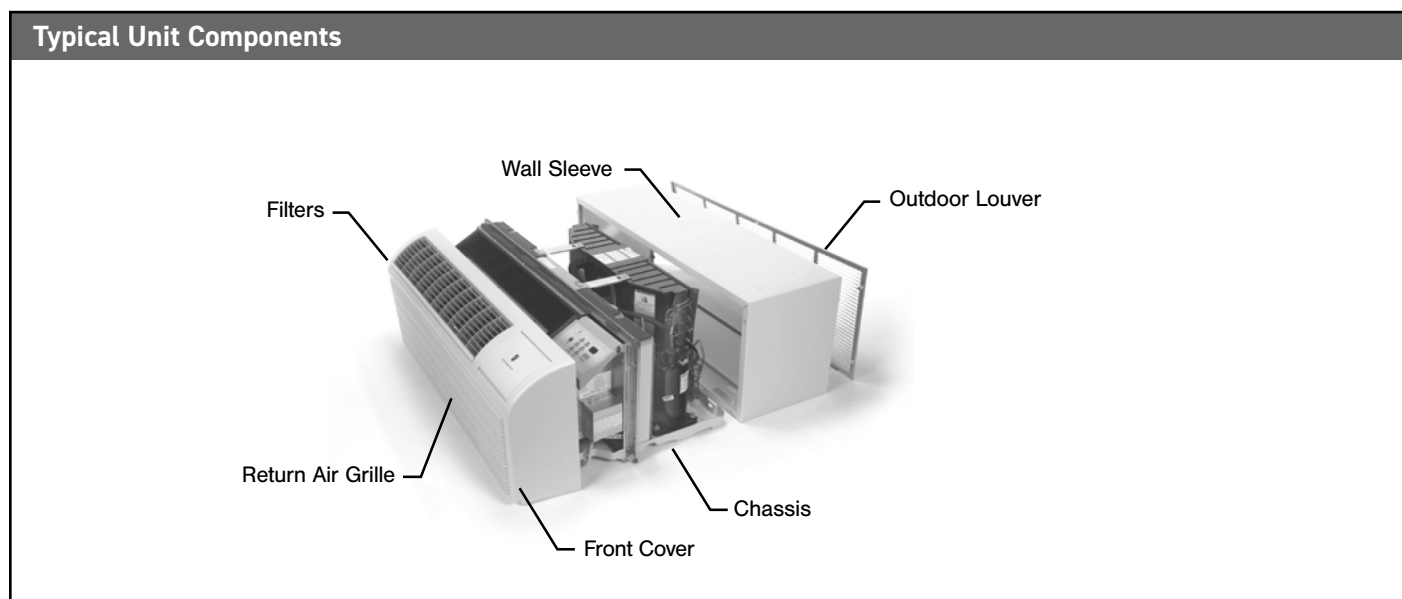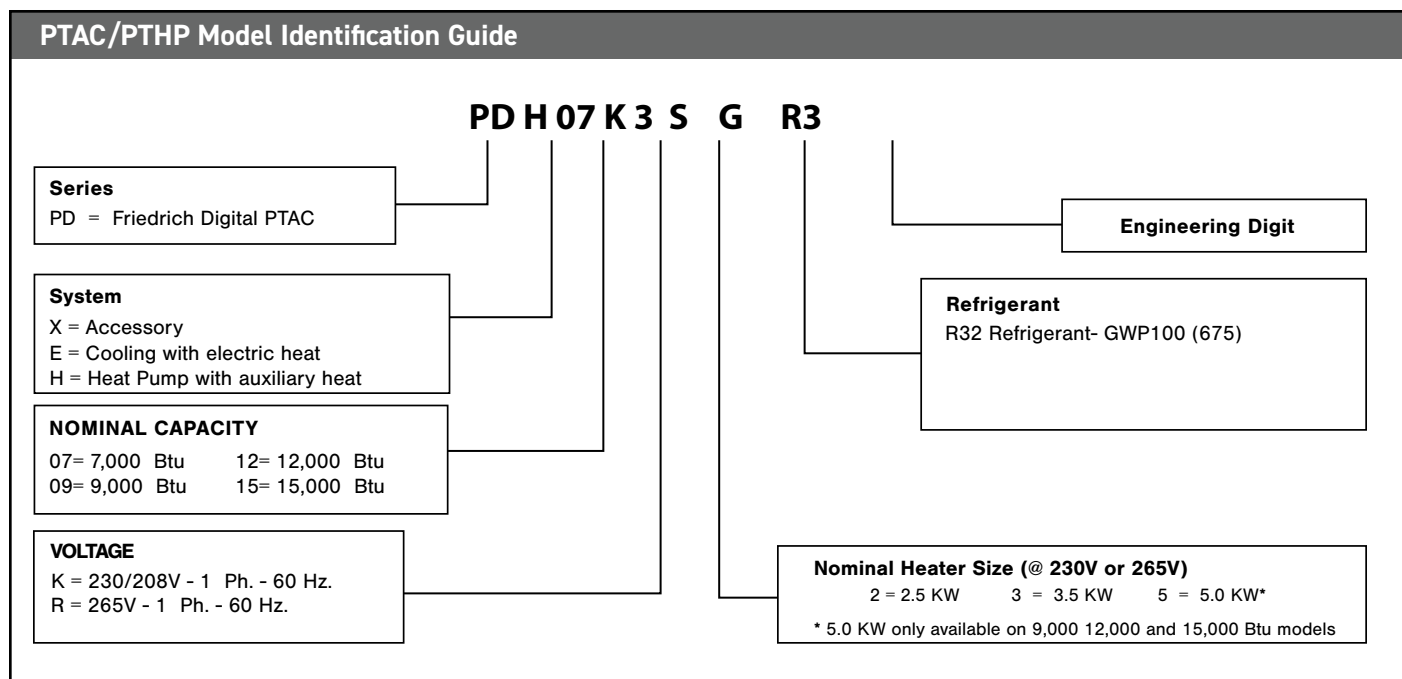

PURCHASER	P.O. #	DATE
PROJECT	LOCATION	
ENGINEER	ARCHITECT	
SUBMITTED BY	FOR APPROVAL	FOR REFERENCE

ITEM	PLAN DESIGNATION	QUANTITY	COOLING Btu	VOLTAGE	FRIEDRICH MODEL

Accessories

PDXWSA	Standard Wall Sleeve	Qty	
PDXWSEZ	Easy Wall Sleeve	Qty	
PDXWSEXT18	Deep Wall Sleeve- For walls up to 17 1/2" deep	Qty	
PDXWSEXT24	Deep Wall Sleeve- For walls up to 23 1/2" deep	Qty	
PDXWSEXT	Custom Deep Wall Sleeve, For walls from 13 1/4" to 25 1/2" deep	Qty	
PXGA	Standard Outdoor Louver	Qty	
PXAA	Architectural Louver, clear	Qty	
PXBG	Architectural Louver, beige	Qty	
PXSC	Architectural Louver, color matched	Qty	
PDXRTB	Remote Thermostat Escutcheon Kit	Qty	
PXDR10	Condensate Drain Kit (pkg/10)	Qty	
PXSBA	Sub Base	Qty	
PXCJA	Conduit Kit w/ Junction Box	Qty	
PDXDAA	Lateral Duct Adapter	Qty	
PDXDEA	Lateral Duct Extension	Qty	
PXFTA	Replacement Filters (Set of 10)	Qty	
APWM1	FreshAir® Purification iWaves Series M	Qty	

PXSB23020	Electrical Subbase - 230V 15A and 20A	Qty	
PXSB23030	Electrical Subbase - 230V 30A	Qty	
PXSB26515	Electrical Subbase - 265V 15A	Qty	
PXSB26520	Electrical Subbase - 265V 20A	Qty	
PXSB26530	Electrical Subbase - 265V 30A	Qty	
RT7	Wired Digital Thermostat	Qty	
RT7P	Wired Programmable Digital Thermostat	Qty	
EMRT4	Wired Thermostat with Occupancy Sensor	Qty	
EMWRT4	Wireless Thermostat with Occupancy Sensor	Qty	
VRPXEMRT4	Wired 12v Intelligent Controller for FreshAir PTAC	Qty	
VRPXEMWRT4	Wireless 12v Intelligent Controller for FreshAir PTAC	Qty	
WRT2	Wireless Digital Thermostat	Qty	
EMOCT4	Online Connection Kit	Qty	
EMRAF4	Remote Access Fee	Qty	
PXPC23015A	LCDI 230V 15A Cord - 2.5 kW	Qty	
PXPC23020A	LCDI 230V 20A Cord - 3.5 kW	Qty	
PXPC23030A	LCDI 230V 30A Cord - 5.0 kW	Qty	
PXPC26515A	Non-LCDI 265V 15A Cord - 2.5 kW	Qty	
PXPC26520A	Non-LCDI 265V 20A Cord - 3.5 kW	Qty	
PXPC26530	Non-LCDI 265V 30A Cord - 5.0 kW	Qty	

Features

Constant room comfort monitoring

"Instant Heat" heat pump mode quickly heats a room to the desired temperature for increased comfort

Even heat monitoring checks room temperature and automatically adds heat boost if necessary

Room freeze protection- heat initiated if temperature falls to 40°F in an unoccupied room, raising temperature to 46°F

Dual motors for quiet operation

FreshAir® IAQ Ready

Durable, powder coat paint finish Indoor coil frost sensor protects the compressor

to lengthen the life of the unit. Random compressor restart protects electrical systems from overload when power is restored

Separate heat and cool range limits Desk control ready allowing hotel owners to control units from a central location

Condensate removal system uses slinger ring technology

Electronic defrost control ensures more run time in the efficient heat pump mode

Fresh air damper control to bring in fresh outside air when desired

Washable air filters

Service error code memory storage

Emergency heat override

INSTALLATION

Typical Wall Sleeve Installation (PDXWSA)

PDXWSA Wall Sleeve Dimensions:



16" H x 42" W x 13 3/4" D

Front Cover Dimensions:

16" H x 42" W x 7 3/4" D

Cut-Out Dimensions:

16 1/4" x 42 1/4"

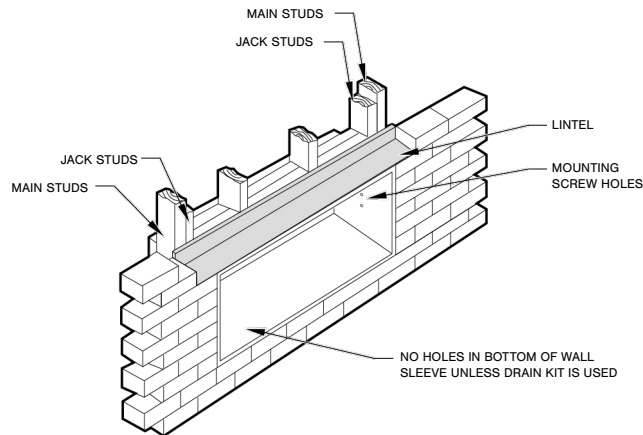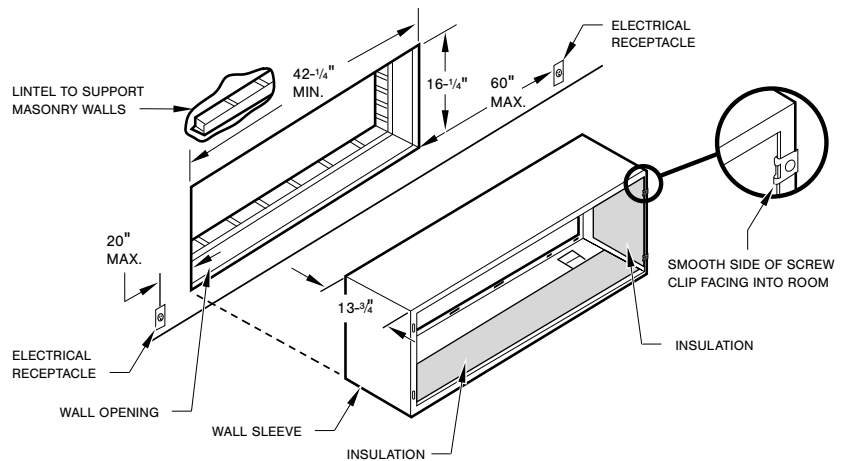


NOTE: Construct wall opening to comply with all applicable building codes.

Note the use of a lintel under the first course of bricks above the wall sleeve. Do not use the wall sleeve as a lintel. The mounting screw holes shown are to be made by the installer.

Note: All 230/208V units are manufactured with a 60" power cord and all 265V units with an 18" power cord. The receptacle locations above must be followed to ensure proper connections.


ACCESSORY INSTALLATION

Internal Drain Kit Location and Installation (PXDR10)

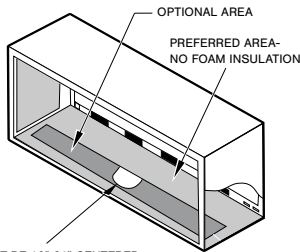


OPTIONAL AREA MUST BE 18"-21" CENTERED FROM SIDEWALLS TO ENSURE DRAINAGE.

NOTE: IF THE DRAIN MUST BE LOCATED IN THE OPTIONAL AREA, THE FOAM INSULATION MUST BE CUT AWAY AND REMOVED TO ALLOW ACCESS TO THE DRAIN.

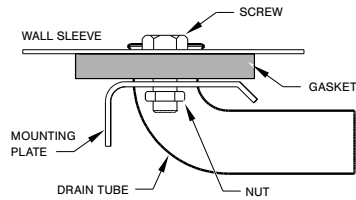

SIDE VIEW

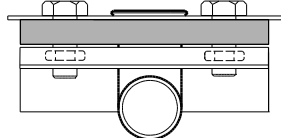

FRONT VIEW




PXDR10 DRAIN KIT

External Drain

When using an external drain system, the condensate is removed through either of two drain holes on the back of the wall sleeve. Select the drain hole which best meets your drainage situation and install the drain kit. Seal off the other with a cover plate.


Place the drain tube through the gasket and the mounting plate with the flange toward the wall sleeve.

Attach the drain tube assembly to one of the two drain holes at the rear of the wall sleeve. The large flange on the mounting plate is positioned at the bottom of the sleeve facing toward the sleeve. When the drain tube is positioned at the desired angle, tighten the screws.

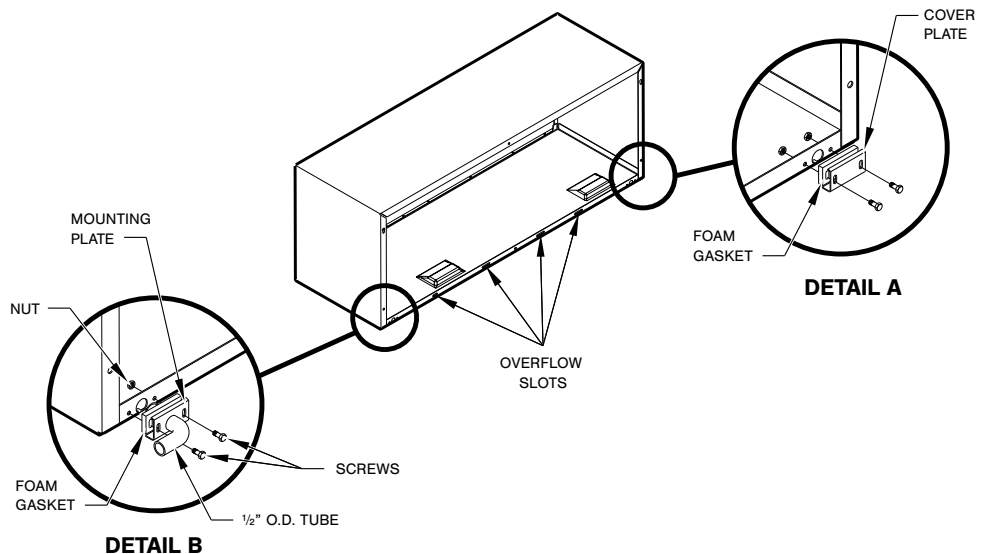

FRP012

Architectural Louver Installation (PXAA)

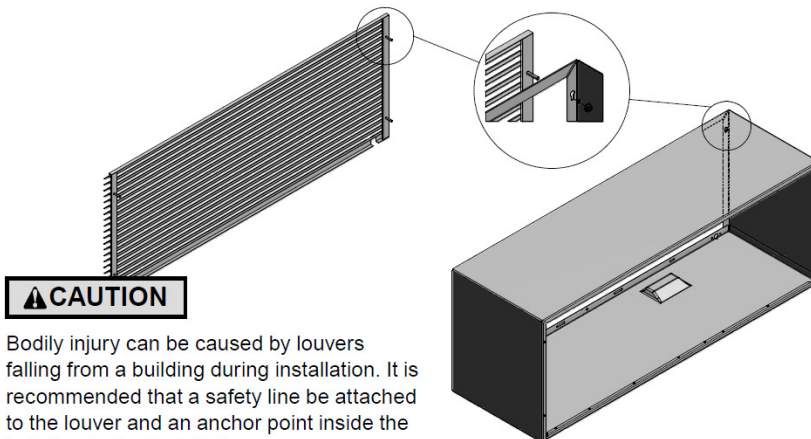

CAUTION

Bodily injury can be caused by louvers falling from a building during installation. It is recommended that a safety line be attached to the louver and an anchor point inside the building during installation.

INSTALLATION

1. Screw a threaded metal stud into each of the holes at the four corners of the louver.
2. From inside the building, grasp the louver at the vertical supports and maneuver the louver through the wall sleeve. Pull towards you until the threaded studs are inserted into the four holes of the wall sleeve.
3. While holding the louver with one hand, start washers and nuts on each of the four studs. Tighten the nuts securely.

HVAC Engineering Specifications

Digital Packaged Terminal Air Conditioners & Heat Pumps

Cooling: 7000 – 14800 Btu

Heating: 5800 – 13300 Btu (Heat Pump)
6800 – 17000 Btu (Electric Heat)

Friedrich Models: ZoneAire Premier PDE – Cooling with electric heat
PDH – Heat Pump with electric heat

All units shall be factory assembled, piped, wired and fully charged with R32. All units shall be certified in accordance with ARI Standard 310 for air conditioners and ARI standard 380 for heat pumps. Units shall be UL listed and carry a UL label. All units shall be factory run-tested to check operation and be Friedrich or equivalent.

The basic unit shall not exceed 16" high x 42" wide. Overall depth of the unit from the rear of the Friedrich wall sleeve to the front of the decorative front cover shall not exceed 21 1/4". The unit shall be designed so that room intrusion may be as little as 7 1/2". Installations in walls deeper than 13 1/4" may be accomplished with the use of a deep wall sleeve (PDXWSEXT). Unit shall draw in ambient air through both sides of an outdoor architectural louver or grille measuring 42" wide x 16" high and shall exhaust air out middle portion of the louver. The architectural louver and wall sleeve shall be designed so that the louver may be installed from the inside of the building.

REFRIGERATION SYSTEM – The refrigeration system shall be hermetically sealed and consist of a rotary compressor that is externally mounted on vibration isolators no smaller than 1 3/8" dia. x 1 1/2" high; condenser and evaporator coils constructed of copper tubes and aluminum plate fins; and capillaries as expansion devices. Unit shall have a fan slinger ring to increase efficiency and condensate disposal and have a drain pan capable of retaining 1 1/2 gallons of condensate. A tertiary condensate removal system shall also be incorporated for back up and shall overflow through the wall sleeve and to the outside of the building as a safeguard against damage to the interior room.

INDOOR AIR HANDLING SECTION – The indoor air handling section shall consist of a tangential blower wheel direct driven by a totally enclosed motor. The air handling system shall be designed to minimize airflow noise and provide smooth and consistent airflow. The indoor fan must have three fan speeds that may be selected by the user.

The indoor discharge grille shall be designed to maximize airflow throughout the room. The grille shall be reversible to allow a change in the airflow directions. The grille openings shall be sized to prevent personal injury or damage to the unit.

The front cover shall incorporate dual air filters conveniently mounted in the front of the unit. The filters must be accessible without the removal of the front cover. The filters shall be washable and reusable by cleaning with water or by vacuuming.

The chassis shall have a built-in damper capable of providing at least 75 CFM of fresh air into the conditioned area. A fine mesh screen shall filter the incoming fresh air. There must be a provision for locking the damper closed to ensure a proper seal.

OUTDOOR AIR HANDLING SECTION – The outdoor air section shall consist of a single injection molded fan shroud that incorporates the outdoor motor mount into a single piece for ease of service and assembly. The outdoor motor shall be totally enclosed, ball-bearing, permanently lubricated and directly drive the outdoor fan/slinger ring.

CONTROLS – Covered controls shall be accessible in a compartment at least 7 1/2" wide with the controls no deeper than 1 1/4" in the opening to facilitate easy operation of the unit.

The unit controls shall feature a soft blue LED readout that can display either room temperature or setpoint temperature. The unit shall receive input from the digital control panel through push buttons labeled: 'Cool', 'Heat', 'Constant Fan', 'High Fan', 'Low Fan', 'Auto Fan', '▲', '▼' and 'Power'. When 'Off', the unit may be put directly into cooling or heating mode by pressing the 'Cool' or 'Heat' button.

The unit must have the following energy saving and convenience features built-in:

- Quiet start/stop fan delay
- Fan cycle control for cooling and heating independently
- Room freeze protection
- Random compressor restart
- Electronic temperature limiting

The PTAC must also offer the ability to be controlled by a remote wall-mounted thermostat without additional accessories. Low voltage inputs will include: C (common), R (24V power), Y (cooling), GL (fan low), GH (fan high), W (heat) and O (reversing valve on PDH heat pumps only). PTAC models shall use a single stage cool/single stage heat thermostat. PTHP models shall use a single stage cool/two-stage heat thermostat. An accessory thermostat must be available from the manufacturer, RT7/RT7P or equivalent. The RT7/RT7P thermostat will provide temperature setpoint, mode selection from cool, heat and fan modes. The thermostat must also allow the selection of fan speed between high and low speed.

Other controls accessible without removal of the chassis shall include fan cycle switch, fresh air vent control and emergency heat override switch (heat pump only).

ELECTRICAL CONNECTION – All PTAC/PTHP units shall come from the factory with a power cord installed. All 230/208V power cords shall feature a leakage current detection device on the plug head. All units shall feature a 6-pin connector for removal of the power cord. The power cord shall be interchangeable to allow changes to the heater output based on the property/electrical requirements.

GENERAL CONSTRUCTION – The wall sleeve shall be constructed of 18-gauge Galvanized zinc-coated steel. It shall be prepared by a process where it is zinc phosphate pretreated and sealed with a chromate rinse, then powder coated with a polyester finish and oven cured for durability. The sleeve shall be shipped with a protective weatherboard and a structural center support, and be insulated for sound absorption and thermal efficiency. The grille or louver shall be shipped separately and made from stamped or extruded anodized aluminum. All louvers shall be in the horizontal plane.

The front panel shall attach firmly to the chassis by two hidden spring clips. As an option the cover may be attached by two screws to prevent tampering. The front panel will feature a contoured discharge with no sharp corners.

CORROSION PROTECTION – The unit shall have corrosion-resistant fans, fan shroud and drain pan for corrosion protection and to prevent rust on the side of the building below the outdoor louver. The unit shall feature corrosion resistant materials and finishes to help prevent deterioration. The outdoor coil shall have Diamonblue corrosion protection consisting of hydrophilic coated fins to prolong the life of the coil in all applications including seacoast environments. All outdoor coils shall also have stainless steel endplates to eliminate rusting of the endplates.

WARRANTY – The warranty is two years on all parts and labor and five years on the sealed system, parts and labor, including compressor, indoor and outdoor coils and refrigerant tubing.

ACCESSORIES

New Construction Accessories		
PDXWSA	WALL SLEEVE Galvanized zinc coated steel is prepared in an 11-step process, then powder coated with a polyester finish and cured in an oven for exceptional durability. The wall sleeve is insulated for sound absorption and thermal efficiency, 16" H x 42" W x 13³/₄" D.	 PDXWSA  PDXWSEXT18 shown with weather panel
PDXWSEZ	Easy snap-together design. Galvanized, zinc coated steel with a polyester finish. The wall sleeve is insulated for thermal efficiency and noise reduction.	
PDXWSEXT18	DEEP WALL SLEEVE For walls up to 17 1/2" deep.	
PDXWSEXT24	DEEP WALL SLEEVE For walls up to 23 1/2" deep.	
PDXWSEXT	CUSTOM DEEP WALL SLEEVE One piece extended wall sleeve for walls from 13 1/4" to 25 1/2" deep are available by special order.	
PXGA	GRILLE Standard, stamped aluminium, anodized to resist chalking and oxidation.	 PXGA  PXAA
PXAA PXBG PXSC	ARCHITECTURAL GRILLES Consist of heavy-gauge 6063-T5 aluminum alloy: 42" W x 16" H x 1 1/8" D. PXAA – Clear, extruded aluminum PXBG – Beige acrylic enamel PXSC – Also available in custom colors.	
PXDR10	CONDENSATE DRAIN KIT Attaches to the bottom of the wall sleeve for internal draining of condensate or to the rear wall sleeve flange for external draining. Recommended on all units to remove excess condensate. Packaged in quantities of ten.	
PXCJA	CONDUIT KIT WITH JUNCTION BOX Hard wire connection kit junction box for 208/230V and 265V units (subbase not required). *Required for 265V installations.	
PXFTA	REPLACEMENT FILTER PACK These are original equipment return air filters. They are reusable and can be cleaned by vacuuming, washing, or blowing out, and are sold in convenient ten-packs. (Two filters per chassis).	
PXDS	SUBBASE DISCONNECT SWITCH	

ACCESSORIES

New Construction Accessories											
PDXDAA	LATERAL DUCT ADAPTER Attaches to the Friedrich PTAC/PTHP unit to direct up to 35% of the total airflow to a second room. The unit-mounted duct plenum features a front-mounted aluminum grille that has two positions to provide the most optimal air direction. The air may be directed to either the left or the right of the unit through the supplied 3 1/2" H x 7" W x 47" L plenum. Plenum may be cut to length by the installer. Kit includes duct plenum, front grille, 47" duct extension, duct discharge grille, duct end cap and all necessary mounting hardware. 										
PDXDEA	LATERAL DUCT EXTENSION Additional 3 1/2" H x 7" W x 47" L plenum for use with the LATERAL DUCT ADAPTER. A maximum of 3 duct extensions total may be used. Note: Ducted airflow is reduced as duct length is increased.										
PXSBA	DECORATIVE SUBBASE Provides unit support for walls less than six inches thick. Includes leveling legs, side filler panels and mounting brackets for electrical accessories. Accepts circuit breaker, power disconnect switch, or conduit kit. 										
PXSB	ELECTRICAL SUBBASE Provides unit support for walls less than six inches thick. Includes leveling legs, side filler panels, mounting brackets, a plug-in receptacle and field-wiring access. The subbase also includes electrical knockouts for a power disconnect switch or circuit breaker. <table border="1"> <tr> <td>PXSB23020</td><td>Electrical Subbase - 230V 15/20A</td></tr> <tr> <td>PXSB23030</td><td>Electrical Subbase - 230V 30A</td></tr> <tr> <td>PXSB26515</td><td>Electrical Subbase - 265V 15A</td></tr> <tr> <td>PXSB26520</td><td>Electrical Subbase - 265V 20A</td></tr> <tr> <td>PXSB26530</td><td>Electrical Subbase - 265V 30A</td></tr> </table> 	PXSB23020	Electrical Subbase - 230V 15/20A	PXSB23030	Electrical Subbase - 230V 30A	PXSB26515	Electrical Subbase - 265V 15A	PXSB26520	Electrical Subbase - 265V 20A	PXSB26530	Electrical Subbase - 265V 30A
PXSB23020	Electrical Subbase - 230V 15/20A										
PXSB23030	Electrical Subbase - 230V 30A										
PXSB26515	Electrical Subbase - 265V 15A										
PXSB26520	Electrical Subbase - 265V 20A										
PXSB26530	Electrical Subbase - 265V 30A										
RT7 RT7P	DIGITAL REMOTE THERMOSTATS RT7P 24v, Wired (7 Std), single stage, wall-mounted, 7-day programmable thermostat, three fan speeds (auto/low/high), and an easy-to-read large backlight display. RT7 24v, Wired (7 Std), non-programmable, wall-mounted thermostat (unit powered capable). three fan speeds (auto/low/high), and an easy-to-read backlight display. 										
WRT2	WIRELESS DIGITAL REMOTE THERMOSTAT Wireless wall-mounted thermostat (battery powered). Wireless transmitter (24v), 7-day programmable, three fan speeds (auto/low/high), and an easy to read large backlight display. 										
PDXRTA	REMOTE THERMOSTAT ESCUTCHEON KIT This kit contains ten escutcheons that can be placed over the factory control buttons when a remote wall mounted thermostat is used. The escutcheon directs the guest to the wall thermostat for operation and retains the LED window to display error codes and diagnostic information. 										
EMRT4 EMWRT4	ENERGY MANAGEMENT THERMOSTATS EMRT4 Wired thermostat with occupancy sensor. EMWRT4 Wireless thermostat with occupancy sensor. EMOCT4 EMRAF4 Online connection kit. Remote access fee.  EMWRT4, EMRT4, VRPXEMRT4, VRPXEMWRT4 EMOCT										

ACCESSORIES

Friedrich PTAC with *FreshAire*® IAQ

The COVID-19 global pandemic transformed the way the lodging industry meets the comfort and safety needs for guests. As your room air experts, Friedrich remains committed to improving guest comfort and safety with our newest innovation, FreshAire® IAQ solutions - a suite of indoor air quality accessories for use with Friedrich Air Conditioners, all with one dedicated purpose - healthy indoor air. FreshAire® IAQ solutions incorporate ASHRAE-recommended protocol* to address indoor air quality and airborne transmissions.

This suite of products include industry-leading air quality technologies such as MERV 13 filtration, UV germicidal light and bi-polar ionization. Together, they represent a major leap forward in integrated HVAC air purification and rebuilding confidence for indoor environments.

FreshAire® Purifier APWM1

FreshAire Purifier by iWaves features needlepoint bi-polar ionization to address any mold, bacteria, virus, allergens, and VOC's that may be in your air stream to ensure delivery of healthy, clean, purified air.



ACCESSORY INSTALLATION FreshAir® IAQ

FreshAir® Purifier: iWave M Series (APWM1)

iWave-M PTAC Installation Instructions: The iWave-M is a highly versatile ion generating device that is designed to be typically installed at the cooling coil; but the device can be installed in supply air as well. The iWave-M is an ideal, no replacement part device for air purification in all Friedrich PTAC's.



PTAC Installation (PZ/PD/PV)

1. Turn off power to the unit
2. Remove PTAC decorative front cover
3. Affix iWave ionizer bar to the solid surface (front surface) of coil. The ionizer bar should be centered on the coil. (see image above) Simply use the hook and loop backing on the power pack and ionization bar and stick it across the width of the coil so the iWave-M treats the coil as well as the breathing zone.
4. Mount power bank and wiring. Positioned on the side closest to control box assembly. Typically affixed with hook & loop to the control box assembly cover (see image above)
5. Run wires into the control box compartment to hook up to 110VAC to 240VAC power source to where iWave-M will power on with the indoor fan. For 110/120VAC and 208/240VAC input, connect black wire (hot) and white wire (neutral or other AC phase) to applicable electrical terminal block.
6. Trim wires to preferred length and connect to appropriate terminals. Harness/secure wires within the equipment as necessary.
7. Reassemble the unit, reattach front cover, and turn power on.
8. Apply installation notification sticker to the outside of the control panel cover

IMPORTANT!

Turn off main power source before starting PTAC installation.

Cleaning: If required, use a wet wipe or damp cloth to clean the ionizer bar. A soft bristle brush can also be used to clean debris from the ion emitter. Do Not expose the iWave-M to corrosive cleaners.

PTAC Power Cord Selection (PDE/PDH/PVH)

POWER CORDS

Universal power cords enable properties to select the appropriate heater size. Reference the adjacent table for power cord options.

ZONEAIRE® PREMIER	FRESHAIR®		Length
PXPCZ23015A	PXPCFA23015	LCDI 230V 15A Cord - 2.5 kW	67 in.
PXPCZ23020A	PXPCFA23020	LCDI 230V 20A Cord - 3.5 kW	67 in.
PXPCZ23030A	PXPCFA23030*	LCDI 230V 30A Cord - 5.0 kW	67 in.
PXPCZ26515A	PXPCFA26515	Non-LCDI 265V 15A Cord - 2.5 kW	27 1/2 in.
PXPCZ26520A	PXPCFA26520	Non-LCDI 265V 20A Cord - 3.5 kW	27 1/2 in.
PXPCZ26530	PXPCFA26530*	Non-LCDI 265V 30A Cord - 5.0 kW	27 1/2 in.



FRIEDRICH

Friedrich Air Conditioning Company
10001 Reunion Place, Suite 500
San Antonio, TX 78216
800.541.6645

www.friedrich.com

PACKAGED TERMINAL AIR CONDITIONER LIMITED WARRANTY

SAVE THIS CERTIFICATE. It gives you specific rights. You may also have other rights which may vary from state to state and province to province.

In the event that your Friedrich equipment needs servicing, please contact your nearest authorized service center. If you do not know the nearest service center, ask the company that installed your unit or contact Friedrich (see address and telephone number above). To obtain service and/or warranty parts replacement, you must notify an authorized FRIEDRICH Air Conditioning Co. service center, distributor, dealer, or contractor of any defect within the applicable warranty period.

When requesting service: please have the model, serial number, and proof of purchase of your equipment readily available.

LIMITED WARRANTY – ALL PARTS & LABOR. FIRST TWO YEARS (24 months). This warranty shall commence on the day of installation. Any part that is found to be defective in factory-supplied material or workmanship will be repaired, replaced, or exchanged at the discretion of Friedrich. Friedrich will repair, replace, or exchange the product at no charge, including labor, provided the packaged terminal air conditioner is reasonably accessible for service.

LIMITED WARRANTY – LIMITED PARTS. THIRD THROUGH FIFTH YEARS (60 months). This warranty shall commence on the day of installation. Any SEALED SYSTEM REFRIGERATION part that is found to be defective in factory-supplied material or workmanship will be repaired, replaced, or exchanged (excluding freight charges) at the discretion of Friedrich. The sealed system refrigeration consists of the compressor, metering device, evaporator coil, condenser coil, reversing valve, and the interconnecting tubing. The sealed system refrigeration parts warranty does not include labor.

These warranties apply only while the unit remains at the original site and only to units installed inside the continental United States, Alaska, Hawaii, Puerto Rico, Mexico and Canada. The warranty applies only if the unit is installed and operated in accordance with the printed instructions and in compliance with applicable local installation and building codes and good trade practices to the end-user purchaser. For international warranty information, contact the Friedrich Air Conditioning Company - International Sales Division. This warranty is not applicable to units on which the model and serial numbers have been removed.

Any defective unit or part to be replaced must be made available to FRIEDRICH in exchange for the replacement part. Replacement units and/or replacement parts can be new or re-manufactured. Replacement parts shall be warranted for any unused portion of the original unit's warranty.

APPLICABILITY AND LIMITATIONS - Friedrich will not be responsible for and the user will pay for:

1. Service calls to: A) Instruct on unit operation. B) Replace batteries, house fuses, or correct house wiring. C) Clean or replace air filters. D) Remove the unit from its installed location when not accessible for service required. E) Correct improper installations.
2. Parts provided by anyone other than an authorized servicer.
3. Damage caused by: A) Accident, abuse, negligence, misuse, riot, fire, flood or acts of God. B) Operating the unit where there is a corrosive atmosphere containing chlorine, fluorine, or any damaging chemicals (other than in a normal residential environment). C) Unauthorized alteration or repair of the unit, which in turn affects its stability or performance. D) Failing to provide proper maintenance and service. E) Using an incorrect power source. F) Faulty installation or application of the unit. G) Operation of the unit during construction.
4. Cost to diagnose the system, removal of the system, freight charges, re-installation charges associated with the repair, or transportation to and from service agency
5. Any additional labor cost for removing inaccessible units
6. Charges for mileage related to travel by a service agency that exceeds 25 miles one way

Friedrich shall not be liable for any incidental, consequential, or special damages or expenses in connection with any use or failure of this unit. Friedrich has not made and does not make any representation or warranty of fitness for a particular use or purpose and there is no implied condition of fitness for a particular use or purpose. Friedrich makes no expressed warranties except as stated in this certification. Friedrich does not authorize any changes to this certificate or to create for Friedrich any other obligation or liability in connection with this unit. Any implied warranties shall last for one year after the original purchase date. Some states and provinces do not allow limitations on how long an implied warranty or condition lasts, so the above limitation or exclusions may not apply to you. The provisions of this warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies provided by law. The most up to date warranty certificates can be found on our website at www.friedrich.com.

Performance of Friedrich's Warranty obligation is limited to one of the following methods:

1. Repair of the unit
2. A refund to the customer for the prorated value of the unit based upon the remaining warranty period of the unit as calculated by Friedrich Air Conditioning.
3. Providing a replacement unit of equal or lesser value. The replacement unit will adopt the original unit's remaining warranty and shall be covered for the remaining duration as specified above.

Registration is strongly suggested. As described, the Limited Term Warranty coverage is available to owners who have not registered. To register, please visit www.friedrich.com and select "Product Registration" under our consumer menu selection. California, Florida, Texas, and Quebec, Canada residents are not required to register to receive full warranty coverage. Original proof of purchase is required to submit a warranty claim.

The method of fulfillment of the warranty obligation is at the sole discretion of Friedrich Air Conditioning. In case of any questions regarding the provisions of this warranty, the English version will govern.



FRIEDRICH

Friedrich Air Conditioning Company
10001 Reunion Place, Suite 500
San Antonio, TX 78216
800.541.6645

www.friedrich.com

PACKAGED TERMINAL AIR CONDITIONER LIMITED WARRANTY

SAVE THIS CERTIFICATE. It gives you specific rights. You may also have other rights which may vary from state to state and province to province.

In the event that your Friedrich equipment needs servicing, please contact your nearest authorized service center. If you do not know the nearest service center, ask the company that installed your unit or contact Friedrich (see address and telephone number above). To obtain service and/or warranty parts replacement, you must notify an authorized FRIEDRICH Air Conditioning Co. service center, distributor, dealer, or contractor of any defect within the applicable warranty period.

When requesting service: please have the model, serial number, and proof of purchase of your equipment readily available.

LIMITED WARRANTY – ALL PARTS & LABOR. FIRST TWO YEARS (24 months). This warranty shall commence on the day of installation. Any part that is found to be defective in factory-supplied material or workmanship will be repaired, replaced, or exchanged at the discretion of Friedrich. Friedrich will repair, replace, or exchange the product at no charge, including labor, provided the packaged terminal air conditioner is reasonably accessible for service.

LIMITED WARRANTY – LIMITED PARTS. THIRD THROUGH FIFTH YEARS (60 months). This warranty shall commence on the day of installation. Any SEALED SYSTEM REFRIGERATION part that is found to be defective in factory-supplied material or workmanship will be repaired, replaced, or exchanged (excluding freight charges) at the discretion of Friedrich. The sealed system refrigeration consists of the compressor, metering device, evaporator coil, condenser coil, reversing valve, and the interconnecting tubing. The sealed system refrigeration parts warranty does not include labor.

These warranties apply only while the unit remains at the original site and only to units installed inside the continental United States, Alaska, Hawaii, Puerto Rico, Mexico and Canada. The warranty applies only if the unit is installed and operated in accordance with the printed instructions and in compliance with applicable local installation and building codes and good trade practices to the end-user purchaser. For international warranty information, contact the Friedrich Air Conditioning Company - International Sales Division. This warranty is not applicable to units on which the model and serial numbers have been removed.

Any defective unit or part to be replaced must be made available to FRIEDRICH in exchange for the replacement part. Replacement units and/or replacement parts can be new or re-manufactured. Replacement parts shall be warranted for any unused portion of the original unit's warranty.

APPLICABILITY AND LIMITATIONS - Friedrich will not be responsible for and the user will pay for:

1. Service calls to: A) Instruct on unit operation. B) Replace batteries, house fuses, or correct house wiring. C) Clean or replace air filters. D) Remove the unit from its installed location when not accessible for service required. E) Correct improper installations.
2. Parts provided by anyone other than an authorized servicer.
3. Damage caused by: A) Accident, abuse, negligence, misuse, riot, fire, flood or acts of God. B) Operating the unit where there is a corrosive atmosphere containing chlorine, fluorine, or any damaging chemicals (other than in a normal residential environment). C) Unauthorized alteration or repair of the unit, which in turn affects its stability or performance. D) Failing to provide proper maintenance and service. E) Using an incorrect power source. F) Faulty installation or application of the unit. G) Operation of the unit during construction.
4. Cost to diagnose the system, removal of the system, freight charges, re-installation charges associated with the repair, or transportation to and from service.
5. Any additional labor cost for removing inaccessible units
6. Charges for mileage related to travel by a service agency that exceeds 25 miles one way

Friedrich shall not be liable for any incidental, consequential, or special damages or expenses in connection with any use or failure of this unit. Friedrich has not made and does not make any representation or warranty of fitness for a particular use or purpose and there is no implied condition of fitness for a particular use or purpose. Friedrich makes no expressed warranties except as stated in this certification. Friedrich does not authorize any changes to this certificate or to create for Friedrich any other obligation or liability in connection with this unit. Any implied warranties shall last for one year after the original purchase date. Some states and provinces do not allow limitations on how long an implied warranty or condition lasts, so the above limitation or exclusions may not apply to you. The provisions of this warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies provided by law. The most up to date warranty certificates can be found on our website at www.friedrich.com.

Performance of Friedrich's Warranty obligation is limited to one of the following methods:

1. Repair of the unit
2. A refund to the customer for the prorated value of the unit based upon the remaining warranty period of the unit as calculated by Friedrich Air Conditioning.
3. Providing a replacement unit of equal or lesser value. The replacement unit will adopt the original unit's remaining warranty and shall be covered for the remaining duration as specified above.

Registration is strongly suggested. As described, the Limited Term Warranty coverage is available to owners who have not registered. To register, please visit www.friedrich.com and select "Product Registration" under our consumer menu selection. California, Florida, Texas, and Quebec, Canada residents are not required to register to receive full warranty coverage. Original proof of purchase is required to submit a warranty claim.

The method of fulfillment of the warranty obligation is at the sole discretion of Friedrich Air Conditioning. In case of any questions regarding the provisions of this warranty, the English version will govern.



FRIEDRICH

Friedrich Air Conditioning Company
10001 Reunion Place, Suite 500
San Antonio, TX 78216
800.541.6645

www.friedrich.com

GARANTIE LIMITÉE POUR CLIMATISEUR TERMINAL EMBALLÉ

CONSERVEZ CE CERTIFICAT. Il vous octroie des droits spécifiques. Vous pouvez également avoir d'autres droits qui varient selon les états et provinces.

Si votre équipement Friedrich nécessite un service, veuillez contacter votre centre de service agréé le plus proche. Si vous ne connaissez pas le centre le plus proche, renseignez-vous auprès de l'entreprise qui a installé votre appareil ou contactez Friedrich (voir adresse et numéro de téléphone ci-dessus). Pour obtenir un service et/ou le remplacement des pièces sous garantie, vous devez informer un centre de service, distributeur, revendeur ou entrepreneur agréé de FRIEDRICH Air Conditioning Co. de tout défaut dans la période de garantie applicable.

Lors de la demande de service : veuillez avoir à portée de main le modèle, le numéro de série et la preuve d'achat de votre équipement.

GARANTIE LIMITÉE - PIÈCES & MAIN-D'ŒUVRE. PREMIÈRES DEUX ANNÉES (24 mois). Cette garantie commence le jour de l'installation. Toute pièce jugée défectueuse en raison de matériaux ou de fabrication fournis par l'usine sera réparée, remplacée ou échangée à la discrétion de Friedrich. Friedrich réparera, remplacera ou échangera le produit sans frais, y compris la main-d'œuvre, à condition que le climatiseur terminal emballé soit raisonnablement accessible pour le service.

GARANTIE LIMITÉE - PIÈCES LIMITÉES. TROISIÈME À CINQUIÈME ANNÉES (60 mois). Cette garantie commence le jour de l'installation. Toute pièce du SYSTÈME DE RÉFRIGÉRATION SCELLÉ jugée défectueuse en raison de matériaux ou de fabrication fournis par l'usine sera réparée, remplacée ou échangée (hors frais de transport) à la discrétion de Friedrich. Le système de réfrigération scellé comprend le compresseur, le dispositif de mesure, la bobine d'évaporateur, la bobine de condenseur, la vanne de réversion et les tuyaux de raccordement. La garantie des pièces du système de réfrigération scellé n'inclut pas la main-d'œuvre.

Ces garanties s'appliquent uniquement tant que l'unité reste sur le site d'origine et uniquement aux unités installées à l'intérieur des États-Unis continentaux, de l'Alaska, d'Hawaï, de Porto Rico, du Mexique et du Canada. La garantie s'applique uniquement si l'unité est installée et opérée conformément aux instructions imprimées et en conformité avec les codes d'installation et de construction locaux applicables et les bonnes pratiques commerciales pour l'utilisateur final. Pour des informations sur la garantie internationale, contactez la division des ventes internationales de Friedrich Air Conditioning Company. Cette garantie ne s'applique pas aux unités dont les numéros de modèle et de série ont été retirés.

Toute unité ou pièce défectueuse à remplacer doit être mise à disposition de FRIEDRICH en échange de la pièce de remplacement. Les unités de remplacement et/ou les pièces de remplacement peuvent être neuves ou remises à neuf. Les pièces de remplacement seront garanties pour toute partie inutilisée de la garantie originale de l'unité.

APPLICABILITÉ ET LIMITATIONS - Friedrich ne sera pas responsable et l'utilisateur paiera pour :

- Appels de service pour : A) Instruire sur le fonctionnement de l'unité. B) Remplacer les piles, les fusibles de maison ou corriger le câblage de la maison. C) Nettoyer ou remplacer les filtres à air. D) Retirer l'unité de son emplacement installé lorsqu'elle n'est pas accessible pour le service requis. E) Corriger les installations incorrectes.
- Pièces fournies par une personne autre qu'un prestataire de services agréé.
- Dommages causés par : A) Accident, abus, négligence, mauvaise utilisation, émeute, incendie, inondation ou actes de Dieu. B) Utilisation de l'unité dans une atmosphère corrosive contenant du chlore, du fluor ou tout produit chimique nocif (autre qu'un environnement résidentiel normal). C) Altération ou réparation non autorisée de l'unité, affectant ainsi sa stabilité ou sa performance. D) Ne pas assurer un entretien et un service appropriés. E) Utiliser une source d'alimentation incorrecte. F) Installation ou application incorrecte de l'unité. G) Fonctionnement de l'unité pendant la construction.
- Coût pour diagnostiquer le système, retirer le système, frais de transport, frais de réinstallation associés à la réparation, ou transport vers et depuis l'agence de service
- Tout coût de main-d'œuvre supplémentaire pour le retrait des unités inaccessibles
- Les frais de kilométrage liés aux déplacements d'une agence de service qui dépasse 25 miles dans un sens

Friedrich ne sera pas responsable des dommages ou dépenses accessoires, consécutifs ou spéciaux en lien avec l'utilisation ou la défaillance de cette unité. Friedrich n'a pas fait et ne fait aucune déclaration ou garantie d'adéquation pour une utilisation ou un but particulier et il n'y a pas de condition implicite d'adéquation pour une utilisation ou un but particulier. Friedrich ne fait aucune garantie expresse sauf celles mentionnées dans ce certificat. Friedrich n'autorise aucune modification de ce certificat ni ne crée pour Friedrich toute autre obligation ou responsabilité en lien avec cette unité. Toute garantie implicite durera un an après la date d'achat initiale. Certaines juridictions n'autorisent pas les limitations sur la durée d'une garantie ou condition implicite, donc la limitation ou les exclusions ci-dessus peuvent ne pas s'appliquer à vous. Les dispositions de cette garantie sont en supplément et ne modifient ni ne soustraient les garanties légales et autres droits et recours prévus par la loi. Les certificats de garantie les plus récents peuvent être trouvés sur notre site web à www.friedrich.com.

L'accomplissement de l'obligation de garantie de Friedrich est limité à l'une des méthodes suivantes :

- Réparation de l'unité
- Un remboursement au client pour la valeur proratisée de l'unité basée sur la période de garantie restante de l'unité telle que calculée par Friedrich Air Conditioning.
- Fournir une unité de remplacement de valeur égale ou inférieure. L'unité de remplacement adoptera la garantie restante de l'unité originale et sera couverte pour la durée restante spécifiée ci-dessus.

L'enregistrement est fortement suggéré. Comme décrit, la couverture de garantie à durée limitée est disponible pour les propriétaires qui ne se sont pas enregistrés. Pour vous enregistrer, veuillez visiter www.friedrich.com et sélectionner "Enregistrement de produit" sous notre menu consommateur. Les résidents de Californie, Floride, Texas et Québec, Canada ne sont pas tenus de s'enregistrer pour recevoir une couverture de garantie complète. Une preuve d'achat originale est requise pour soumettre une réclamation de garantie.

La méthode d'exécution de l'obligation de garantie est à la seule discrétion de Friedrich Air Conditioning. En cas de questions concernant les dispositions de cette garantie, la version anglaise prévaudra.

THIS PAGE INTENTIONALLY LEFT BLANK.



Friedrich Air Conditioning Co. | 10001 Reunion Place, Suite 500 | San Antonio, TX 78216 | 877.599.5665 | www.friedrich.com