



FRIEDRICH

VRP[®]

Variable Refrigerant Packaged Heat Pump

Innovative | Intelligent | Inverter

VRP07K/R

For Commercial and Residential Applications

One or more of the following patents may apply:

10408504
10436457
10488083

Additional patents pending

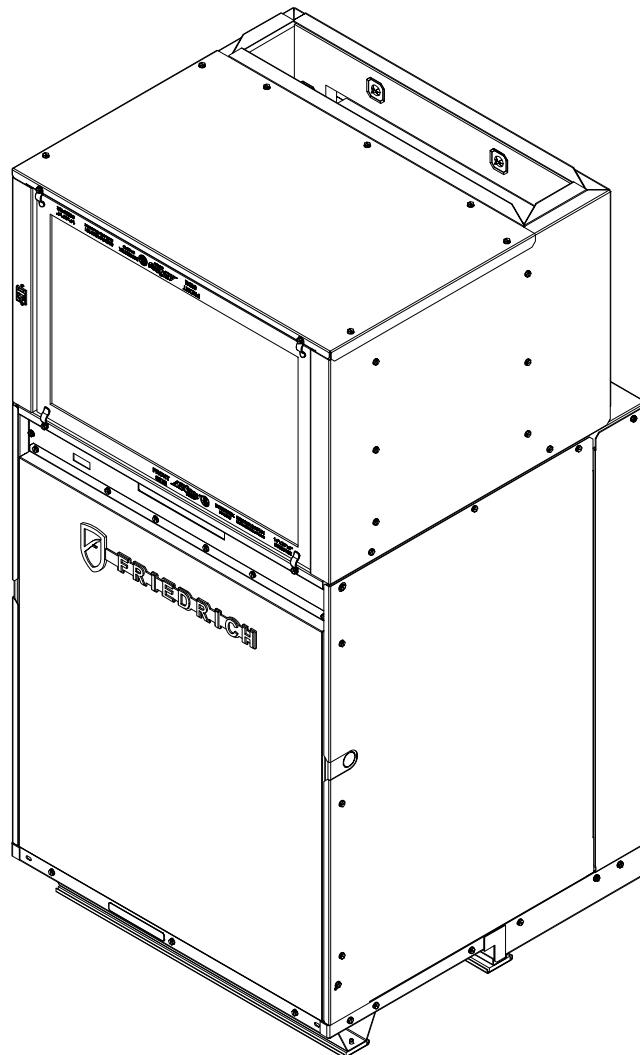


Table of Contents

Warnings	3
----------	---

General

Specifications	8
Dimensions	9
Electrical Data	10
Air Flow Data	11

Installation

Minimum Clearances	12
Installation Orientations	13
Rough Opening Dimensions	14
Preliminary Plumbing	16
Wall Plenum Installation	17
Drain Pan Installation	21
Louver Installation	23
Unit Installation	25
Ductwork Installation	27
Wall Controller Installation	28
Electrical Connection	29
Return Air Door Installation	30
FreshAire™ and Basepan Heater Operation	31

Reference

Final Installation Checklist	32
Service	33

WARNING

Disconnection from supply voltage for all poles must be incorporated into the fixed wiring. It is the installer's responsibility to thoroughly read the manual and to properly install the equipment in conformance with NFPA 70-2008 National Electric Code or current edition, International Mechanic code 2009 or current edition and any other applicable local and national codes.

WARNING

Refrigeration system under high pressure. Do not puncture, heat, expose to flame or incinerate. Only certified refrigeration technicians should service this equipment. R32 systems operate at higher pressures than R22 equipment. Appropriate safe service and handling practices must be used. Only use gauge sets designed for use with R32. Do not use R22 gauge sets. Failure to do so can result in property damage, personal injury, or death.

WARNING

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

WARNING

The maximum altitude for this appliance is 2,000m (6,562 ft).

Do not use above an altitude of 2,000m (6,562 ft)

WARNING

Electric Shock Hazard

TURN OFF ELECTRIC POWER BEFORE SERVICE OR INSTALLATION.



Unit must be properly grounded. Other methods of grounding are permitted if performed in accordance with the "National Electric Code"(NEC)/"American National Standards Institute"(ANSI)/National Fire Protection Association (NFPA) 70 and Local/State Codes.

In Canada, Electrical Grounding is to be in accordance with the Canadian Electrical Code CSA C22.1.

Unit must have correct Fuse or Circuit Breaker Protection. Unit's supply circuit must have the correct wire conductor size. All electrical connections and wiring must be installed by a qualified electrician and conform to the National Electrical Code and all Local Codes which have jurisdiction. Failure to do so can result in property damage, personal injury and/or death

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol with the word "WARNING" or "CAUTION".

These words mean:

WARNING

Indicates a hazard which, if not avoided, can result in severe personal injury or death and damage to product or other property.

CAUTION

Indicates a hazard which, if not avoided, can result in personal injury and damage to product or other property. All safety messages will tell you how to reduce the chance of injury, and tell you what will happen if the instructions are not followed.

NOTICE

Indicates property damage can occur if instructions are not followed.



This symbol indicates that this appliance uses flammable refrigerant. If the refrigerant is leaked and exposed to an external ignition source, there is a risk of fire.



This symbol indicates that the Operation Manual should be read carefully.



This symbol indicates that a service personnel should be handling this equipment with reference Installation Manual



This symbol indicates that information is available such as a operationing/Installation manual

	 WARNING	 AVERTISSEMENT	 ADVERTENCIA
THINK SAFETY FIRST	Do not remove, disable or bypass this unit's safety devices. Doing so may cause, fire, injuries or death.	Ne pas supprimer, désactiver ou contourner cette l'unité des dispositifs de sécurité. faire vous risqueriez de provoquer, le feu, les blessures ou la mort.	No eliminar, desactivar o pasar por alto los dispositivos de seguridad de la unidad. Si lo hace podría producirse fuego, lesiones o muerte.

Important Safety and General Information



R32 A2L

CAUTION : Risk of fire flammable materials

Important Note : Read this manual carefully before installing or operating your new air conditioning unit. Make sure to save this manual for future reference

Warning

Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.

The appliance shall be stored in a room without continuously operating ignition sources like open flames, operating gas appliance or an operating electric heater.

Do not pierce or burn

Be aware that refrigerants may not contain an odour.

Importance of Quality Installation

FOR INSTALLATION ONLY IN LOCATIONS NOT ACCESSIBLE TO THE GENERAL PUBLIC

Optimal system performance and longevity depend upon a quality and proper installation. Failure to properly install this unit could result in undesirable operation and subsequent faults and potential failures.

Carefully follow all guidelines listed in the manual and industry best practices. Conform to all local code requirements. Contact your local technical representative with any questions or concerns.

Upon receiving the unit, inspect it for any damage from shipment. Claims for damage, either shipping or concealed, should be filed immediately with the shipping company. **IMPORTANT:** Check the unit model number, Cooling size, electrical characteristics, and accessories to determine if they are correct.

WARNING: If the unit appears damaged, or if a refrigerant leak is suspected, do not install. Contact a licensed repair person to perform a leak check on the unit.

Scan this QR code to be linked to the Friedrich professional support page where you can locate the Service Manual.



Unventilated areas

WARNING : APPLIANCE shall be stored in a room without continuously operating open flames (for example an operating gas appliance) or other POTENTIAL IGNITION SOURCES (for example an operating electric heater, hot surfaces).

WARNING: "Auxiliary devices which may be a POTENTIAL IGNITION SOURCE shall not be installed in the duct work. Examples of such POTENTIAL IGNITION SOURCES are hot surfaces with a temperature exceeding 700 F and electric switching devices".

WARNING: Do not use of install unapproved devices in the ductwork. Only use auxiliary devices approved by Friedrich or declared suitable with R-32. If in doubt, Friedrich should be consulted.

WARNING: Do not drill on panels. Before any progress, Friedrich should be consulted.

WARNING: The appliance shall be stored so as to prevent mechanical damage from occurring.

Important Safety and General Information

Qualification of Workers

WARNING: Any person who is involved with working on or breaking into a refrigerant circuit should be documented by a current valid certificate from a national training organization or manufacturers that are accredited to teach the relevant national competency standards that may be set in legislation to handle refrigerants safely in accordance with an industry recognized assessment specification.

Every working procedure that affects safety shall only be carried out by a competent person.

Examples for such working procedures are:

- breaking into the refrigerating circuit;
- opening of sealed components;
- opening of ventilated enclosures.

Cabling

WARNING: Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

Detection of Flammable Refrigerant

WARNING: Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

The following leak detection methods are deemed acceptable for all refrigerant systems. Electronic leak detectors may be used to detect refrigerant leaks but, in the case of FLAMMABLE REFRIGERANTS, the sensitivity may not be adequate or may need recalibration. (Detection equipment shall be calibrated in a refrigerant-free area.) Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25 % maximum) is confirmed.

Leak detection fluids are also suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

Examples of leak detection fluids are

- bubble method,
- fluorescent method agents.

If a leak is suspected, all naked flames shall be removed/extinguished.

If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. Removal of refrigerant shall be according to national training organization or manufacturers.

Charging Procedures

The following requirements shall be followed.

- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.
- Cylinders shall be kept in an appropriate position according to the instructions.
- Ensure that the REFRIGERATING SYSTEM is earthed prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the REFRIGERATING SYSTEM.

Prior to recharging the system, it shall be pressure-tested with the appropriate purging gas. The system shall be leak-tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

Important Safety and General Information

Recovery

WARNING: When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely. When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge is available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure-relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of all appropriate refrigerants including, when applicable, FLAMMABLE REFRIGERANTS. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition. Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt.

The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that FLAMMABLE REFRIGERANT does not remain within the lubricant. The evacuation process shall be carried out prior to returning the compressor to the suppliers. Only electric heating to the compressor body shall be employed to accelerate this process. When oil is drained from a system, it shall be carried out safely.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of the flammable refrigerant. If in doubt, the manufacturer should be consulted. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition.

The recovered refrigerant shall be processed according to local legislation in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The compressor body shall not be heated by an open flame or other ignition sources to accelerate this process. When oil is drained from a system, it shall be carried out safely.

General work area

Warning: All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided.

Presence of fire extinguisher

Warning: If any hot work is to be conducted on the refrigerating equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO2 fire extinguisher adjacent to the charging area.

Checks to the refrigerating equipment

Warning: Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times Friedrich AC maintenance and service guidelines shall be followed. If in doubt, consult Friedrich AC technical department for assistance.

The following checks shall be applied to installations using FLAMMABLE REFRIGERANTS:

- the actual REFRIGERANT CHARGE is in accordance with the room size within which the refrigerant containing parts are installed; the ventilation machinery and outlets are operating adequately and are not obstructed;
- if an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant;
- marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;
- refrigerating pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

Important Safety and General Information

Checks to electrical devices

Warning: Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised.

Initial safety checks shall include:

- that capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
- that no live electrical components and wiring are exposed while charging, recovering or purging the system;
- that there is continuity of earth bonding.

Repairs to sealed components

Warning: Do not repair. Sealed components must be replaced

Repair to intrinsically safe components

Warning: Do not repair. Intrinsically safe components must be replaced.

Decommissioning

Warning: Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of recovered refrigerant. It is essential that electrical power is available before the task is commenced.

- a) Become familiar with the equipment and its operation.
- b) Isolate system electrically.
- c) Before attempting the procedure, ensure that:
 - mechanical handling equipment is available, if required, for handling refrigerant cylinders;
 - all personal protective equipment is available and being used correctly;
 - the recovery process is supervised at all times by a competent person;
 - recovery equipment and cylinders conform to the appropriate standards.
- d) Pump down refrigerant system, if possible.
- e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- f) Make sure that cylinder is situated on the scales before recovery takes place.
- g) Start the recovery machine and operate in accordance with instructions.
- h) Do not overfill cylinders (no more than 80 % volume liquid charge).
- i) Do not exceed the maximum working pressure of the cylinder, even temporarily.
- j) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
- k) Recovered refrigerant shall not be charged into another REFRIGERATING SYSTEM unless it has been cleaned and checked.

Labelling

Warning: Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant. The label shall be dated and signed. For appliances containing FLAMMABLE REFRIGERANTS, ensure that there are labels on the equipment stating the equipment contains FLAMMABLE REFRIGERANT.

General Specifications

Nomenclature

VRP 07 K 25 S S B S C
1 2 3 4 5 6 7 8 9

1 Series

Variable Refrigerant Packaged Heat Pump

2 Nominal Capacity (Btu /h)

07 = 3800-10,000 Operating Range

3 Voltage (Single Phase)

K = 230/208 V

R = 265 V

4 Heater Watts

00 = 0.0 kW

25 = 2.5 kW

34 = 3.4 kW

5 Outdoor Air/ Ventilation

S= Standard unit. No FreshAir™

F= Single Module FreshAir System
35 CFM

6 Reheat

S= Standard

R= Reheat

7 Plenum And Louver Configuration

D = Only for VRP07

8 Low Ambient

S = Standard


L = Base pan heat

9 Marketing Revision

C - A2L Version R32

Model	VRP07K	VRP07R
Cooling Performance Data		
Voltage	230/208v	265v
Cooling Btu (Rated)	7,000 Btu/h / 2051 W	
Cooling Btu (Min. - Max)	3,800 - 10,000 Btu/h / 1114 - 2931 W	
Outdoor Operating Range	Cooling: 55 - 120 °F / 13 - 49 °C	
Power (W)	636	
SEER2	16.5	
EER2	11.0	
Sensible Heat Ratio	0.83	
Cooling Amps	2.97	2.75
Heat Pump Performance Data		
Heating Btu (Rated @ 47° F)	7,000 Btu/h / 2051 W	
Heating Btu (@ 17° F)	4,300 Btu/h / 1260 W	
Heating Btu (Min. - Max.)	2,800 - 9,000 Btu/h / 821 - 2638 W	
Heat Pump Outdoor Operating Range	0 - 70 °F / -18 - 21°C	
COP	3.2	
HSPF2	7.2	
Heating Power (W)	641	
Heat Pump Amps	2.9	2.69

Dimensions

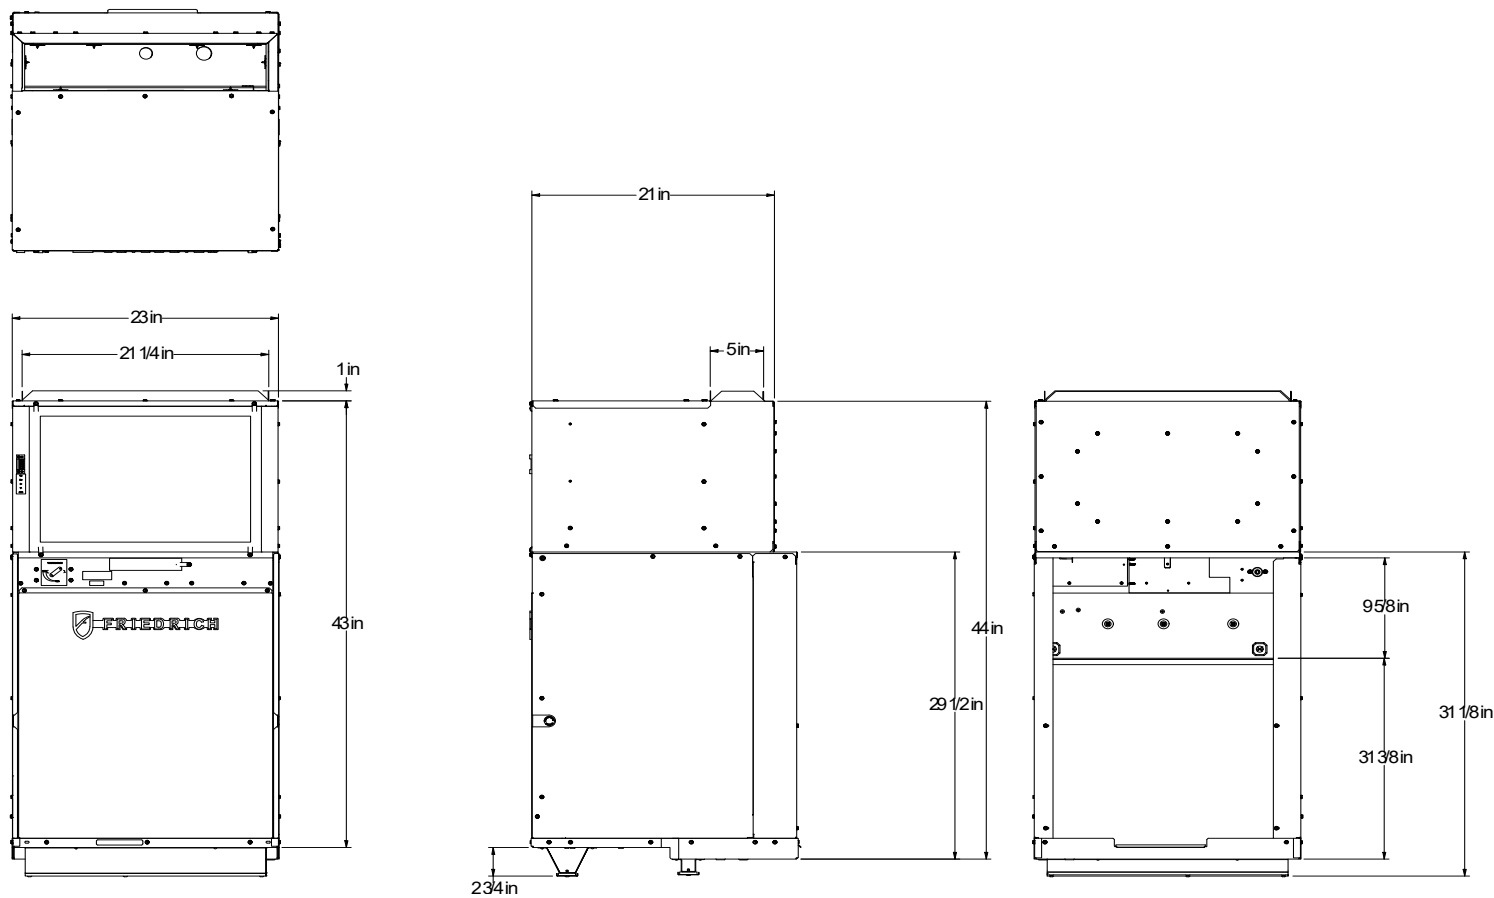

Model	VRP07K/R
Dimensions (W x D x H)	22 15/16" x 22 13/16" x 44 15/16"
Shipping Dimensions (W x D x H)	25" x 25" x 48 1/4"
R32 Charge (oz.)	29.0

Electrical Data

VRP Model	Voltage	Electric Heater Watts	Electric Heating Btu	ID Blower FLA/HP	OD Blower FLA/HP	Electric Heating Amps	MCA	MOP / MOCP
VRP07K	230	0	0	0.16/0.25	0.42/0.1	0	8.5	15
	208	0	0	0.23/0.25	0.49/0.1	0		
	230	2500	8530	0.16/0.25	0.42/0.1	11	14.4	15
	208	2044	6980	0.23/0.25	0.49/0.1	10		
	230	3400	11600	0.16/0.25	0.42/0.1	15	19.2	20
	208	3021	10302	0.23/0.25	0.49/0.1	14		
VRP07R	265	0	0	0.16/0.25	0.42/0.1	0	8.5	15
		2500	8530	0.16/0.25	0.42/0.1	9.2	12	15
		3400	11600	0.16/0.25	0.42/0.1	12	15.7	20

MCA = Minimum Circuit Ampacity

MOP / MOCP - Maximum Overcurrent Protection / Breaker Size

Minimum Circuit Amps (MCA) and MOCP values in the above table are calculated in accordance with The NEC Article 440

Electrical Requirements	
Wire Size	Use ONLY wire size recommended for single outlet branch circuit.
Fuse/Circuit Breaker	Use ONLY type and size fuse or HACR circuit breaker indicated on unit's rating guide. Proper over current protection to the units is the responsibility of the owner.
Grounding	Unit MUST be grounded from branch circuit to unit, or through separate ground wire provided on permanently connected units. Ensure that branch circuit or general purpose outlet is grounded.
Wire Sizing	Use recommended wire size given in tables and install a single branch circuit. All wiring must comply with local and national codes. NOTE: Use copper conductors only.

Electrical Rating Table

NOTE: Use copper conductors **ONLY**. Wire sizes are per NEC.

Recommended Branch Circuit Sizes*	
Nameplate Maximum Circuit Breaker Size	AWG Wiring Size**
15A	14
20A	12

AWG - American Wire Gauge

* Single circuit from main box.

** Based on 100' or less of copper, single insulated conductor at 60° C

NOTE: All field wiring must comply with NEC and local codes. It is the installer's responsibility to ensure that the electrical codes are met.

Air Flow Data

Indoor CFM & External Static Pressure

Air Flow Data									
Model	Speed Select	Airflow Setting	Static Pressure (in. WC)						
			0.00	0.05	0.10	0.15	0.20	0.25	0.3
VRP07K/R*	1	High	380	360	340	310	280		
		Low	330	305	285	255	230		
	2	High	390	370	350	320	285		
		Low	350	320	300	270	230		
	3	High	400	375	355	325	290		
		Low	365	335	310	280	230		
	4	High	405	385	365	335	300		
		Low	375	345	320	290	265		
	5	High	415	390	370	340	310	280	240
		Low	380	360	340	310	280	250	210

*Subject to change. * Rated to 0.3" ESP High and includes factory provided filter

VRP Configurator*

All units are shipped with Speed Select 1 High as the default airflow. In higher static applications, it is necessary to increase the airflow to a higher Speed Select setting. Using the VRP Configurator tool and associated instructions, the speed settings can be changed on units with a firmware 3.7.0.0 or later.

Condenser CFM & External Static Pressure

VRP07 is designed to install through an exterior wall with a plenum (VPAWP1-8, VPAWP-14) and a Friedrich external louver .


If the Friedrich designed plenum and louver combinations are not used, the selections and design must be evaluated by Friedrich to ensure the total pressure drop does not exceed the maximum allowable limits.

Condenser External Static Pressure			
	Design		Max
	CFM	ESP ("WC)	ESP ("WC)
VRP07K/R	550	0.02	0.08

VRP® Required Minimum Clearances

Building Exterior Unit Opening Requirements

VRP units must be installed on an outside wall. Confined spaces and/or covered areas should be avoided. Units must be installed no closer than 12" apart when two units are side by side. If three or more units are to operate next to one another, maintain a minimum of 60" between units or pairs of units (Figure B). If more than two units are sharing a floor with adjacent, outset units, a minimum distance of 64" must be kept between units (Figure C). Also, a vertical clearance of 60" must be maintained (Figure A) between units. Units installed on the bottom floor must be mounted at least 6" off of the ground. If two units are facing each other, a minimum distance of 108" must be kept between units (Figure D).

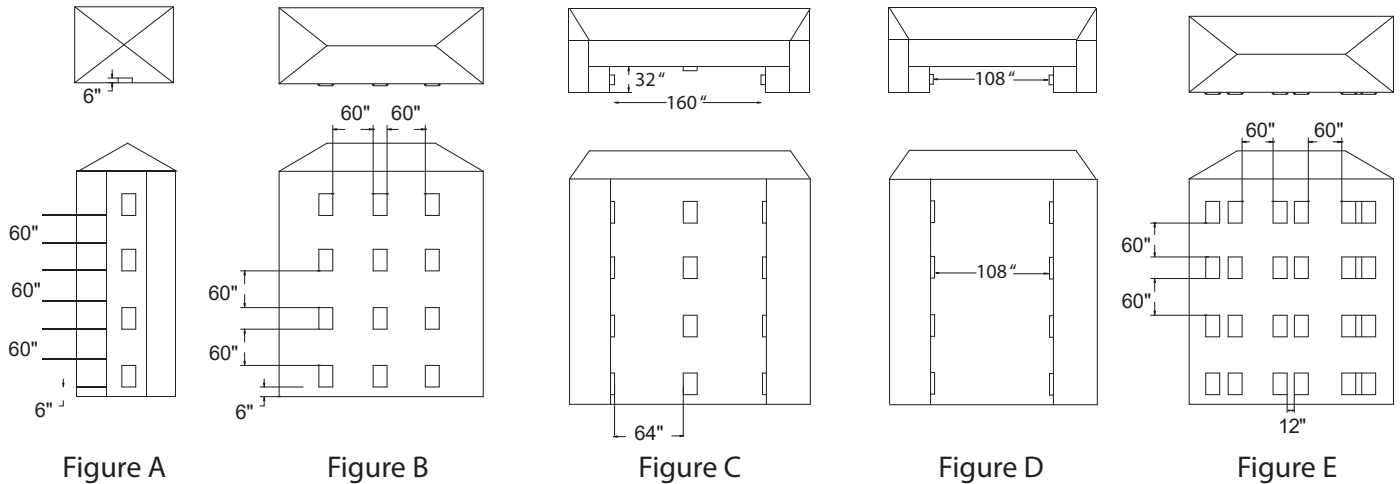


Grill Clearance Requirements

Where obstructions are present use the following guidelines for proper spacing from the VRP exterior louvered grill. Friedrich recommends that ALL obstructions are a minimum of 72" from the exhaust.

For minor obstruction(s) such as lamp poles or small shrubbery, a clearance of 24" from the outdoor louver must be maintained.


For major obstructions such as a solid fence, wall, or other heat rejecting devices like a condensing unit, a minimum distance of 72" must be kept.

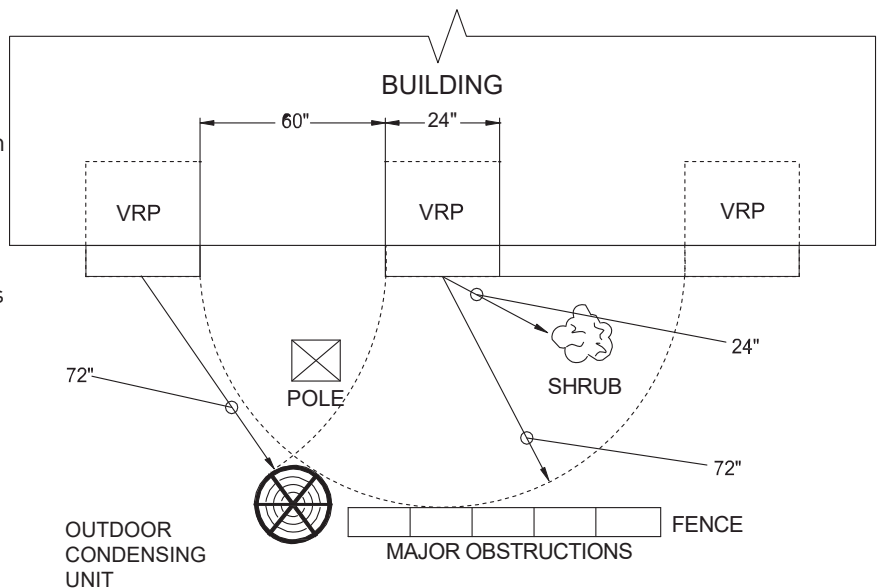


The example pictured above is for reference only and does not represent all possible installations. Please contact Friedrich Air Conditioning for information regarding effects of other installation arrangements.

Installation Orientations


Front Installation-Top View

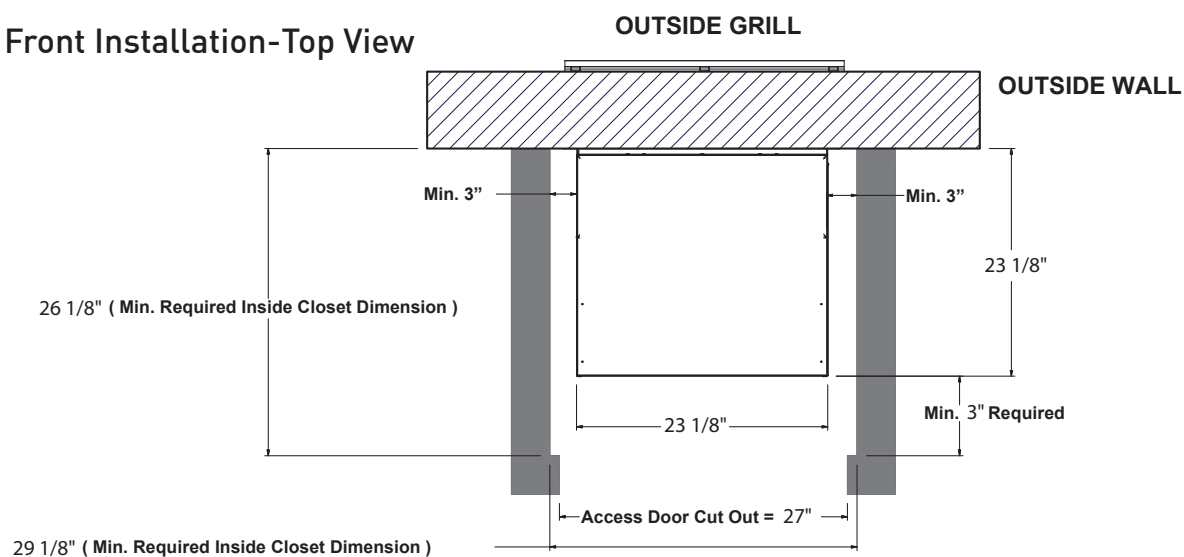

Left Installation-Top View

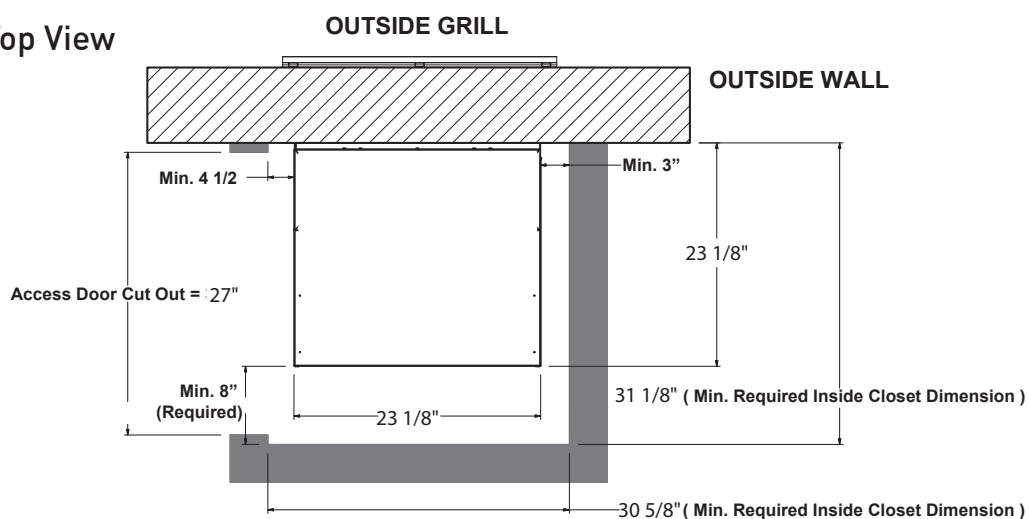

Right Installation-Top View

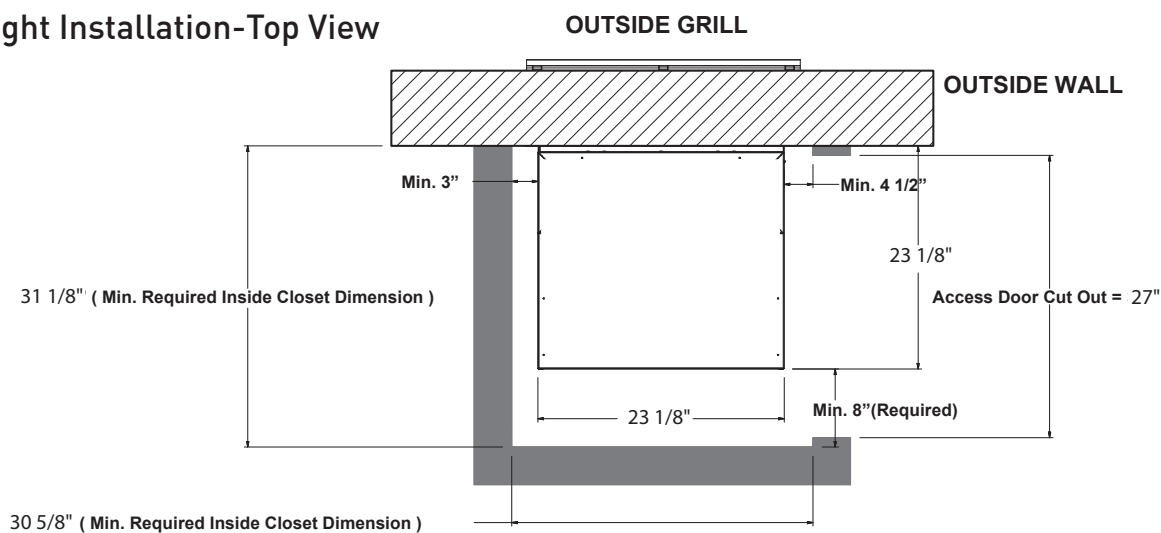


Exterior Wall Opening Dimensions

Exterior Wall Rough Opening Dimensions		
Unit	Width	Height
VPAWP1-*	24 5/8"	30 7/8"


*8 or 14

NOTE: The distance between the rough opening and the finished floor/platform must be 3/4".

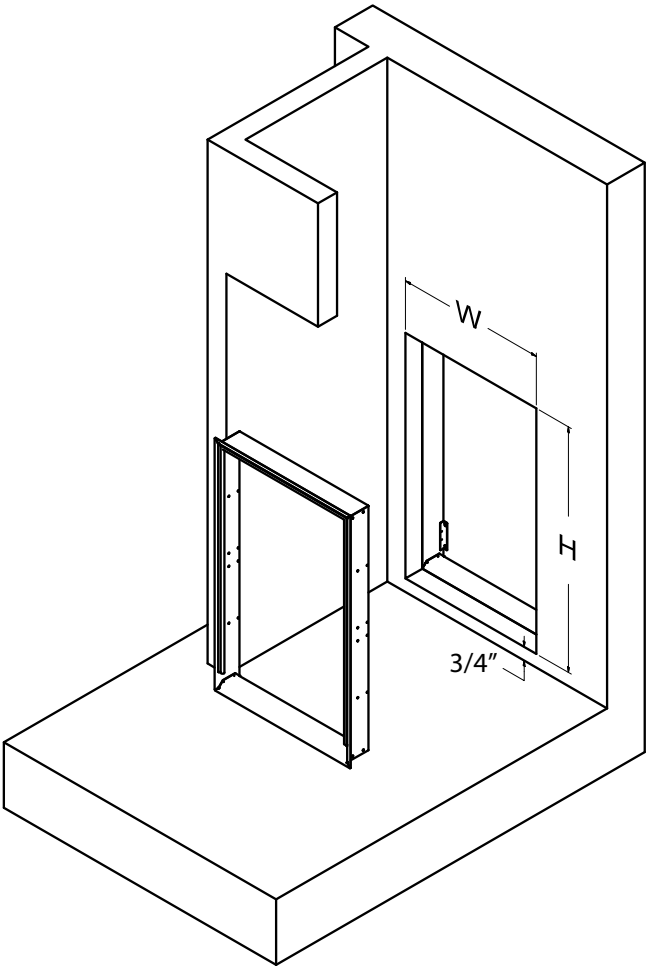

Interior (Closet) Wall Opening Dimensions

Return Air Access Door Wall Cut-Out

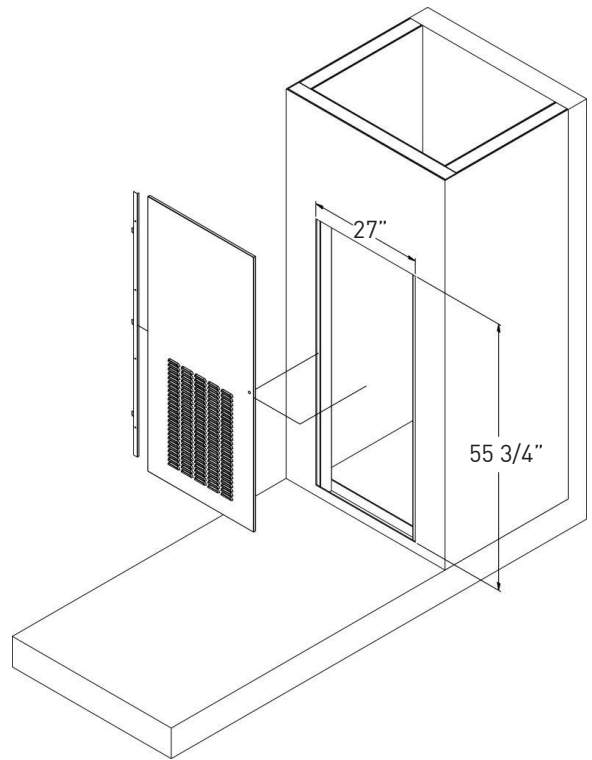

NOTE: To maintain ease of removal and serviceability, if the unit is installed on a platform ensure that the total height of the unit from the floor does not exceed the height of the interior rough opening.


Preliminary Plumbing

Standard (Front Install)


The image to the right shows the installation closet for the standard (Front Install) configuration (where the wall plenum is opposite the service access door).

A drainage system is required, and should provide a "P-trap" to prevent undesirable waste gas from entering into the residential area. This is represented by a vertical standpipe in the image shown (Detail A), but other solutions are possible and are at the discretion of the building designer and contractor.

The near wall has been trimmed away at the door centerline to permit full view of the installation.

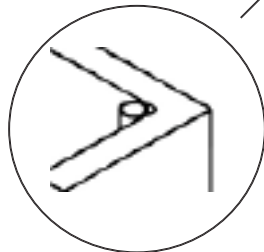


Detail A

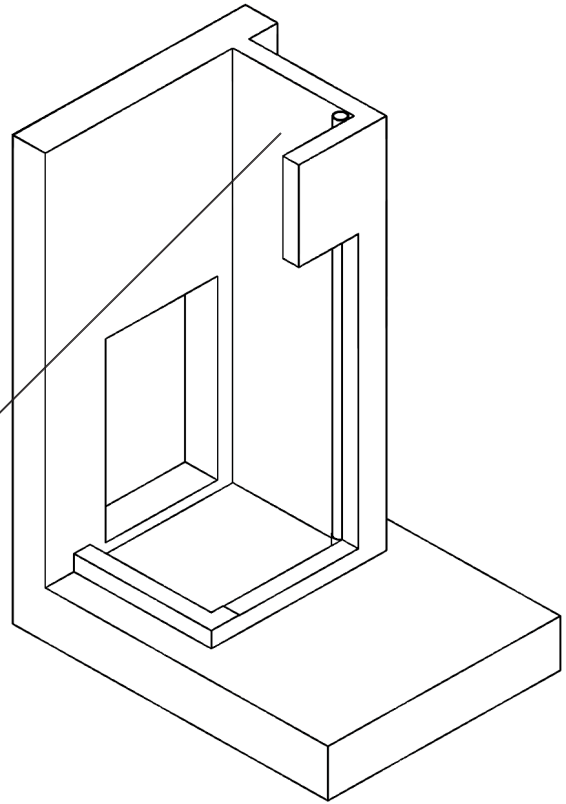

Wall Plenum Installation

Parts included in Plenum kit:

Outside Plenum Half (Part A)
Inside Plenum Half (Part B)

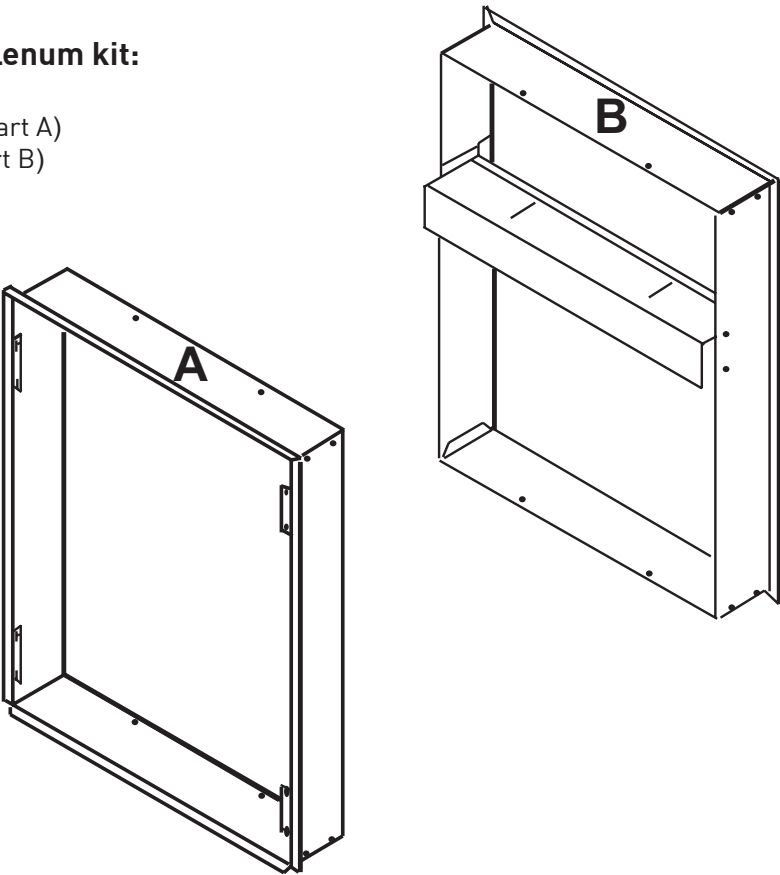


Field Supplied Parts:

Sealant, attachment screws, and flashing are field supplied. Silicone sealant is recommended.


VPAWP1-8 adjusts for walls up to 4" - 8" thick.

VPAWP1-14 adjusts for walls up to 8" - 14" thick

All installations are similar.

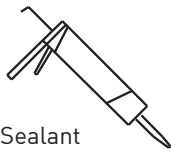

Sealant



Flashing




Shim



1"-3" Screws to attach the plenum assembly to the wall studs

Wall Plenum Installation

Step 1 - Outside Wall Plenum Half

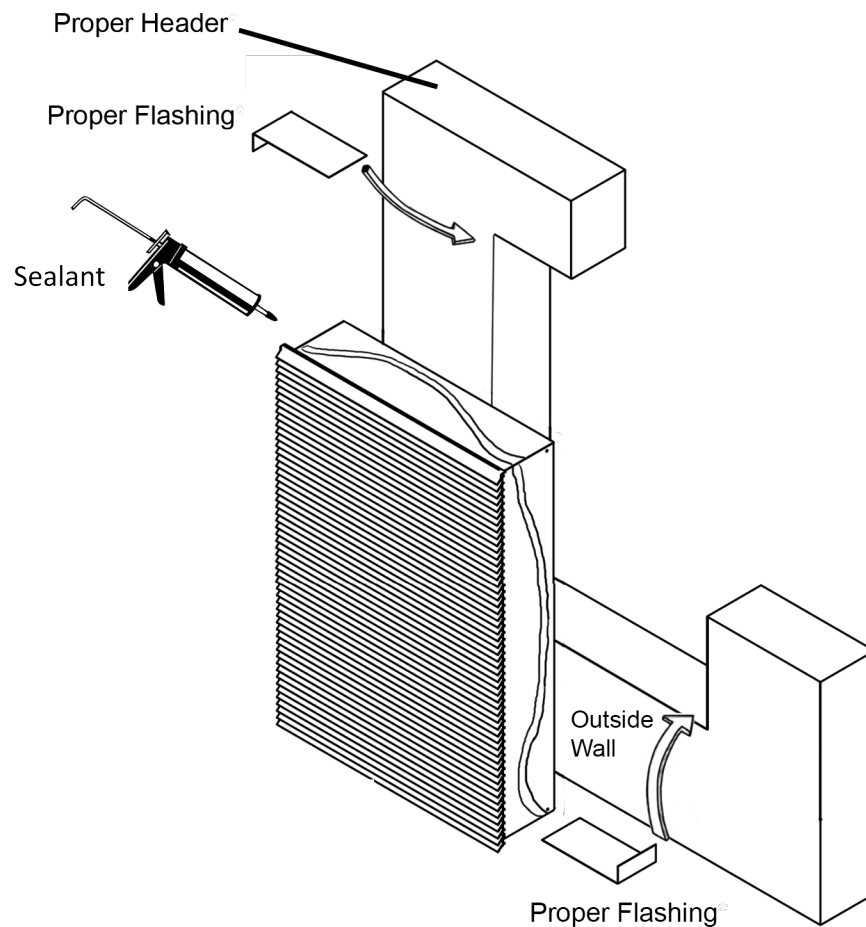


Note: The wall plenum is not designed to carry any structural load. A load bearing header must be built above the rough opening.


- 1) Prepare the rough opening. The rough opening should be lined with metal or wood. The plenum will warp if sealed against concrete or brick.
- 2) Dry fit the outside plenum half into the rough opening and check the fit and level.
- 3) Remove the outside plenum half, flash the rough opening to ensure proper fit and level.
- 4) Pre-installing the exterior louver (VPAL2) as shown above is optional (See Page 18).
- 5) Apply sealant to the outside plenum half and insert into the rough opening to ensure a water-tight seal. Ensure that the outside plenum half is securely attached to the framed opening.

Wall Plenum Installation

Step 2 - Inside Wall Plenum Half

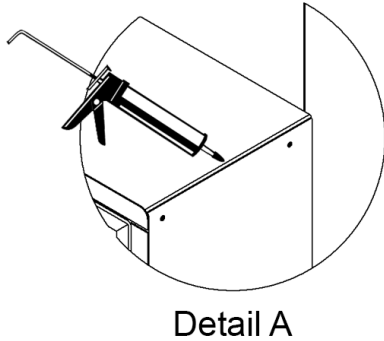



Apply Sealant to all 4 flange corners and unused holes.

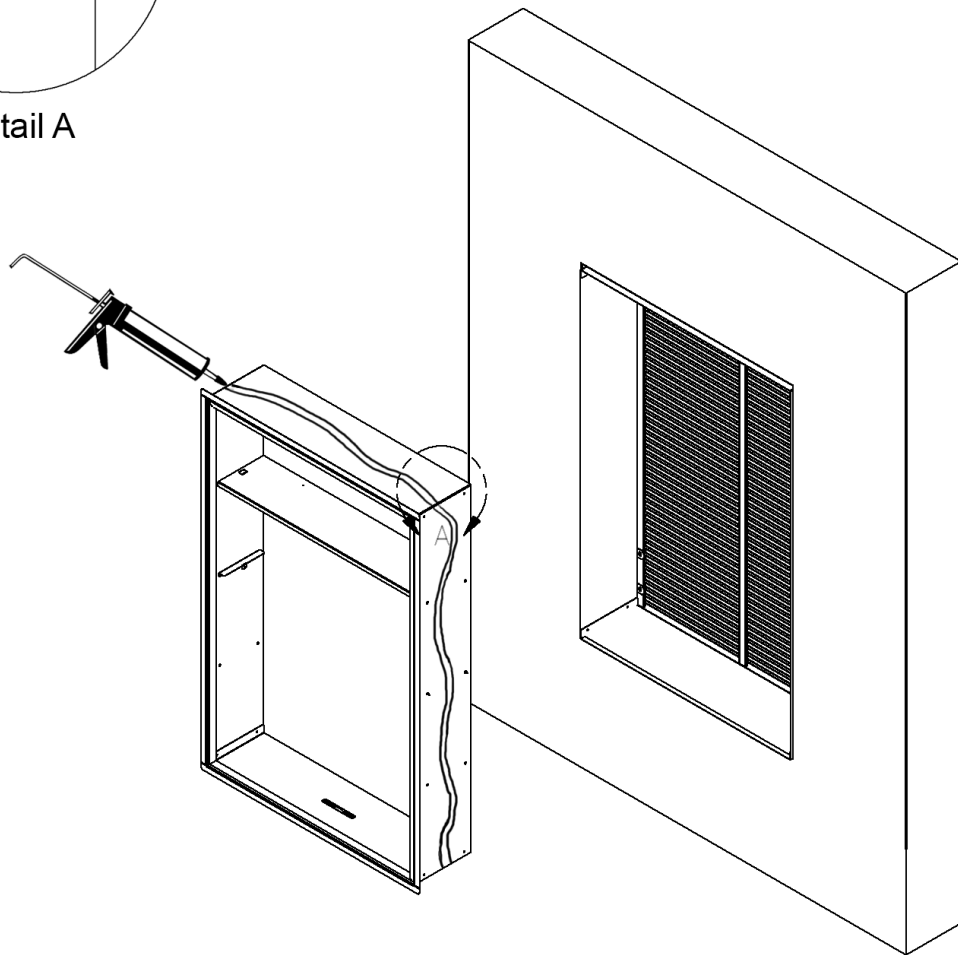

- 1) Apply sealant to all 4 flange corners and unused holes. See Detail A.
- 2) Flash the inside of the rough opening to ensure the proper fit and level.
- 3) Insert inside plenum half (Part B) into Outside Plenum Half (Part A). Ensure that Part A does not back out of the rough opening.
- 4) Remove the inside plenum half.
- 5) Apply sealant to the outside plenum half and insert into the rough opening to ensure a water-tight seal.

Wall Plenum Installation

Step 3 - Inside Wall Plenum (cont.)

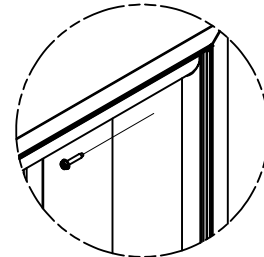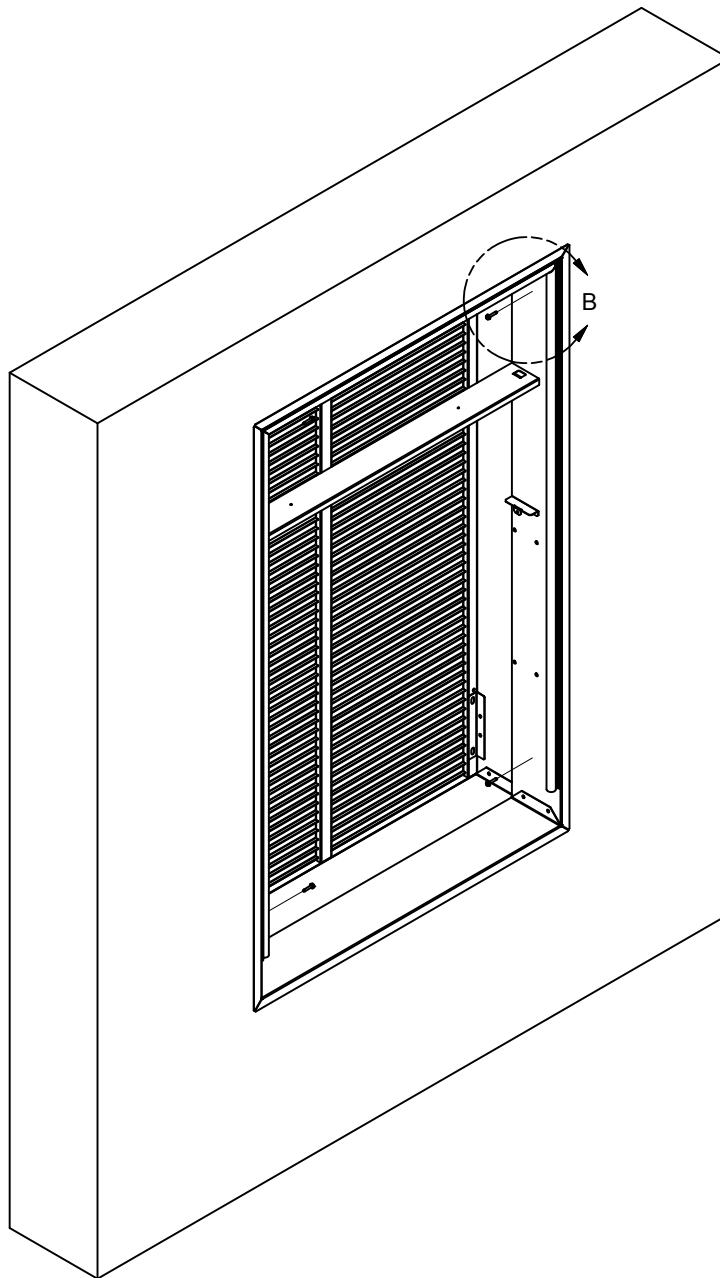


Detail B

Note: Do not place any screws, fasteners, or penetrating holes through the top or bottom of the plenum assembly.

- 1) Drill pilot holes on the interior of the inside plenum half (Part B) as show in Detail B. Pilot holes should be located approximately 4" from the top and bottom of the inside plenum half, on both the left and right sides.
- 2) Install fasteners through each pilot hole. Fastener must pass through both Part A and Part B. If the inside and outside plenum halves do not overlap at fastening point, be certain to drill extra holes where needed to secure both Part A and Part B to the rough opening.


VPDP2 Drain Kit Installation

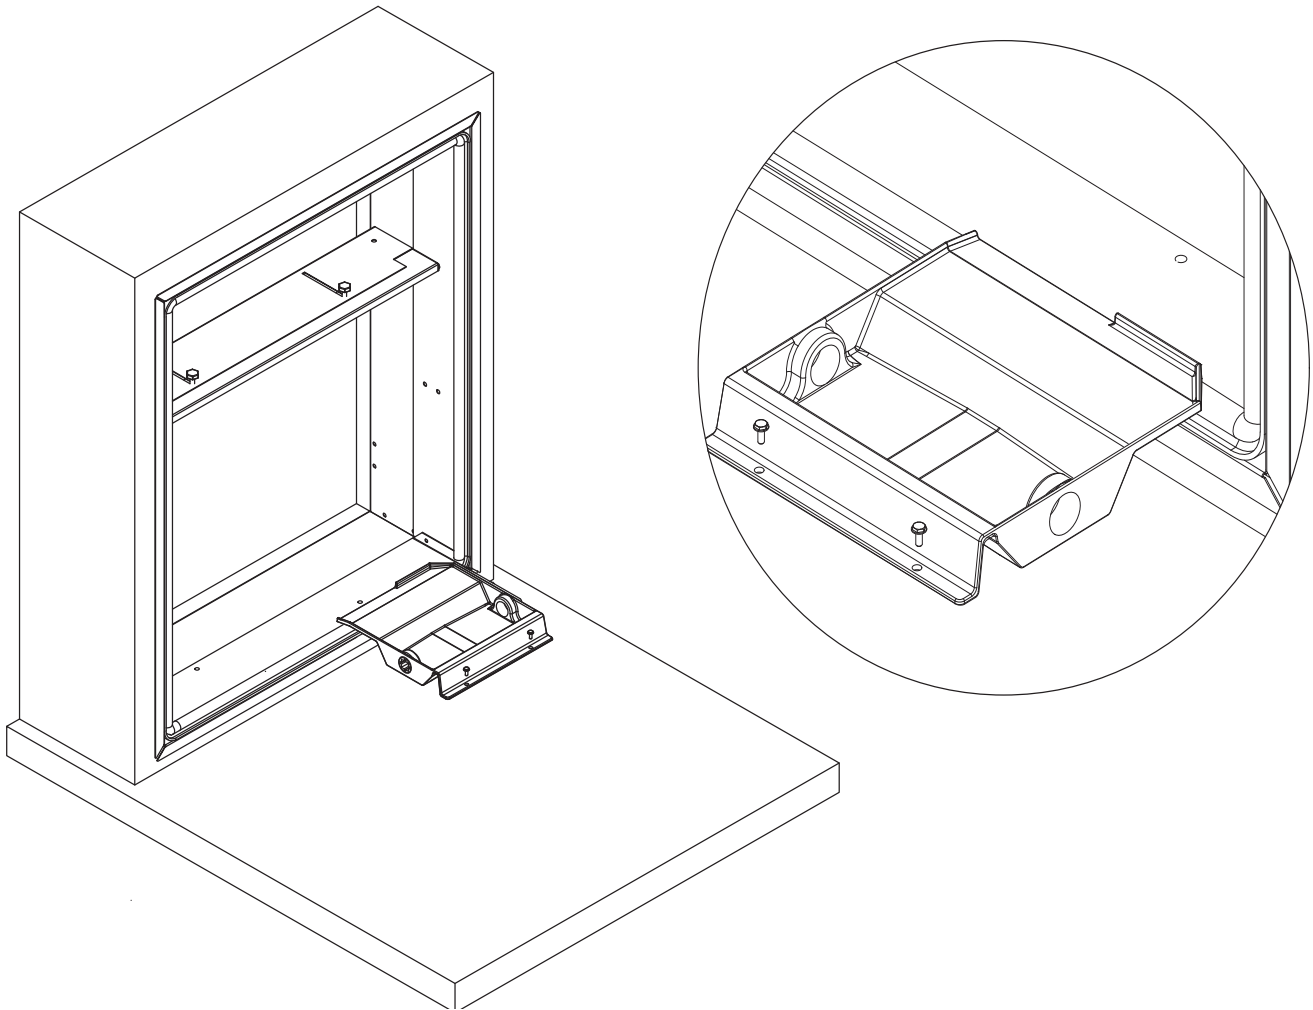

Note: VRP07 models require installation of the VPDP2 drain kit. Please reference the VPDP2 installation manual for more detailed instructions.

- 1) Cut away gasket from the of the base of the inside wall plenum half the length of the drain kit beginning from the bottom right corner.
- 2) Place the VPDP2 where the gasket has been removed as shown above.
- 3) Ensure that the back lip of the VPDP2 is inserted 2" into the exterior opening.
- 4) Secure the VPDP2 to the finished floor or platform.

Final Drain Installation

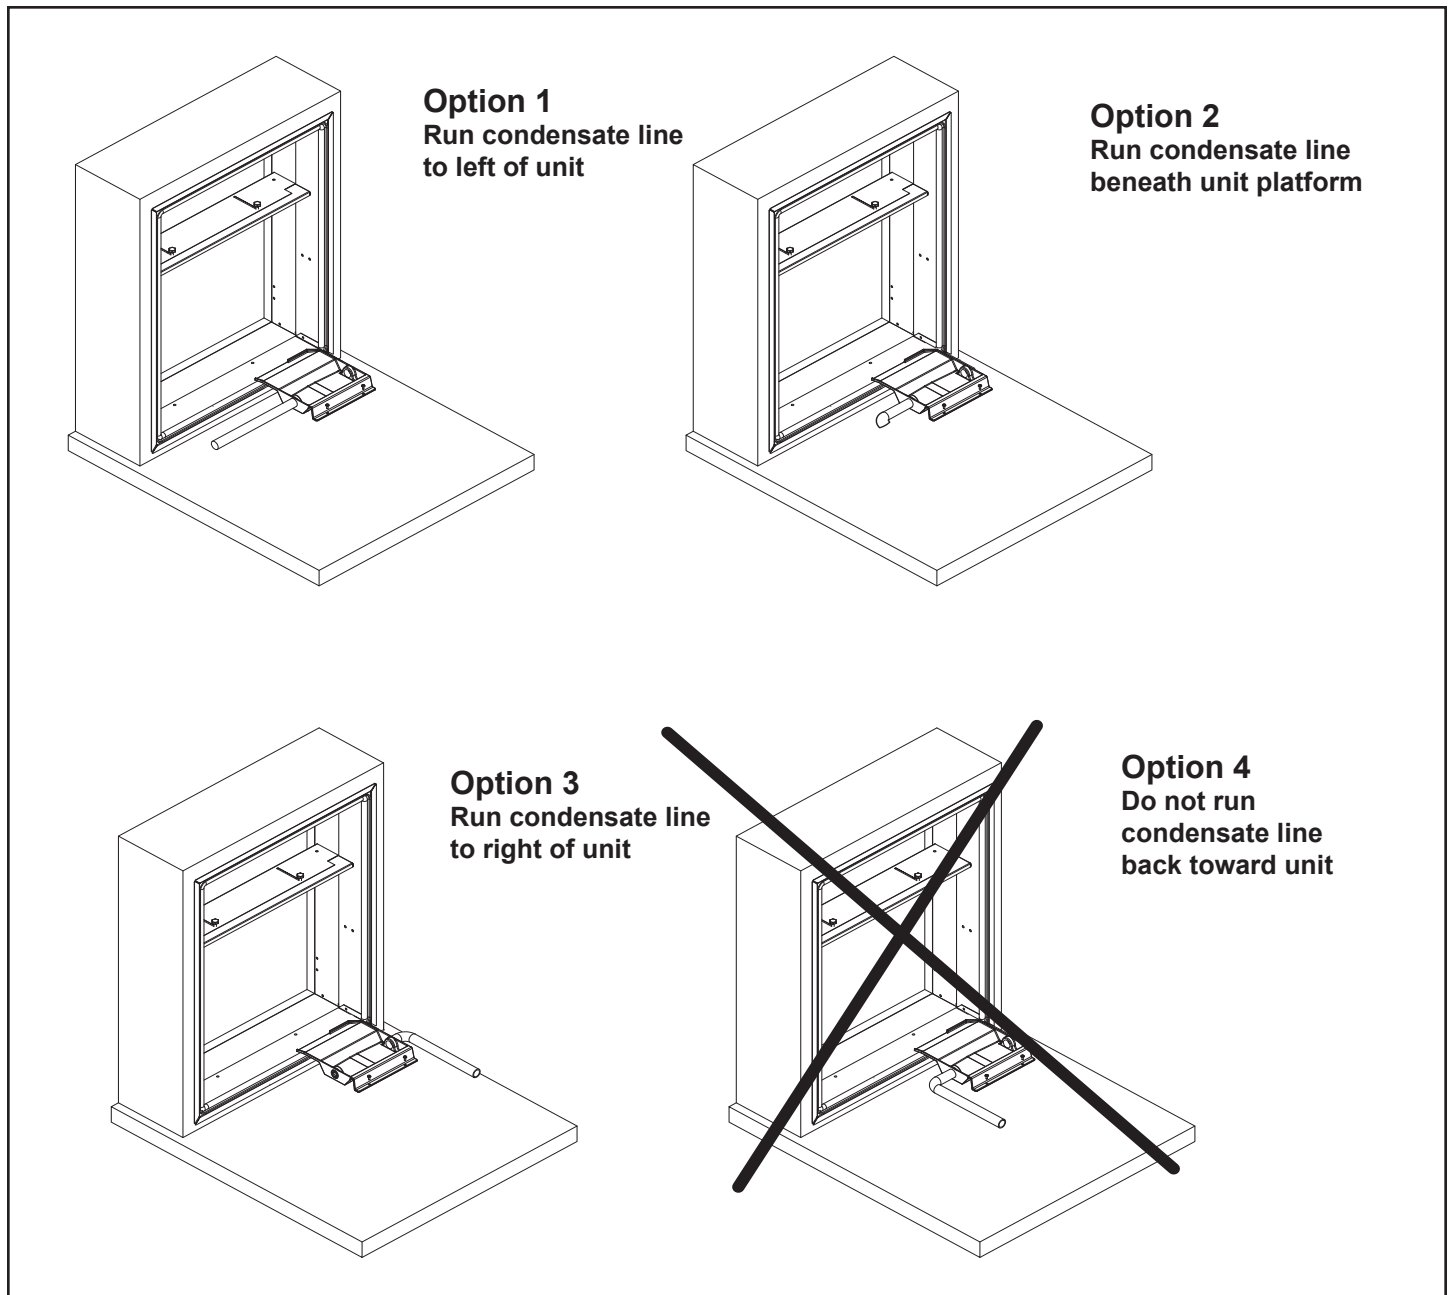


NOTE: Failure to follow the following procedures may result in serious property damage. A field supplied secondary condensate pan may be required. Check with local codes. In case of drainage system blockage, the unit base will allow excess water to flow out of the unit through the plenum and the architectural louver. It is critical to ensure that the drainage path is not blocked or obstructed in any way during installation.

- 1) Ensure the drain pan is inserted 2 inches into the sleeve.
- 2) Attach the drain pan to the closet floor with the appropriate field supplied hardware.
- 3) Use the supplied drain plug to plug the unused port on the VPDP2. Proper sealant must be applied to prevent leaks.
- 4) Use one of the first three options above for routing of the drain line.
- 5) **Hand-tighten all fittings to prevent damage to unit or fittings.**
- 6) Check the system for leaks.

Louver Installation

Installation of the louver PRIOR to Wall Plenum Installation

Attach louver with 8 screws provided

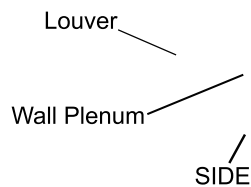

NOTE: Louvers & Drip Ledge orientation is down


Optional Pre-assembled Outside Element (Grill and Plenum)

- 1) Hold the louver up to the outside plenum half (Part A) and line up the louver top with the very top edge of the $\frac{3}{4}$ " flange.
- 2) Line up the wall plenum holes with the threaded holes in the louver and securely tighten fasteners.


Installation of the louver AFTER the installation of wall plenum on elevated floors

From the interior of the utility closet:

- 1) Tie a rope or tether to the architectural louver and the divider in the wall plenum to prevent it from falling if dropped.
- 3) Turn the louver sideways and push the louver out below the divider in the wall plenum.
- 4) Pull the louver back against the wall plenum and align the holes.
- 5) Insert and tighten all eight provided fasteners. When the louver is secured, remove the safety tether.

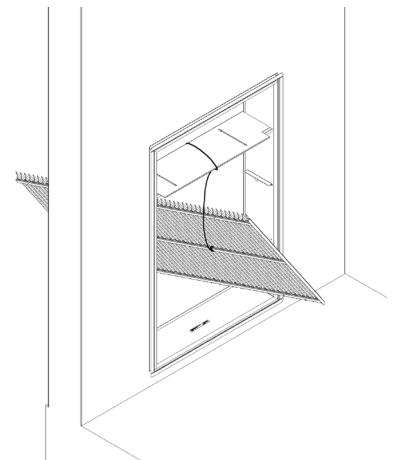

Final Wall Plenum and Architectural Louver Installation

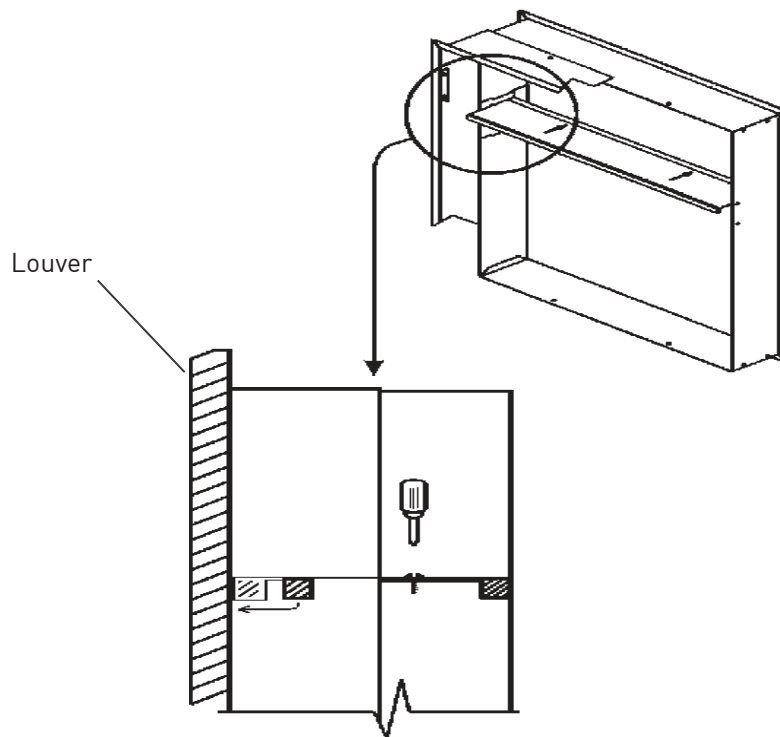

NOTE: Ensure that the weather strip is undamaged and provides a continuous seal around the inner perimeter of the plenum.


Apply silicone grease or other non-petroleum-based lubricants to the weather strip to enhance the sealing capability of the weather strip and ease installation of the air conditioner chassis.

- 1) Loosen the two set screws located on the top side of the divider.
- 2) Slide the top part of the divider toward the outside until the sealing strip makes contact with the exterior louver.
- 3) Tighten the set screws to complete the adjustment.

NOTE: Let all flashing cure completely before installing the chassis.

Unit Installation


**Unit Placement Prior to Installation
(Front-Install Configuration)**

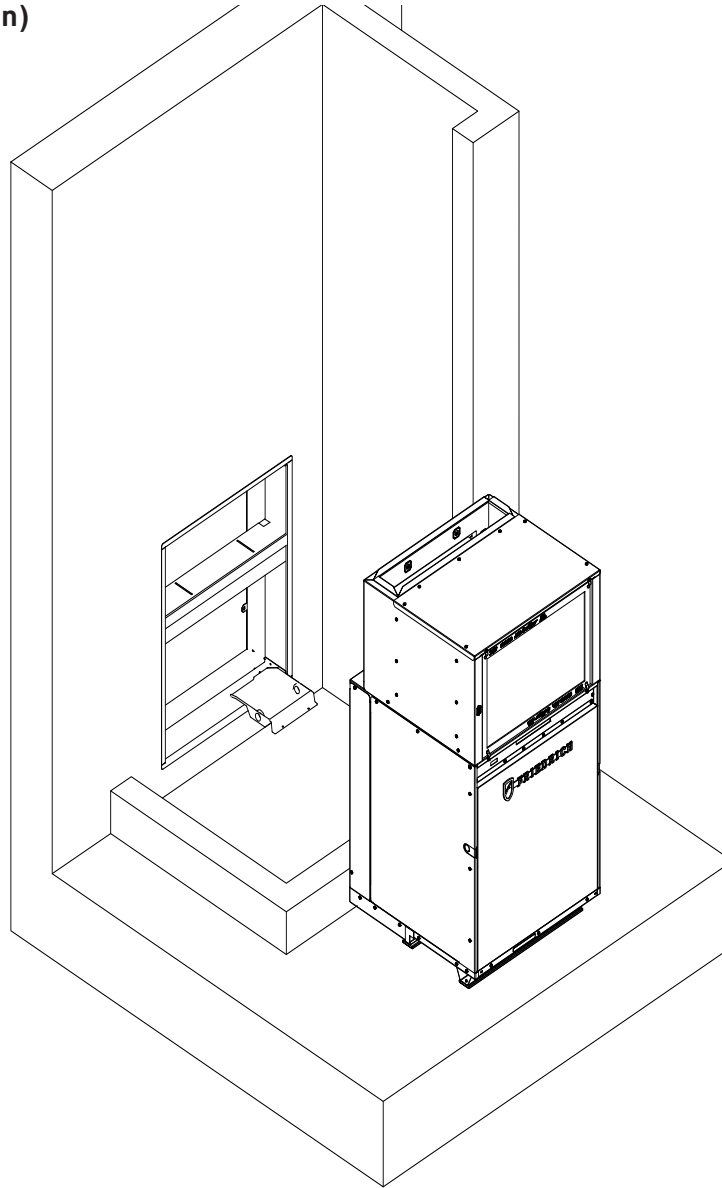

All louver, plenum, rough plumbing, VPDP2 installation, and rough wiring steps must be complete prior to final installation of the air conditioning chassis.


Final Unit Installation Overview

Unit Final Placement - Front Install

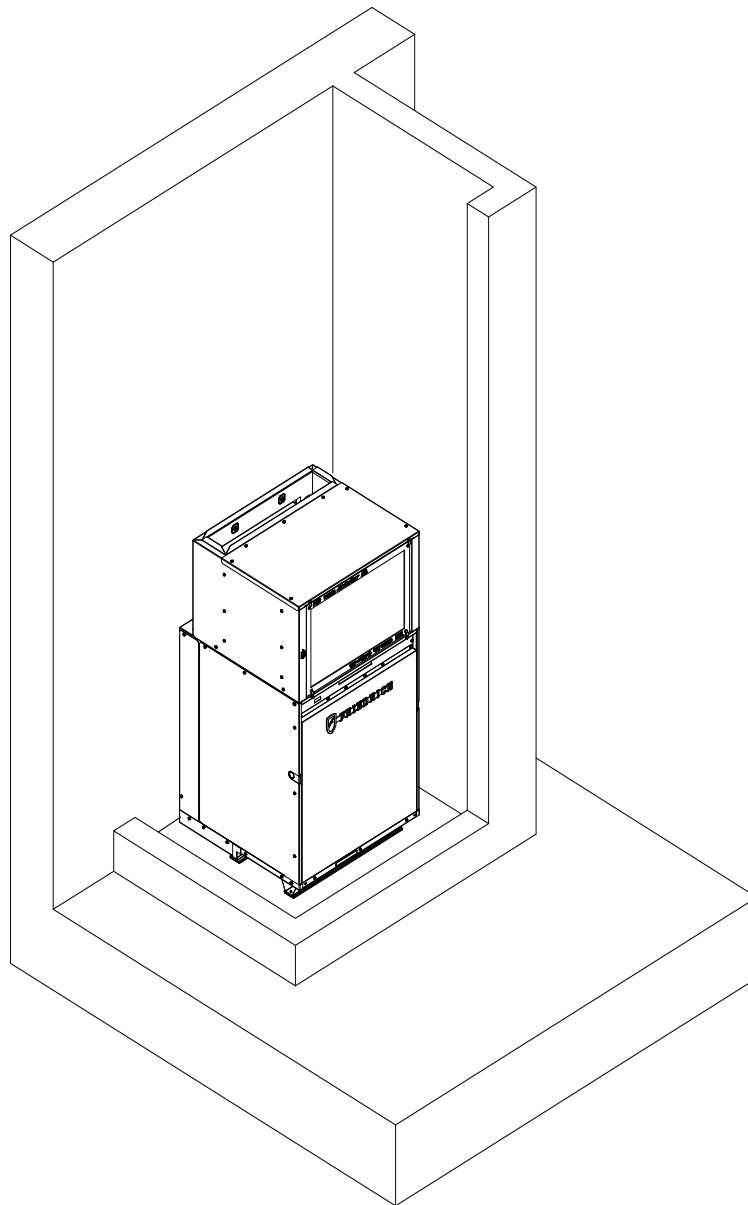

- 1) Ensure that power is off at the junction box feeding power to the air conditioner until all process steps are completed.
- 2) Move the unit from the shipping base and onto the installation site.
- 3) Insert the unit's rear extension into the wall plenum. There should be approximately 2" of penetration of the unit into the wall plenum, resulting in a complete seal all around.
- 4) Identify the appropriate VPDP2 drain port to use and complete plumbing.
- 5) Attach the ductwork to the unit at the supply-air outlet and ensure the seal is air tight (refer to page 27).
- 6) Wire and connect the wall controller (refer to page 28).
- 7) Connect the main power (refer to page 29).

Ductwork Installation

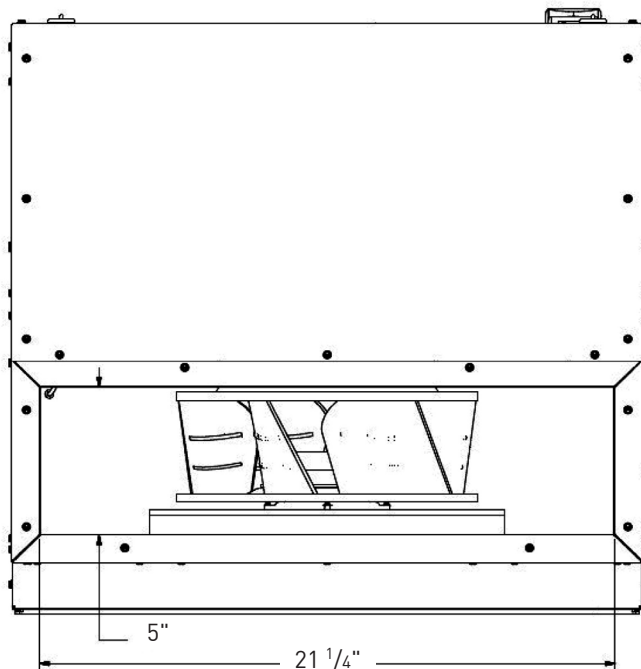


Supply air duct connection is the responsibility of the installer and should be installed per industry best practices.

Sheet metal or duct board may be used for the transition from the discharge to 10" or larger diameter flexible ducting.


Avoid sharp transitions in the ductwork to ensure optimal indoor blower performance.

Allow at least 12" (18" preferred) from the discharge of the unit to the final reduced-size transition to support optimal efficiency of the blower system.


Wall Controller Installation

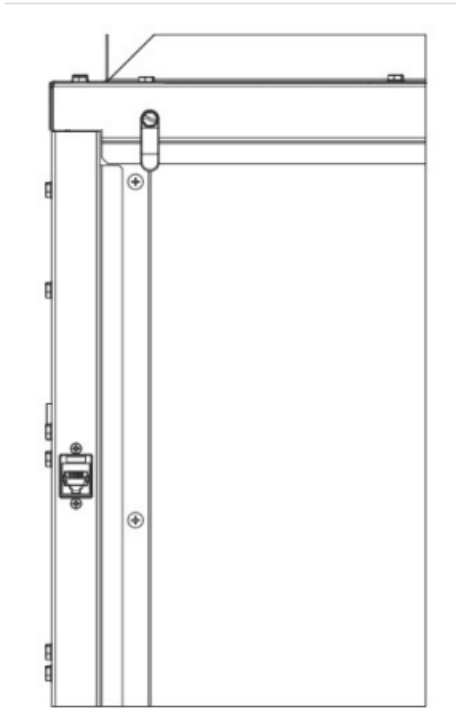

RJ-45 Receptacle on VRP

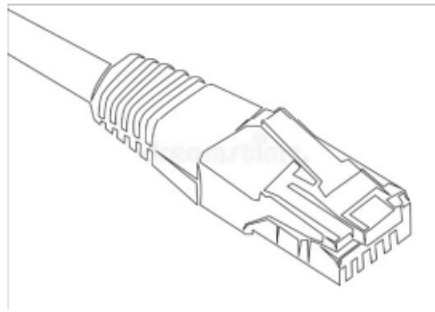

RJ-45 Plug


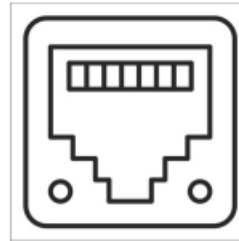


RJ-45 Receptacle

Please check the Instruction and Operational manual of the VRPX*4 Thermostat for detailed installation. All units are equipped with a RJ-45 connection in front to be able to connect to a wired or wireless thermostat.

VRP units are only compatible with Friedrich VRPX*4 controller.




Electrical Installation

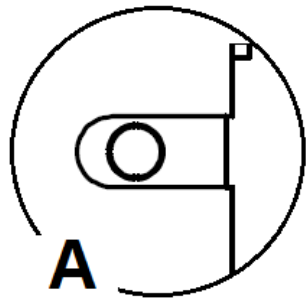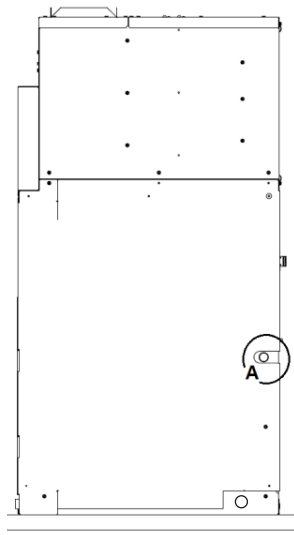

Remove and discard hole knock-out from the side of the unit (Detail A)

Remove the front unit panel to expose the incoming power terminal block (Detail, see below)


NOTE: Replaceable Fuses must be Time Delay/Slow Blow, 3AB 1.0A, 400VDC

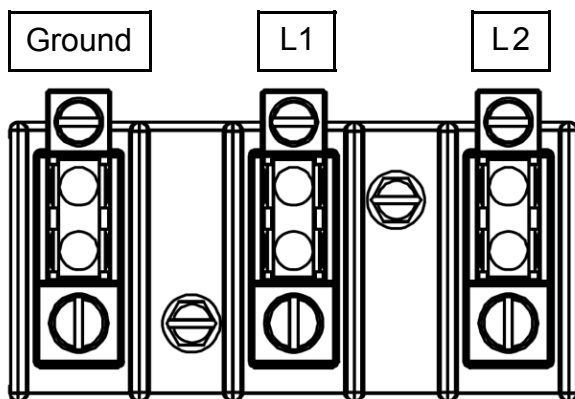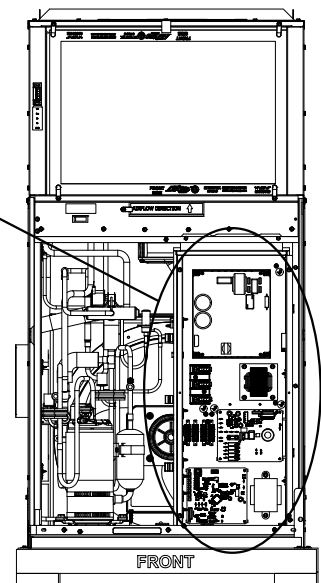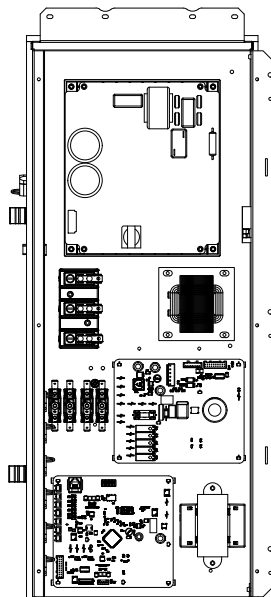


Insert all wires through the punched out hole and fasten wires.

Return Air Door Installation

Option 1

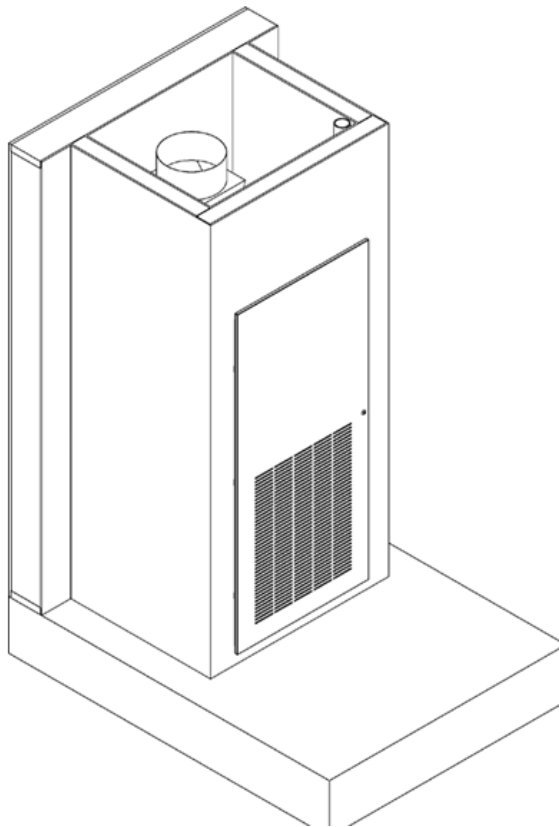

Option 2

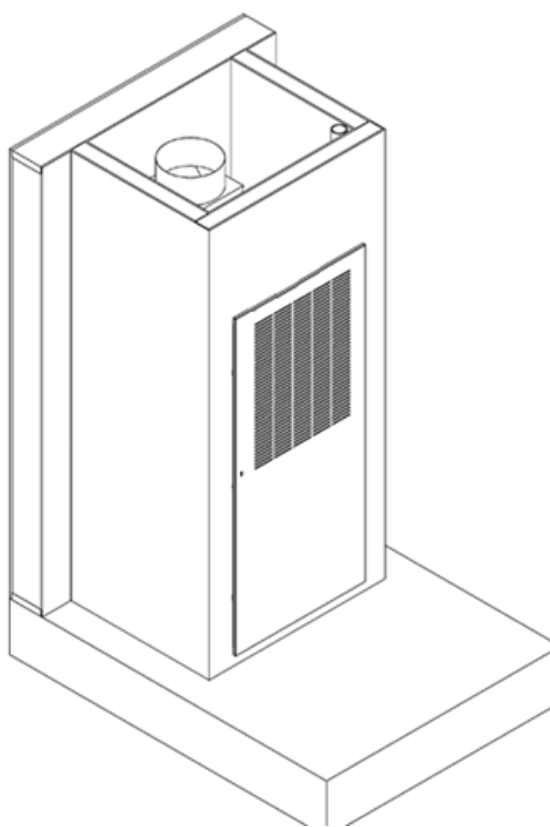



The door panel is supported along one edge by the provided hinge. The opposite edge has a latch which secures the panel to the adjacent framed structure.

The kit contains hinge bracket for mounting the door with the return air openings low (shown in option 1) or high (shown in Option 2) on the door. For increased sound reduction, it is recommended to install the door with the return air opening in the high position.

The door panel has a provision for filter installation on the door. This feature is only usable when the door is installed in the lower orientation (Option 1) and the unit filter has been removed.

The unit should not be operated with both the unit filter and the door filter installed.

FreshAir™ System Set-Up and Operation (Optional Feature)

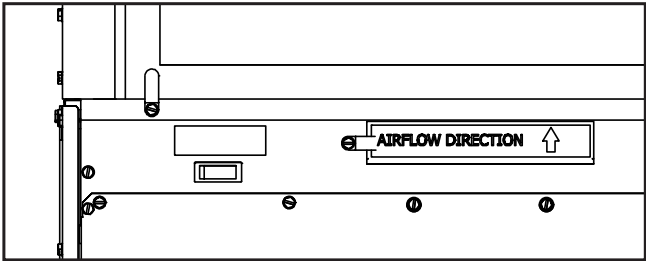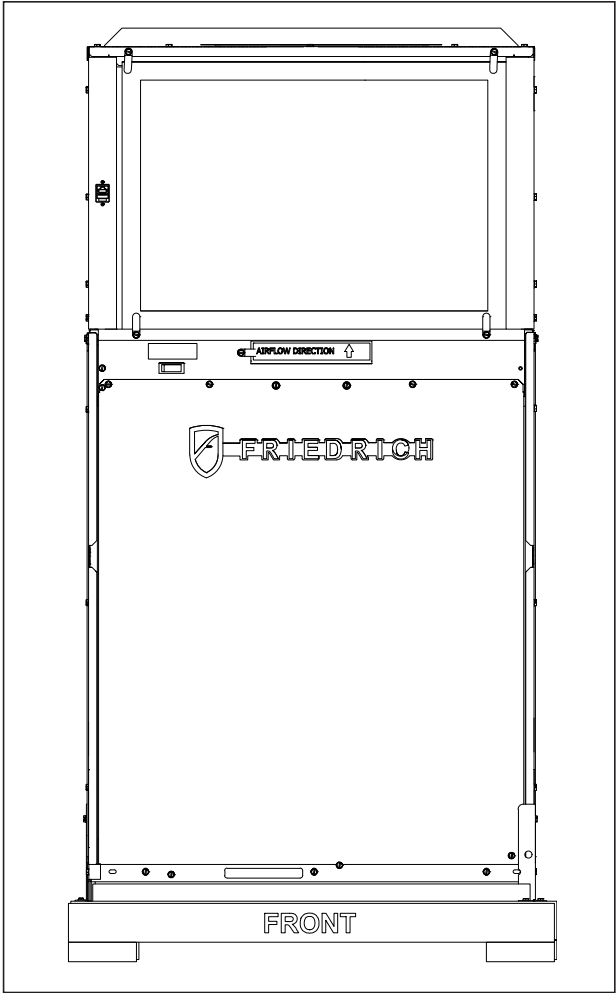

If equipped with the FreshAir™ System, the unit will come with a FreshAir filter.

To engage the FreshAir™ System, flip the switch into the ON position. The unit will engage and dis-engage fresh-air automatically based on settings. The automatic damper will open when there is a call for Fresh Air.



Basepan Heater

Basepan Heat Thermostat

VRP model numbers that end with the 'L' character will come equipped with a basepan heater. The basepan heat engages and disengages automatically based on outdoor ambient and base-pan temperatures.

Final Installation Checklist

⚠ WARNING	
	Electrical Shock Hazard Pull out electrical disconnect on front of the chassis and turn off all power to the unit before servicing. Failure to do so can result in property damage, personal injury and/or death.

- Inspect and ensure that all components and accessories have been installed properly and that they have not been damaged during the installation process.
- Ensure that all installation instructions concerning clearances around the unit have been adhered to.
- Check to ensure that the unit air filter, indoor coil, and outdoor coil are free from any obstructions.
- Ensure that the circuit breaker(s) or fuse(s) and supply circuit wire size have been sized correctly.
- Check the condensate water drain(s) to ensure that they are adequate for the removal of condensate water and that they meet approval of the end user.
- Ensure that the entire installation is in compliance with all applicable national and local codes and ordinances having jurisdiction.
- **ENSURE THAT THE SUPPLY VOLTAGE TO THE UNIT IS WITHIN THE OPERATING RANGE**
- Secure all access panels (i.e. front cover and/or control box), apply power to the unit. The unit commissioning should be done at this time to ensure unit function.

NOTE: Maintaining a log for recording the dates of maintenance and/or service is recommended, and should be suggested to the owner or operator of the equipment.

- Present the owner or operator of the equipment with the Installation & Operation Manual, all accessory installation instructions, and the name, address and telephone number of the Authorized Friedrich Warranty Service Company in the area for future reference if necessary.

WARNING: Do not operate the unit during construction. Doing so can damage the equipment and void warranty.

Chassis Operation

Cooling Operation

The set point must be at least 3°F below room temperature to ensure compressor operation. In the cooling mode, when demand is present, the indoor blower and outdoor fan will operate. The compressor will vary operating speed to maintain desired set point.

Heat Pump Operation

The set point must be greater than 3°F but not greater than 6°F above room temperature to ensure compressor operation. In the heating mode, when demand is present, the indoor blower and outdoor fan will operate. The compressor will vary operating speed to maintain desired set point.

Electric Heat Operation

If the set-point is greater than 5°F - 15°F (depending on outdoor conditions) above room temperature, the heat pump operation will be terminated and the electric heater will be energized to satisfy the heating demand. If heat pump operation is not available due to defrost or error, the electric heater will be used to satisfy heating demand.

FreshAir™

The FreshAir™ System (optional) delivers outside air to the indoor space. The system has a fan that draws outdoor air into the system. The outdoor air leaves the system through a filter and enters the indoor space in front of the indoor conditioning coil. The outdoor air mixes with the return air and is drawn through the indoor conditioning coil. The optional system can be configured to have either a single (F option) outdoor air fan and filter, or dual (D option) outdoor air fans and filters.

The FreshAir™ System uses one 6 x 6 x 1 filter. The filter is accessed through the front of the unit just below the main unit filter. Slide the filter straight out to remove and straight in to replace.

Service

Servicing / Chassis Quick Change Outs

The chassis is designed for quick disconnect and change out. For minor electrical service, the Electrical Access Panel is easily removable once the screws are removed. For major electrical, refrigeration and fan service the chassis may be removed from utility closet.

⚠ WARNING	
	Electrical Shock Hazard Pull out electrical disconnect on front of the chassis and turn off all power to unit before servicing. Failure to do so can result in property damage, personal injury and/or death.

Routine Maintenance Performing Routine Maintenance

With proper maintenance and care, your system will operate economically and dependably. Maintenance can be accomplished easily by referring to the following directions. However, before performing any maintenance, see above stated WARNING.

⚠ CAUTION	
	Cut/Sever Hazard Some edges may be sharp, use gloves or other hand protection when handling unit. Failure to do so can result in minor to moderate personal injury.

Replace Air Filter

A dirty air filter reduces the efficiency of your VRP unit and allows lint and dirt to accumulate on the indoor-air coil. Lint and dirt on the indoor-air coil can damage your unit.

The air filter should be replaced as it becomes dirty. To replace the chassis mounted return air filter:

1. Slide the holders away from the filter.
2. Remove the filter.
3. Install a new disposable filter.
4. The unit filter size is 14" x 20" x 1"

NOTE: DO NOT OPERATE YOUR SYSTEM WITHOUT A FILTER IN PLACE OR BLOCK THE FRONT OF THE UNIT RETURN AIR OPENING.

To Remove the Chassis from the Closet:

- A. Switch the wall controller off.
- B. Disconnect the power coming into the unit from the main breaker panel or the closet mounted disconnect.
- C. Disconnect the electrical connection.
- D. Disconnect the duct work.
- E. Slide the chassis out of the wall plenum.
- F. Slide and slightly lift the chassis out of the utility closet.

Inspect and Clean Indoor Air Coil

Eventually, minor amounts of lint and dirt may pass through the filter and collect on the indoor-air coil. These minor accumulations can be carefully vacuumed away with a brush attachment on a vacuum cleaner. Care must be taken to avoid bending the aluminum fins on the coil. Bent fins should be straightened using a special fin tool available from most HVAC supply depots.

Inspect Outdoor Air (OA) Intake and Exhaust

The unit's outdoor-air intake and outdoor-air exhaust paths must remain clear. Keep it free of all debris, snow, or ice. The OA intake should also be kept free of obstructions. Blocking the OA exhaust or OA intake opening will reduce the efficiency of your unit and could damage it.

Inspect and Clean Condensate Drain

The condensate drain must be routed to a suitable drainage area. Check the unit condensate drain periodically. Keep it free of anything that may block or impede the flow of condensate water. If there is any accumulation of foreign matter in the drain pipe, it should be removed and cleaned. The entire drain line must be protected from freezing.

Electronic Control Error Code Diagnostics and Test Mode

Error Code Diagnostics

The VRP electronic control continuously monitors the unit operation and will store error codes if certain conditions are witnessed. In some cases the unit may take action and shut the unit off until conditions are corrected.

For details on Diagnostics - Refer to the Service Manual.

Warranty Information

Current warranty information can be obtained by referring to
<https://www.friedrich.com/professional/support/product-resources>

VRP[®] Variable Refrigerant Packaged Heat Pump

Innovative | Intelligent | Inverter

